

## Wall Mount Quick Installation Guide for SIP-T29\_T27\_T4X IP Phones

This quick installation guide provides step-by-step instructions for mounting your IP phone to a wall.

Wall mount is available for the following IP phones:

 
- SIP-T48G IP Phone
- SIP-T46G IP Phone
- SIP-T42G IP Phone
- SIP-T41P IP Phone
- SIP-T29G IP Phone
- SIP-T27P IP Phone

The wall mount bracket is required for wall mount installation, which is not included with your IP phone, contact your reseller to purchase it separately.


### Packaging Contents

The following items are included in your package. If you find anything missing, contact your system administrator. (Purchase the proper package according to the IP phone model you own.)

Available for a SIP-T48G IP phone:




Wall Mount Bracket

 


Quick Installation Guide

 Available for a SIP-T46G IP phone:




Wall Mount Bracket

 

Quick Installation Guide

 Available for a SIP-T42G/T41P IP phone:

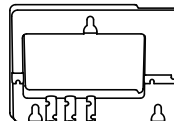


Wall Mount Bracket



Quick Installation Guide

 Available for a SIP-T29G/T27P IP phone:



Wall Mount Bracket



Quick Installation Guide

Wall anchors and applicable tools not included in your package are also required for wall mount installation.


## Adjusting the Hookswitch Tab

 The IP phone is packaged with the hookswitch tab in desk mount position. Before mounting the IP phone to a wall, you must set the hookswitch tab to wall mount position.

### To adjust the hookswitch tab:

1. Pull the hookswitch tab in the handset cradle.
2. Rotate the hookswitch tab 180 degrees.
3. Reinsert the hookswitch tab.

**Adjust the hookswitch tab as shown below(Take a SIP-T46G IP phone as an example):**

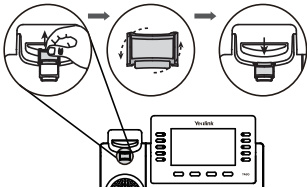


The hookswitch tab has a lip which allows the handset to stay on-hook when the IP phone is mounted vertically.

## Attaching the Wall Mount Bracket

 
### To attach the wall mount bracket:

1. Pull silica gels out of the two wall mount slots. (Only for the SIP-T48G IP Phone)

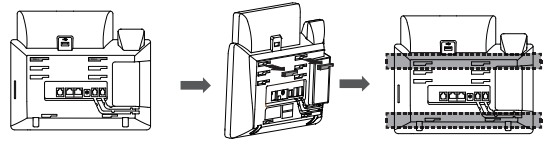


2. Insert the tabs on the wall mount bracket into the slots on the back of IP phone. And then slide the wall mount bracket to right.

 For a SIP-T48G/T29G/T27P IP phone:

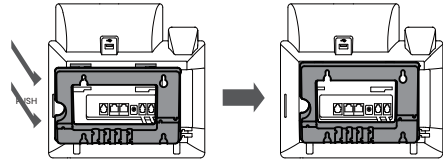

For SIP-T46G/T42G/T41P IP phones:

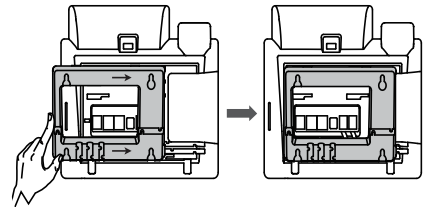 


## Mounting the Wall Mount Bracket


Yealink provides the wall mount drilling template for each IP phone model, which locates and marks the position for mounting the screws (not provided) on the wall, as shown

below:

 
For a SIP-T48G IP phone:

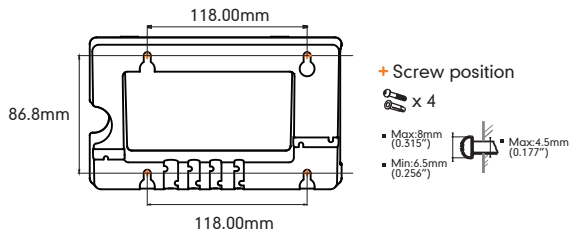


For a SIP-T46G IP phone:

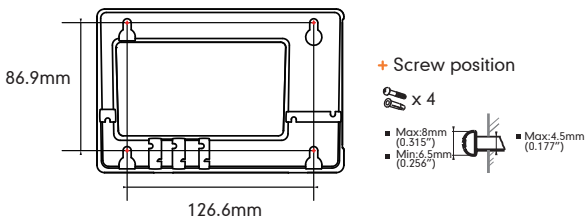 

For SIP-T42G/T41P IP phones:

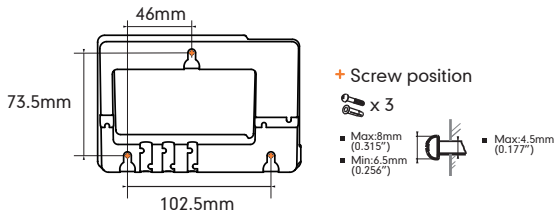 

For SIP-T29G/T27P IP phones:

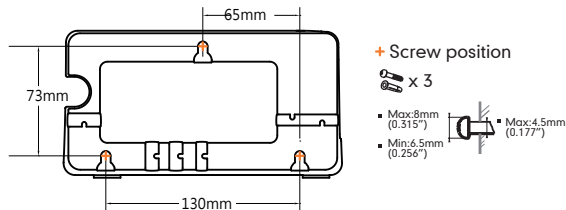 

You can also download the wall mount drilling template online: <http://www.yealink.com/Support.aspx>.

Following the drilling template above, you can mount the IP phone to the wall, as shown below (Take a SIP-T46G IP phone as an example):

