

Grandstream Networks, Inc.

UCM6200 Series IP PBX

User Manual









COPYRIGHT

©2016 Grandstream Networks, Inc. http://www.grandstream.com

All rights reserved. Information in this document is subject to change without notice. Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.

The latest electronic version of this user manual is available for download here:

http://www.grandstream.com/support

Grandstream is a registered trademark and Grandstream logo is trademark of Grandstream Networks, Inc. in the United States, Europe and other countries.

CAUTION

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.

WARNING

Please do not use a different power adaptor with your devices as it may cause damage to the products and void the manufacturer warranty.





GNU GPL INFORMATION

UCM6200 firmware contains third-party software licensed under the GNU General Public License (GPL). Grandstream uses software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license.

Grandstream GNU GPL related source code can be downloaded from Grandstream web site from: http://www.grandstream.com/support/fag/gnu-general-public-license/gnu-gpl-information-download





Table of Content

GNU GPL INFORMATION	2
CHANGE LOG	21
Firmware Version 1.0.13.14	2´
Firmware Version 1.0.12.19	2 ²
Firmware Version 1.0.11.27	22
Firmware Version 1.0.0.7	23
WELCOME	24
PRODUCT OVERVIEW	25
Technical Specifications	25
INSTALLATION	28
Equipment Packaging	28
Connect Your UCM6200	
Connect The UCM6202	28
Connect The UCM6204	29
Connect The UCM6208	30
Safety Compliances	3 ²
Warranty	3
GETTING STARTED	32
Use The LCD Menu	32
Use The LED Indicators	34
Use The Web GUI	
Access Web GUI	32
Setup Wizard	
Web GUI Configurations	
Web GUI Languages	
Save And Apply Changes	
Make Your First Call	38
SYSTEM SETTINGS	39
User Management	
User Information	
Custom Privilege	
User Portal	43





Concurrent Multi-User Login	45
Operation Log	45
Change Password	47
Change binding Email	48
Network Settings	49
Basic Settings	49
DHCP Client List	55
802.1X	56
Static Routes	58
Port Forwarding	60
OpenVPN	62
DDNS Settings	63
Firewall	65
Static Defense	65
Dynamic Defense	68
Fail2ban	69
LDAP Server	70
LDAP Server Configurations	70
LDAP Phonebook	72
LDAP Client Configurations	75
HTTP Server	77
Email settings	78
Email settings	78
Email Templates	79
Email Send Log	80
Time settings	81
Auto time updating	81
Set Time Manually	83
Office Time	83
Holiday	85
NTP Server	87
Recordings Storage	87
Login Settings	89
Google Service Settings Support	90
PROVISIONING	93
Overview	93
Configuration Architecture for End Point Device	93
Auto Provisioning Settings	94
Discovery	97
Global configuration	98





Global policy	98
Global Templates	106
Model configuration	108
Model templates	108
Model Update	110
Device Configuration	111
Create New Device	111
Manage Devices	112
Sample Application	
EXTENSIONS	124
Create new user	124
Create new SIP extension	124
Create New IAX Extension	130
Create New FXS Extension	134
Batch Add Extensions	139
Batch Add SIP Extensions	139
Batch Add IAX Extensions	142
Search and Edit Extension	144
Export Extensions	145
Import Extensions	145
Email to User	153
Multiple Registrations Per Extension	156
SMS message support	
TRUNKS	158
Analog Trunks	158
Analog Trunk Configuration	158
PSTN Detection	161
VOIP Trunks	
Direct Outward Dialing (DOD)	174
SLA STATION	177
Create/Edit SLA Station	177
Sample Configuration	178
CALL ROUTES	180
Outbound Routes	180
Outbound Routes	
Outbound Blacklist	182
Inhound Poutos	100





Inbound Rule Configurations	183
Inbound Route: Prepend Example	185
Inbound Route: Multiple Mode	186
FAX Intelligent Route	
FAX with Two Media	
Blacklist Configurations	188
CONFERENCE BRIDGE	190
Conference Bridge Configurations	
Join A Conference Call	
Invite Other Parties to Join Conference	
During The Conference	
Record Conference	195
CONFERENCE SCHEDULE	196
Conference Schedule Configuration	196
IVR	200
Configure IVR	200
Black/White List in IVR	202
Create Custom Prompt	203
LANGUAGE SETTINGS FOR VOICE PROMPT	204
Download and Install Voice Prompt Package	204
Customize Specific Prompt	206
VOICEMAIL	207
Configure Voicemail	207
Access Voicemail	208
Voicemail Email Settings	209
Configure Voicemail Group	210
RING GROUP	212
Configure Ring Group	212
Remote Extension in Ring Group	214
PAGING AND INTERCOM GROUP	217
Configure Paging/Intercom Group	217
CALL QUEUE	219
Configure Call Output	240





EXTENSION GROUPS	223
Configure Extension Groups	223
Using Extension Groups	223
PICKUP GROUPS	225
Configure Pickup Groups	225
Configure Pickup Feature Code	225
MUSIC ON HOLD	227
FAX/T.38	230
Configure Fax/T.38	230
Sample Configuration to Receive Fax from PSTN Line	231
Sample Configuration for Fax-To-Email	234
ASTERISK MANAGER INTERFACE (RESTRICTED ACCESS)	236
BUSY CAMP-ON	237
FOLLOW ME	238
SPEED DIAL	241
DISA	242
CALLBACK FEATURE	244
BLF AND EVENT LIST	246
BLF	246
Event List	246
DIAL BY NAME	249
Dial by Name Configuration	249
WAKEUP SERVICE	253
WakeUp Service using admin login	253
WakeUp service from User portal	
WakeUp service using feature code	254
ACTIVE CALLS AND MONITOR	255





Active Calls Status	255
Hang Up Active Calls	256
Call Monitor	256
CALL FEATURES	258
Feature Codes	258
Call Recording	263
Call Park	263
Park A Call	263
Retrieve The Parked Call	264
Enable Spy	264
INTERNAL OPTIONS	265
Internal Options/General	265
Internal Options/Custom Prompt	267
Record New Custom Prompt	
Upload Custom Prompt	
Download All Custom Prompt	
Internal Options/Jitter Buffer	
Internal Options/RTP Settings	
Internal Options/Payload	
Internal Options/PIN Groups	
IAX SETTINGS	273
IAX Settings/General	273
IAX Settings/Registration	273
IAX Settings/Static Defense	274
SIP SETTINGS	275
SIP Settings/General	275
SIP Settings/MISC	275
SIP Settings/Session Timer	
SIP Settings/TCP and TLS	
SIP Settings/NAT	
SIP Settings/TOS	277
PORTS CONFIG	280
VALUE-ADDED FEATURES	282
FAX Sending	282
Announcements Center	





283
284
286
200
286
287
288
290
293
293
294
297
297
297
298
299
300
301
302
303
303
303
304
305
306
306
308
310
310
314
315
316
317
318
319
319
319
320





XPERIENCING THE UCM6200 SERIES IP PBX	336
SSH Access	334
Remote Access	334
Network Status	334
Service Check	333
Analog Record Trace	332
Traceroute	331
IP Ping	331
Ethernet Capture	330
Troubleshooting	330
Syslog	329
Reset and Reboot	329
USB/SD Card Files Cleanup	328
Cleaner	326
Cleaner	326
Restore Configuration from Backup File	326
Data Sync	325
Backup/Restore	322
Backup	322
No Local Firmware Servers	322





Table of Tables

Table 1: Technical Specifications	25
Table 2: UCM6200 Equipment Packaging	28
Table 3: LCD Menu Options	33
Table 4: UCM6202/UCM6204 LED Indicators	34
Table 5: UCM6208 LED Indicators	34
Table 6: User Management->Create New User	40
Table 7: Operation Log Column Header	46
Table 8: Change Binding Email option	49
Table 9: UCM6200 Network Settings->Basic Settings	49
Table 10: UCM6200 Network Settings->802.1X	57
Table 11: UCM6200 Network Settings->Static Routes	58
Table 12: UCM6200 Network Settings->Port Forwarding	60
Table 13: UCM6200 Settings -> Network Settings -> Open VPN	62
Table 14: UCM6200 Firewall->Static Defense->Current Service	66
Table 15: Typical Firewall Settings	66
Table 16: Firewall Rule Settings	67
Table 17: UCM6200 Firewall Dynamic Defense	68
Table 18: Fail2Ban Settings	69
Table 19: HTTP Server Settings	77
Table 20: Email Settings	78
Table 21: Email Log	81
Table 22: Time Auto Updating	82
Table 23: Create New Office Time	84
Table 24: Create New Holiday	85
Table 25: Auto Provision Settings	96
Table 26: Global Policy Parameters->Localization	99
Table 27: Global Policy Parameters->Phone Settings	100
Table 28: Global Policy Parameters->Contact List	101
Table 29: Global Policy Parameters->Maintenance	103
Table 30: Global Policy Parameters->Network Settings	104
Table 31: Global Policy Parameters->Customization	105
Table 32: Create New Template	106
Table 33: Create New Model Template	108
Table 34: SIP Extension Configuration Parameters->Basic Settings	125
Table 35: SIP Extension Configuration Parameters->Media	126
Table 36: SIP Extension Configuration Parameters->Features	127
Table 37: SIP Extension Configuration Parameters->Specific Time	130
Table 38: IAX Extension Configuration Parameters->Basic Settings	130





Table 39: IAX Extension Configuration Parameters->Media	131
Table 40: IAX Extension Configuration Parameters->Features	132
Table 41: IAX Extension Configuration Parameters->Specific Time	134
Table 42: FXS Extension Configuration Parameters->Basic Settings	134
Table 43: FXS Extension Configuration Parameters->Media	135
Table 44: FXS Extension Configuration Parameters->Features	136
Table 45: FXS Extension Configuration Parameters->Specific Time	139
Table 46: Batch Add SIP Extension Parameters	139
Table 47: Batch Add IAX Extension Parameters	142
Table 48: SIP extensions Imported File Example	146
Table 49: IAX extensions Imported File Example	149
Table 50: FXS extensions Imported File Example	151
Table 51: Analog Trunk Configuration Parameters	158
Table 52: PSTN Detection for Analog Trunk	163
Table 53: Create New SIP Trunk	165
Table 54: SIP Register Trunk Configuration Parameters	166
Table 55: SIP Peer Trunk Configuration Parameters	169
Table 56: Create New IAX Trunk	172
Table 57: IAX Register Trunk Configuration Parameters	172
Table 58: IAX Peer Trunk Configuration Parameters	173
Table 59: SLA Station Configuration Parameters	177
Table 60: Outbound Route Configuration Parameters	180
Table 61: Inbound Rule Configuration Parameters	183
Table 62: Conference Bridge Configuration Parameters	190
Table 63: Conference Settings	191
Table 64: Conference Caller IVR Menu	194
Table 65: Conference Schedule Parameters	196
Table 66: IVR Configuration Parameters	200
Table 67: Voicemail Settings	207
Table 68: Voicemail IVR Menu	208
Table 69: Voicemail Email Settings	209
Table 70: Voicemail Group Settings	211
Table 71: Ring Group Parameters	212
Table 72: Paging/Intercom Group Configuration Parameters	217
Table 73: Call Queue Configuration Parameters	219
Table 74: FAX/T.38 Settings	230
Table 75: Follow Me Settings	239
Table 76: Follow Me Options	240
Table 77: DISA Settings	242
Table 78: Callback Configuration Parameters	244
Table 79: Event List Settings	246





Table 80: Wakeup Service	253
Table 81: UCM6200 Feature Codes	258
Table 82: Internal Options/General	265
Table 83: Internal Options/Jitter Buffer	269
Table 84: Internal Options/RTP Settings	269
Table 85: Internal Options/Payload	270
Table 86: Internal Options/PIN Group	271
Table 87: IAX Settings/General	273
Table 88: IAX Settings/Registration	273
Table 89: IAX Settings/Static Defense	274
Table 90: SIP Settings/General	275
Table 91: SIP Settings/Misc	275
Table 92: SIP Settings/Session Timer	276
Table 93: SIP Settings/TCP and TLS	276
Table 94: SIP Settings/NAT	277
Table 95: SIP Settings/ToS	277
Table 96: Internal Options/Ports Config	280
Table 97: Announcements Center Settings	283
Table 98: Group Settings	284
Table 99: PMS Supported Features	286
Table 100: PMS Basic Settings	287
Table 101: PMS Wake up Service	289
Table 102: Create New Mini Bar	290
Table 103: Create New Maid	291
Table 104: SugarCRM Settings	293
Table 105: Salesforce Settings	295
Table 106: Trunk Status	297
Table 107: Extension Status	299
Table 108: Agent Status	300
Table 109: Interface Status Indicators	301
Table 110: Parking Lot Status	302
Table 111: System Status->General	303
Table 112: System Status->Network	304
Table 113: CDR Filter Criteria	310
Table 114: CDR Statistics Filter Criteria	317
Table 115: API Configuration Files	318
Table 116: Network Upgrade Configuration	320
Table 117: Data Sync Configuration	325
Table 118: Cleaner Configuration	327
Table 119: USB/SD Card Files Cleanup	328
Table 120: Ethernet Capture	330





Table of Figures

Figure 1: UCM6202 Front View	28
Figure 2: UCM6202 Back View	29
Figure 3: UCM6204 Front View	29
Figure 4: UCM6204 Back View	30
Figure 5: UCM6208 Front View	31
Figure 6: UCM6208 Back View	31
Figure 7: UCM6204 Web GUI Login Page	35
Figure 8: UCM6200 Setup Wizard	36
Figure 9: UCM6200 Web GUI Language	37
Figure 10: User Management Page Display	39
Figure 11: Create New User	40
Figure 12: User Management – New Users	41
Figure 13: General User	42
Figure 14: Create New custom Privilege	43
Figure 15: Edit User Information by Super Admin	44
Figure 16: User Portal Login	44
Figure 17: User Portal Layout	45
Figure 18: Multiple User Operation Error Prompt	45
Figure 19: Operation Logs	46
Figure 20: Operation Logs Filter	47
Figure 21 : Change Password	48
Figure 22: Change Binding Email	48
Figure 23: UCM6200 Network Interface Method: Route	53
Figure 24: UCM6200 Network Interface Method: Switch	54
Figure 25: UCM6200 Network Interface Method: Dual	55
Figure 26: DHCP Client List	55
Figure 27: Add MAC Address Bind	56
Figure 28: Batch Add MAC Address Bind	56
Figure 29: UCM6200 Using 802.1X as Client	57
Figure 30: UCM6200 Using 802.1X EAP-MD5	57
Figure 31: UCM6204 Static Route Sample	59
Figure 32: UCM6204 Static Route Configuration	60
Figure 33: Create New Port Forwarding	61
Figure 34: UCM6200 Port Forwarding Configuration	62
Figure 35: GXP2160 Web Access Using UCM6202 Port Forwarding	62
Figure 36: Open VPN feature on the UCM6200	63
Figure 37: Register Domain Name on noip.com	64
Figure 38: UCM6200 DDNS Setting	64





Figure 39: Using Domain Name to Connect to UCM6200	65
Figure 40: Create New Firewall Rule	67
Figure 41: Configure Dynamic Defense	69
Figure 42: LDAP Server Configurations	71
Figure 43: Default LDAP Phonebook DN	71
Figure 44: Default LDAP Phonebook Attributes	72
Figure 45: LDAP Server->LDAP Phonebook	72
Figure 46: Add LDAP Phonebook	73
Figure 47: Edit LDAP Phonebook	73
Figure 48: Import Phonebook	74
Figure 49: Phonebook CSV File Format	74
Figure 50: LDAP Phonebook After Import	75
Figure 51: Export Selected LDAP Phonebook	75
Figure 52: LDAP Client Configurations	76
Figure 53: GXP2200 LDAP Phonebook Configuration	77
Figure 54: UCM6200 Email Settings	79
Figure 55: Email Templates	79
Figure 56: Conference Schedule Template	80
Figure 57: Email Send log	80
Figure 58: Email Logs	81
Figure 59: Set Time Manually	83
Figure 60: Create New Office Time	84
Figure 61: Settings->Time Settings->Office Time	85
Figure 62: Create New Holiday	85
Figure 63: Settings->Time Settings->Holiday	86
Figure 64: Settings->Recordings Storage	87
Figure 65: Recordings Storage Prompt Information	88
Figure 66: Recording Storage Category	88
Figure 67: Login Timeout Settings	89
Figure 68: Google Service Settings->OAuth2.0 Authentication	90
Figure 69: Google Service->New Project	91
Figure 70: Google Service->Create New Credential	91
Figure 71: Google Service->OAuth2.0 Login	92
Figure 72: Zero Config Configuration Architecture for End Point Device	94
Figure 73: UCM6200 Zero Config	95
Figure 74: Auto Provision Settings	96
Figure 75: Auto Discover	98
Figure 76: Discovered Devices	98
Figure 77: Global Policy Categories	99
Figure 78: Edit Global Template	107
Figure 79: Edit Model Template	109





Figure 80: Template Management	110
Figure 81: Upload Model Template Manually	111
Figure 82: Create New Device	112
Figure 83: Manage Devices	112
Figure 84: Edit Device	113
Figure 85: Edit Customize Device Settings	115
Figure 86: Add P Value in Customize Device Settings	116
Figure 87: Modify Selected Devices - Same Model	117
Figure 88: Modify Selected Devices - Different Models	118
Figure 89: Device List in Zero Config	
Figure 90: Zero Config Sample - Global Policy	120
Figure 91: Zero Config Sample - Device Preview 1	121
Figure 92: Zero Config Sample - Device Preview 2	122
Figure 93: Zero Config Sample - Device Preview 3	123
Figure 94: Create New Device	124
Figure 95: Manage Extensions	144
Figure 96: Export Extensions	145
Figure 97: Import Extensions	146
Figure 98: Import File	146
Figure 99: Import Error	153
Figure 100: Auto Record Empty	153
Figure 101: Email To User - Prompt Information	154
Figure 102: Account Registration Information and QR Code	154
Figure 103: LDAP Client Information and QR Code	155
Figure 104: Multiple Registrations per Extension	156
Figure 105: Extension - Concurrent Registration	156
Figure 106: SMS Message Support	157
Figure 107: UCM6200 FXO Tone Settings	161
Figure 108: UCM6200 PSTN Detection	162
Figure 109: UCM6200 PSTN Detection: Auto Detect	162
Figure 110: UCM6200 PSTN Detection: Semi-Auto Detect	163
Figure 111: DOD extension selection	175
Figure 112: Edit DOD	176
Figure 113: SLA Station	177
Figure 114: Enable SLA Mode for Analog Trunk	178
Figure 115: Analog Trunk with SLA Mode Enabled	178
Figure 116: SLA Example - SLA Station	179
Figure 117: SLA Example - MPK Configuration	179
Figure 118: Country Codes	183
Figure 119: Inbound Route feature: Prepend	186
Figure 120: Inbound Route - Multiple Mode.	187





Figure 121: Blacklist Configuration Parameters	188
Figure 122: Blacklist csv File	189
Figure 123: Conference	192
Figure 124: Conference Invitation From Web GUI	193
Figure 125: Conference Recording	195
Figure 126: Conference Schedule	198
Figure 127: Black/White List	202
Figure 128: Click on Prompt to Create IVR Prompt	203
Figure 129: Language Settings for Voice Prompt	204
Figure 130: Voice Prompt Package List	205
Figure 131: New Voice Prompt Language Added	205
Figure 132: Upload Single Voice Prompt for Entire Language Pack	206
Figure 133: Voicemail Email Settings	210
Figure 134: Voicemail Group	211
Figure 135: Ring Group	212
Figure 136: Ring Group Configuration	214
Figure 137: Sync LDAP Server option	215
Figure 138: Manually Sync LDAP Server	215
Figure 139: Ring Group Remote Extension	216
Figure 140: Paging/Intercom Group	217
Figure 141: Page/Intercom Group Settings	218
Figure 142: Call Queue	219
Figure 143: Agent Login Settings	222
Figure 144: Edit Extension Group	223
Figure 145: Select Extension Group in Outbound Route	224
Figure 146: Edit Pickup Group	225
Figure 147: Edit Pickup Feature Code	226
Figure 148: Music On Hold Default Class	227
Figure 149: Play Custom Prompt	228
Figure 150: Information Prompt	229
Figure 151: Record Custom Prompt	229
Figure 152: Configure Analog Trunk without Fax Detection	232
Figure 153: Configure Extension for Fax Machine: FXS Extension	232
Figure 154: Configure Extension for Fax Machine: Analog Settings	233
Figure 155: Configure Inbound Rule for Fax	233
Figure 156: Create Fax Extension	234
Figure 157: Inbound Route to Fax Extension	235
Figure 158: Create Follow Me	238
Figure 159: Edit Follow Me	238
Figure 160: Configure Speed Dial	241
Figure 161: Speed Dial Destinations	241





Figure	162:	Create New DISA	242
Figure	163:	Create New Event List	247
Figure	164:	Create Dial by Name Group	249
Figure	165:	Configure Extension First Name and Last Name	250
Figure	166:	Dial By Name Group In IVR Key Pressing Events	251
Figure	167:	Dial By Name Group In Inbound Rule	252
Figure	168:	Create New Wakeup Service	253
Figure	169:	Status->PBX Status->Active Calls - Ringing	255
Figure	170:	Status->PBX Status->Active Calls – Call Established	255
Figure	171:	Configure to Monitor an Active Call	256
Figure	172:	Enable/Disable Feature codes	262
Figure	173:	Download Recording File from CDR Page	263
Figure	174:	Download Recording File from Recording Files Page	263
Figure	175:	Record New Custom Prompt	267
Figure	176:	Upload Custom Prompt	268
Figure	177:	Download All Custom Prompt	268
Figure	178:	Create New PIN Group	271
Figure	179:	PIN members	271
Figure	180:	Outbound PIN	272
Figure	181:	CDR Record	272
Figure	182:	FXS Ports Signaling Preference	280
Figure	183:	FXO Ports ACIM Settings	280
Figure	184:	Fax Sending in Web UI	282
Figure	185:	Announcements Center	283
Figure	186:	Announcements Center Group Configuration	284
Figure	187:	Announcements Center Code Configuration	285
Figure	188:	Announcements Center Example	285
Figure	189:	Create New Room	287
Figure	190:	Room Status	288
Figure	191:	Add batch rooms	288
Figure	192:	Create New Wake Up Service	289
Figure	193:	Wakeup Call executed	289
Figure	194:	Create New Mini Bar	290
Figure	195:	Create New Maid	291
Figure	196:	Create New Consumer Goods	291
Figure	197:	Mini Bar	292
Figure	198:	SugarCRM Basic Settings	293
Figure	199:	CRM User Settings	294
Figure	200:	Salesforce Basic Settings	295
Figure	201:	Salesforce User Settings	296
Figure	202:	Status->PBX Status	297





Figure 203: Trunk Status	297
Figure 204: Extension Status	298
Figure 205: Queue Status	300
Figure 206: Conference Room Status	300
Figure 207: UCM6204 Interfaces Status	301
Figure 208: Parking Lot Status	302
Figure 209: System Status->Storage Usage	305
Figure 210: System Status->Resource Usage	305
Figure 211: System Events->Alert Events Lists: Disk Usage	306
Figure 212: System Events->Alert Events Lists: External Disk Usage	307
Figure 213: System Events->Alert Events Lists: Memory Usage	307
Figure 214: System Events->Alert Events Lists: System Reboot	308
Figure 215: System Events->Alert Events Lists: System Crash	308
Figure 216: System Events->Alert Log	309
Figure 217: Filter for Alert Log	309
Figure 218: CDR Filter	310
Figure 219: Call Report	312
Figure 220: Call Report Entry with Audio Recording File	313
Figure 221: Automatic Download Settings	314
Figure 222: CDR Report	315
Figure 223: Detailed CDR Information	315
Figure 224: Downloaded CDR File Sample	315
Figure 225: Downloaded CDR File Sample - Source Channel and Dest Channel 1	315
Figure 226: Downloaded CDR File Sample - Source Channel and Dest Channel 2	316
Figure 227: CDR Statistics	316
Figure 228: CDR->Recording Files	317
Figure 229: Network Upgrade	319
Figure 230: Local Upgrade	320
Figure 231: Upgrading Firmware Files	321
Figure 232: Reboot UCM6200	321
Figure 233: Create New Backup	323
Figure 234: Restore Warning	323
Figure 235: Backup / Restore	324
Figure 236: Local Backup	324
Figure 237: Data Sync	325
Figure 238: Restore UCM6200 from Backup File	326
Figure 239: Cleaner	327
Figure 240: USB/SD Card Files Cleanup	328
Figure 241: Reset and Reboot	329
Figure 242: Ethernet Capture	330
Figure 243: Ping	331





Figure 244: Traceroute	332
Figure 245: Troubleshooting Analog Trunks	332
Figure 246: A Key Dial-up FXO	333
Figure 247: Service Check	333
Figure 248: Network Status	334
Figure 249: SSH Access	335





CHANGE LOG

This section documents significant changes from previous versions of the UCM6200 user manuals. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

Firmware Version 1.0.13.14

- Added extension whitelist/blacklist for IVR dialing [Black/White List in IVR]
- Added ability to include DOD in PPI Header for SIP trunk [Use DOD in PPI]
- Added advanced IPv6 support including IPv6-to-IPv4 SIP calls, IPv6 router, IPv6 iptables/Static defense.
- Added ability to customize PAI Header [PAI Header]
- Added blacklist for outbound calls [Outbound Blacklist]
- Added support to upload/download MOH package from web UI [MUSIC ON HOLD]
- Added support to download custom prompts from web UI [Download All Custom Prompt]
- Added option to configure prompt timeout in Dial By Name [DIAL BY NAME]
- Added description field in ZeroConfig settings to configure Softkey/Line/MPK for GXP series phones [PROVISIONING]
- Improved seamless transfer privilege control [Seamless transfer privilege control]
- Added RTP Keep-alive support [RTP Keep-alive]
- Added Email Send Log [Email Send Log]
- Added support for Mitel simulation/protocol interfaces for PMS module. [PMS]
- Added support for up to 10 failover trunks. [Use Failover Trunk]

Firmware Version 1.0.12.19

- Added support for binding a mobile phone number to extension [Mobile Phone Number]
- Added support opus codec
- Added support call-barging privilege settings based on extensions [Monitor privilege control]
- Added support for Seamless Transfer [Seamless Transfer]
- Added support for Custom Call-Info for Auto Answer [Custom Call-info for Auto Answer]
- Added support for DND Whitelist [Do Not Disturb]
- Add the Field Description on Softkey, Line keys and MPK from Zero Config
- Added support to select interval for numbers on Batch add extension [Extension Interval]
- Added support for Batch Add CallerID Number [CallerID Number]
- Added support for Search Extensions Using CallerID Name
- Added support to Enable/Disable Inbound and Outbound Route [Disable This Route/Disable This Route]
- Added support for Outbound Route Time Condition [Time Condition]
- Added support for IPv6 [IPv6 Address]
- Added Support for MTU configurable [MTU]
- Added support of CRM [CRM]
- Added support for Custom Privilege in User Management [Custom Privilege]





- Added Hotline support for FXS Extension [Hotline]
- Added support for Separate Wakeup Service [WAKEUP SERVICE]
- Added ability to provision phones from different network subnets using zero config [Subnet Whitelist]
- One-key-dial is replaced by Speed Dial to support more than one digit [SPEED DIAL]
- Added Append extension number in the end of DOD [Direct Outward Dialing (DOD)]
- Support Japan CID NTT Detect
- Added support for Ethernet Capture Auto Sync to SFTP Server [Enable SFTP Data Sync]
- Added support for Ethernet Capture saved to External Storage Device [Storage to External Device]
- Added support for Disable Extension Range on the Setup Wizard [Setup Wizard]
- Added more support for Port Forwarding [Port Forwarding]
- Added support for USB/SD Card Files Cleanup [USB/SD Card Files Cleanup]
- Added support for A Key Dial-up FXO [A key Dial-up FXO]
- Added support for ACIM Detect Option for FXO [PORTS CONFIG]
- Added support for some special character on the file name of FW [Upgrading Via Local Upload]
- Added more search criteria of CDR [CDR]
- Added support of "Allow outgoing calls if registration failure" for register trunks [Allow outgoing calls if registration failure]
- Added support for music on hold playback from webGUI [MUSIC ON HOLD]
- Added support to enable delete recording files for user privilege [Consumer]
- Added support disk Inode usage in "Storage Usage" page [Storage Usage]
- Added support foe Ring Group/Call Queue/IVR Display Option for Caller ID [Replace Caller ID | Replace Caller ID]
- Added support for compatibility between backup package from UCM61xx and UCM62xx [Backup/Restore]
- Added support to Detect talking users in conference [CONFERENCE BRIDGE]
- Added Support of Mini Bar for PMS [Mini Bar]

Firmware Version 1.0.11.27

- Added ability to sort extension status on web UI [Extensions]
- Added one click enable / disable feature code [Feature Codes]
- Added Uruguay time zone support [Auto time updating]
- Added distinctive ring tone support [Configure Call Queue] / [Configure IVR] / [Create new SIP extension]
- Added special character support for SFTP client account [Data Sync]
- Added destination directory support for data sync [Data Sync]
- Added ring group music on hold [Configure Ring Group]
- Added CDR multi-email / time condition support [CDR]
- Added blacklist anonymous call block [Blacklist Configurations]
- Added ability to sort selected extension in Eventlist [Event List]
- Added Banned User list for web UI login attempts [Login Settings]
- Added Email template support [Email Templates]
- Added outbound route country restriction
- Added external disk usage alert option [Alert Events List]





- Added range IP input support for dynamic defense white list [Dynamic Defense]
- Added blacklist support for Fail2ban [Fail2ban]
- Added ability to reboot device from zero config page [Discovery]
- Added GXP1628B template for zero config [Model Update]
- Added PIN group support [Internal Options/PIN Groups]
- Added PMS support [PMS]
- Added call queue custom prompt support [Configure Call Queue]
- Added call queue retry time support [Configure Call Queue]
- Added Support for DHCP Client List [DHCP Client List]

Firmware Version 1.0.0.7

This is the initial version.





WELCOME

Thank you for purchasing Grandstream UCM6200 series IP PBX appliance. The UCM6200 series IP PBX appliance is designed to bring enterprise-grade voice, video, data, and mobility features to small-to-medium businesses (SMBs) in an easy-to-manage fashion. This IP PBX series allows businesses to unify multiple communication technologies, such comprehensive voice, video calling, video conferencing, video surveillance, data tools and facility access management onto one common network that that can be managed and/or accessed remotely. The UCM6200 series supports a dual core 1GHz ARM Cortex™ A9 and 400Mhz VINETIC™ A8 processors, 1GB RAM and 4GB flash. The secure and reliable UCM6200 series delivers enterprise-grade features without any licensing fees, costs-per-feature or recurring fees.



Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.

Warning:

Please do not use a different power adaptor with the UCM6200 as it may cause damage to the products and void the manufacturer warranty.

This document is subject to change without notice. The latest electronic version of this user manual is available for download here:

http://www.grandstream.com/support

Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.





PRODUCT OVERVIEW

Technical Specifications

Table 1: Technical Specifications

Interfaces	
Analog Telephone FXS Ports	2 ports (both with lifeline capability in case of power outage)
PSTN Line FXO Ports	UCM6202: 2 portsUCM6204: 4 portsUCM6208: 8 ports
Network Interfaces	• UCM6202/6204/6208: Dual Gigabit RJ45 ports with integrated PoE Plus (IEEE 802.3at-2009)
NAT Router	Yes
Peripheral Ports	USB, SD
LED Indicators	Power/Ready, Network, PSTN Line, USB, SD
LCD Display	128x32 graphic LCD with DOWN and OK button
Reset Switch	Yes
Voice/Video Capabilities	
Voice-over-Packet Capabilities	LEC with NLP Packetized Voice Protocol Unit, 128ms-tail-length carrier grade Line Echo Cancellation, Dynamic Jitter Buffer, Modem detection and auto-switch to G.711
Voice and Fax Codecs	G.711 A-law/U-law, G.722, G.723.1 5.3K/6.3K, G.726, G.729A/B, iLBC (30ms only), GSM, AAL2-G.726-32, ADPCM; T.38
Video Codecs	H.264, H.263, H.263+, VP8
QoS	Layer 3 QoS, Layer 2 QoS
Signaling and Control	
DTMF Methods	In Audio, RFC2833, and SIP INFO
Provisioning Protocol and Plug-and-Play	TFTP/HTTPS, auto-discovery and auto-provisioning of Grandstream IP endpoints via ZeroConfig (DHCP Option 66/multicast SIP SUBSCRIBE/mDNS), eventlist between local and remote trunk
Network Protocols	TCP/UDP/IP, RTP/RTCP, ICMP, ARP, DNS, DDNS, DHCP, NTP, TFTP, SSH, HTTP/HTTPS, PPPoE, SIP (RFC3261), STUN, SRTP, TLS, LADP
Disconnect Methods	Call Progress Tone, Polarity Reversal, Hook Flash Timing, Loop Current Disconnect, Busy Tone
Security	
Media	SRTP, TLS, HTTPS, SSH
Physical	





Universal Power Supply	Output: 12VDC, 1.5AInput: 100-240VAC, 50-60Hz		
Dimensions	 UCM6202/6204: 226mm (L) x 155mm (W) x 34.5mm (H) UCM6208: 440mm (L) x 185mm (W) x 44mm (H) 		
Environmental	 Operating: 32 - 104°F / 0 - 40°C, 10-90% (non-condensing) Storage: 14 - 140°F / -10 - 60°C 		
Mounting	UCM6202/6204: Wall mount and DesktopUCM6208: Rack mount and Desktop		
Weight	 UCM6202: Unit weight 0.51kg, Package weight 0.94kg UCM6204: Unit weight 0.51kg, Package weight 0.94kg UCM6208: Unit weight 2.23kg, Package weight 3.09kg 		
Additional Features			
Multi-language Support	English/Simplified Chinese/Traditional Chinese/Spanish/French/ Portuguese/German/Russian/Italian/Polish/Czech for Web UI; Customizable IVR/voice prompts for English, Chinese, British English, German, Spanish, Greek, French, Italian, Dutch, Polish, Portuguese, Russian, Swedish, Turkish, Hebrew, Arabic; Customizable language pack to support any other languages		
Caller ID	Bellcore/Telcordia, ETSI-FSK, ETSI-DTMF, SIN 227 - BT		
Polarity Reversal/ Wink	Yes, with enable/disable option upon call establishment and termination		
Call Center	Multiple configurable call queues, automatic call distribution (ACD) based on agent skills/availability busy level, in-queue announcement		
Customizable Auto Attendant	up to 5 layers of IVR (Interactive Voice Response)		
Maximum Call Capacity	 UCM6202: Concurrent audio calls up to 30, concurrent WebRTC calls up to 25 UCM6204: Concurrent audio calls up to 45, concurrent WebRTC calls up to 35 UCM6208: Concurrent audio calls up to 100, concurrent WebRTC calls up to 50. Or up to 66% performance if calls are SRTP encrypted 		
SIP Devices	 UCM6202/6204 up to 500 registered SIP endpoints. UCM6208 up to 800 registered SIP endpoints. 		
Conference Bridges	 UCM6202/6204: Up to 3 password-protected conference bridges allowing up to 25 simultaneous PSTN or IP participants UCM6208: Up to 6 password-protected conference bridges allowing up to 32 simultaneous PSTN or IP participants 		
Call Features	Call park, call forward, call transfer, DND, ring/hunt group, paging/intercom and etc		





	•	FCC: Part 15 (CFR 47) Class B, Part 68
	•	CE: EN55022 Class B, EN55024, EN61000-3-2, EN61000-3-3, EN60950-1,
Compliance		TBR21, RoHS
Compliance	•	A-TICK: AS/NZS CISPR 22 Class B, AS/NZS CISPR 24, AS/NZS 60950,
		AS/ACIF S002 and ITU-T K.21 (Basic Level)
	•	UL 60950 (power adapter)



UCM6200 FXS ports lifeline functionality: The UCM6200 FXS interfaces are metallic through to the FXO interfaces. If there is power outage, FXS1 port will fail over to FXO 1 port, FXS 2 port will fail over to FXO 2 port. The user can still access the PSTN

connected with the FXO interfaces from FXS interfaces.





INSTALLATION

Before deploying and configuring the UCM6200 series, the device needs to be properly powered up and connected to network. This section describes detailed information on installation, connection and warranty policy of the UCM6200 series.

Equipment Packaging

Table 2: UCM6200 Equipment Packaging

Main Case	Yes (1)
Power Adaptor	Yes (1)
Ethernet Cable	Yes (1)
Quick Installation Guide	Yes (1)
GPL License	Yes (1)

Connect Your UCM6200

Connect The UCM6202

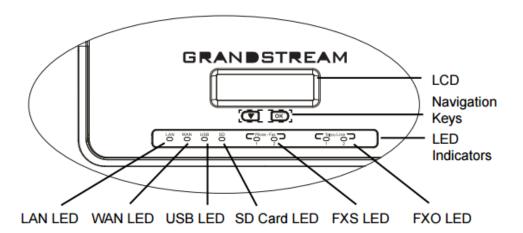


Figure 1: UCM6202 Front View





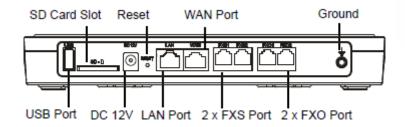


Figure 2: UCM6202 Back View

To set up the UCM6202, follow the steps below:

- 1. Connect one end of an RJ-45 Ethernet cable into the WAN port of the UCM6202.
- 2. Connect the other end of the Ethernet cable into the uplink port of an Ethernet switch/hub.
- 3. Connect the 12V DC power adapter into the 12V DC power jack on the back of the UCM6202. Insert the main plug of the power adapter into a surge-protected power outlet.
- 4. Wait for the UCM6202 to boot up. The LCD in the front will show the device hardware information when the boot process is done.
- 5. Once the UCM6202 is successfully connected to network, the LED indicator for WAN in the front will be in solid green and the LCD shows up the IP address.
- 6. (Optional) Connect PSTN lines from the wall jack to the FXO ports; connect analog lines (phone and Fax) to the FXS ports.

Connect The UCM6204

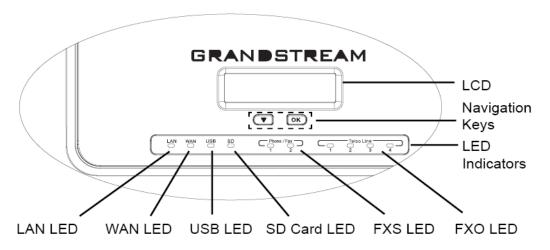


Figure 3: UCM6204 Front View





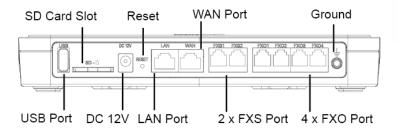


Figure 4: UCM6204 Back View

To set up the UCM6204, follow the steps below:

- 1. Connect one end of an RJ-45 Ethernet cable into the WAN port of the UCM6204.
- 2. Connect the other end of the Ethernet cable into the uplink port of an Ethernet switch/hub.
- 3. Connect the 12V DC power adapter into the 12V DC power jack on the back of the UCM6204. Insert the main plug of the power adapter into a surge-protected power outlet.
- 4. Wait for the UCM6204 to boot up. The LCD in the front will show the device hardware information when the boot process is done.
- 5. Once the UCM6204 is successfully connected to network, the LED indicator for WAN in the front will be in solid green and the LCD shows up the IP address.
- 6. (Optional) Connect PSTN lines from the wall jack to the FXO ports; connect analog lines (phone and Fax) to the FXS ports.

Connect The UCM6208

To set up the UCM6208, follow the steps below:

- 1. Connect one end of an RJ-45 Ethernet cable into the WAN port of the UCM6208.
- 2. Connect the other end of the Ethernet cable into the uplink port of an Ethernet switch/hub.
- 3. Connect the 12V DC power adapter into the 12V DC power jack on the back of the UCM6208. Insert the main plug of the power adapter into a surge-protected power outlet.
- 4. Wait for the UCM6208 to boot up. The LCD in the front will show the device hardware information when the boot process is done.
- 5. Once the UCM6208 is successfully connected to network, the LED indicator for NETWORK in the front will be in solid green and the LCD shows up the IP address.
- 6. (Optional) Connect PSTN lines from the wall jack to the FXO ports; connect analog lines (phone and Fax) to the FXS ports.





 


Figure 5: UCM6208 Front View



Figure 6: UCM6208 Back View

Safety Compliances

The UCM6200 series IP PBX complies with FCC/CE and various safety standards. The UCM6200 power adapter is compliant with the UL standard. Use the universal power adapter provided with the UCM6200 package only. The manufacturer's warranty does not cover damages to the device caused by unsupported power adapters.

Warranty

If the UCM6200 series IP PBX was purchased from a reseller, please contact the company where the device was purchased for replacement, repair or refund. If the device was purchased directly from Grandstream, contact our Technical Support Team for a RMA (Return Materials Authorization) number before the product is returned. Grandstream reserves the right to remedy warranty policy without prior notification.



✓ Warning:

Use the power adapter provided with the UCM6200 series IP PBX. Do not use a different power adapter as this may damage the device. This type of damage is not covered under warranty.





GETTING STARTED

The UCM6200 series provides LCD interface, LED indication and web GUI configuration interface.

- The LCD displays hardware, software and network information. Users could also navigate in the LCD menu for device information and basic network configuration.
- The LED indication at the front of the device provides interface connection and activity status.
- The web GUI gives users access to all the configurations and options for UCM6200 series setup.

This section provides step-by-step instructions on how to use the LCD menu, LED indicators and Web GUI of the UCM6200 series. Once the basic settings are done, users could start making calls from UCM6200 extension registered on a SIP phone as described at the end of this section.

Use The LCD Menu

• Default LCD Display

When the device is powered up, the LCD will show device model (e.g., UCM6204), hardware version (e.g., V1.0A) and IP address. Press "Down" button and the system time will be displayed as well.

Menu Access

Press "OK" button to start browsing menu options. Please see menu options in [

Table 3: LCD Menu Options].

Menu Navigation

Press the "Down" arrow key to browser different menu options. Press the "OK" button to select an entry.

Exit

If "Back" option is available in the menu, select it to go back to the previous menu. For "Device Info" "Network Info" and "Web Info" which do not have "Back" option, simply press the "OK" button to go back to the previous menu. Also, the LCD will display default idle screen after staying in menu option for 15 seconds.

LCD Backlight

The LCD backlight will be on upon key pressing. The backlight will go off after the LCD stays in idle for 30 seconds.





Table 3: LCD Menu Options

View Events	 Critical Events Other Events
Device Info	 Hardware: Hardware version number Software: Software version number P/N: Part number WAN MAC: WAN side MAC address LAN MAC: LAN side MAC address Uptime: System up time
Network Info	 WAN Mode: DHCP, Static IP, or PPPoE WAN IP: IP address WAN Subnet Mask LAN IP: IP address LAN Subnet Mask
Network Menu	 WAN Mode: Select WAN mode as DHCP, Static IP or PPPoE Static Route Reset: Click to reset the static route setting
Factory Menu	 Reboot Factory Reset LCD Test Patterns Press "OK" to start. Then press "Down" button to test different LCD patterns. When done, press "OK" button to exit. Fan Mode Select "Auto" or "On". LED Test Patterns Select "All On" "All Off" or "Blinking" and check LED status. RTC Test Patterns Select "2022-02-22 22:22" or "2011-01-11 11:11" to start the RTC (Real-Time Clock) test pattern. Then check the system time from LCD idle screen by pressing "DOWN" button, or from web GUI->System Status->General page. Reboot the device manually after the RTC test is done. Hardware Testing Select "Test SVIP" to perform SVIP test on the device. This is mainly for





	factory testing purpose which verifies the hardware connection inside the device. The diagnostic result will display in the LCD after the test is done.
Web Info	 Protocol: Web access protocol. HTTP or HTTPS. By default, it's HTTPS Port: Web access port number. By default it's 8089
SSH Switch	 Enable SSH: Enable SSH access. Disable SSH: Disable SSH access. By default the SSH access is disabled.

Use The LED Indicators

The UCM6200 has LED indicators in the front to display connection status. The following table shows the status definitions.

Table 4: UCM6202/UCM6204 LED Indicators


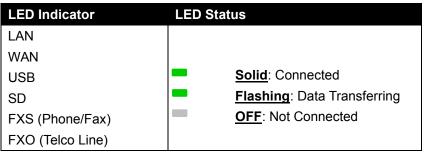


Table 5: UCM6208 LED Indicators

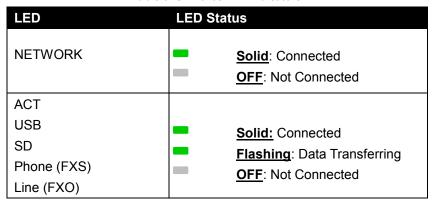

Use The Web GUI

Access Web GUI

The UCM6200 embedded Web server responds to HTTP/HTTPS GET/POST requests. Embedded HTML pages allow users to configure the device through a Web browser such as Microsoft IE, Mozilla Firefox, Google Chrome and etc.





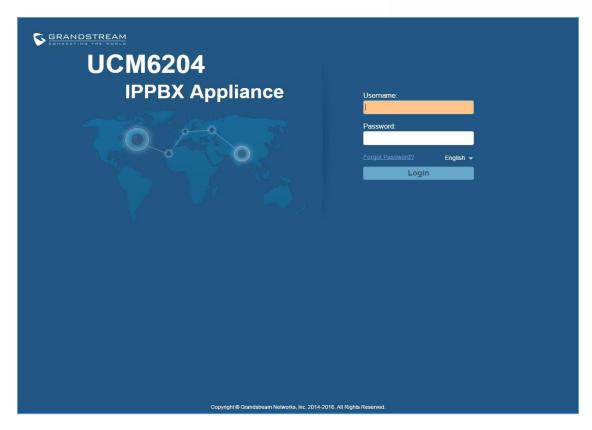


Figure 7: UCM6204 Web GUI Login Page

To access the Web GUI:

- 1. Connect the computer to the same network as the UCM6200.
- 2. Ensure the device is properly powered up and shows its IP address on the LCD.
- 3. Open a Web browser on the computer and enter the web GUI URL in the following format:

http(s)://IP-Address:Port

where the *IP-Address* is the IP address displayed on the UCM6200 LCD.

By default, the protocol is HTTPS and the Port number is 8089.

For example, if the LCD shows 192.168.40.167, please enter the following in your web browser:

https://192.168.40.167:8089

4. Enter the administrator's login and password to access the Web Configuration Menu. The default administrator's username and password is "admin" and "admin". It is highly recommended to change the default password after login for the first time.







By default, the UCM6200 has "Redirect From Port 80" enabled. Therefore, if users type in the UCM6200 IP address in the web browser, the web page will be automatically redirected to the page using HTTPS and port 8089. For example, if the LCD shows 192.168.40.167, please enter 192.168.40.167 in your web browser and the web page will be redirected to:

https://192.168.40.167:8089

The option "Redirect From Port 80" can be configured under the UCM6200 web GUI->Settings->HTTP Server.

Setup Wizard

When the user logs in the UCM6200 web UI for the first time, a setup wizard will guide the user to set up basic configuration. Configurations in setup wizard includes: **Time zone**, **Change password**, **Network settings**, **Extensions**, **Trunk and routes**.

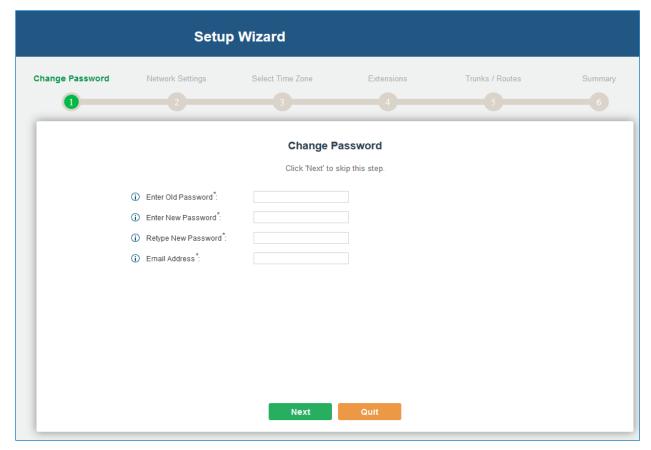


Figure 8: UCM6200 Setup Wizard

Users can disable the Extension Range during configuration on the Extensions.





During the wizard, the user can quit the setup wizard at any time to start over with manual configuration. At the last step of the wizard, the user will be provided with summary for review, before the configuration is loaded. Once the setup is completed, the system is ready to go.

Web GUI Configurations

There are four main sections in the Web GUI for users to view the PBX status, configure and manage the PBX.

- Status: Displays PBX status, System Status, System Events and CDR.
- **PBX:** To configure extensions, trunks, call routes, zero config for auto provisioning, call features, internal options, IAX settings and SIP settings.
- Settings: To configure user management, network settings, firewall settings, change password, LDAP Server, HTTP Server, Email Settings, Time Settings, NTP server, recording storage and login timeout.
- **Maintenance**: To perform firmware upgrade, backup configurations, cleaner setup, reset/reboot, syslog setup and troubleshooting.

Web GUI Languages

Currently the UCM6200 series web GUI supports *English*, *Simplified Chinese*, *Traditional Chinese*, *Spanish*, *French*, *Portuguese*, *Russian*, *Italian*, *Polish*, *German and etc*.

Users can select the displayed language in web GUI login page, or at the upper right of the web GUI after logging in.





Figure 9: UCM6200 Web GUI Language





Save And Apply Changes

Click on "Save" button after configuring the web GUI options in one page. After saving all the changes, make sure click on "Apply Changes" button on the upper right of the web page to submit all the changes. If the change requires reboot to take effect, a prompted message will pop up for you to reboot the device.

Make Your First Call

Power up the UCM6200 and your SIP end point phone. Connect both devices to the network. Then follow the steps below to make your first call.

- 1. Log in the UCM6200 web GUI, go to PBX->Basic/Call Routes->Extensions.
- 2. Click on "Create New SIP Extension" to create a new extension. You will need User ID, Password and Voicemail Password information to register and use the extension later.
- 3. Register the extension on your phone with the SIP User ID, SIP server and SIP Password information. The SIP server address is the UCM6200 IP address.
- 4. When your phone is registered with the extension, dial *97 to access the voicemail box. Enter the Voicemail Password once you hear "Password" voice prompt.
- 5. Once successfully logged in to the voicemail, you will be prompted with the Voice Mail Main menu.
- 6. You are successfully connected to the PBX system now.





SYSTEM SETTINGS

This section explains configurations for system-wide parameters on the UCM6200. System settings are under "Settings" tag on UCM6200 web GUI. System settings include User Management, Network Settings, Firewall, Change Password, LDAP server, HTTP server, Email settings, Time Settings, NTP Server, Recordings Storage and Login Timeout settings.

User Management

User management is on web GUI->Settings->User Management page. User could create multiple accounts for different administrators to log in the UCM6200 web GUI. Additionally, the system will automatically create user accounts along with creating new extensions for extension users to login to the web UI using their extension number and password. All existing user accounts for web UI login will be displayed on User Management page as shown in the following figure.

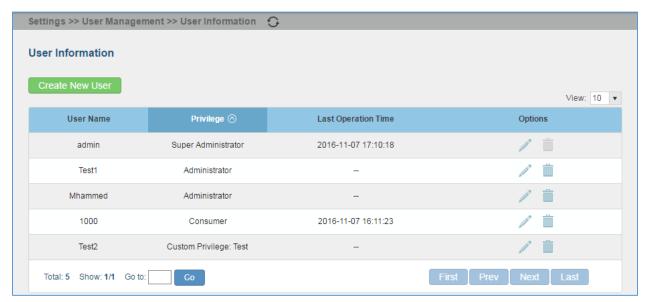


Figure 10: User Management Page Display

User Information

When logged in as Super Admin, click on to create a new account for web UI user. The following dialog will prompt. Configure the parameters as shown in below table.





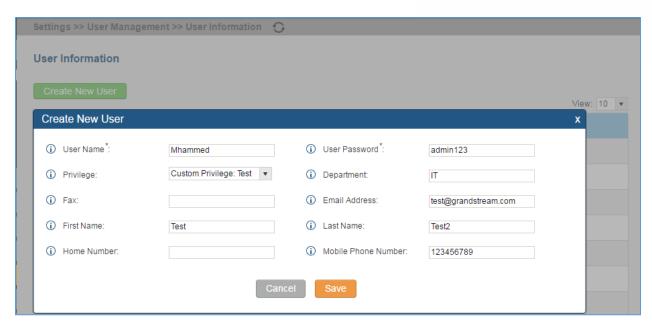


Figure 11: Create New User

Table 6: User Management->Create New User

User Name	Configure a username to identify the user which will be required in web UI login. Letters, digits and underscore are allowed in the user name.
User Password	Configure a password for this user which will be required in web UI login. Letters, digits and underscore are allowed.
Privilege	This is the role of the web UI user. Currently only "Admin" is supported when Super Admin creates a new user.
Department	Enter the necessary information to keep a record for this user.
Fax	
Email Address	
First Name	
Last Name	
Home Number	
Phone Number	

Once created, the Super Admin can edit the users by clicking on \checkmark or delete the user by clicking on \blacksquare .







Figure 12: User Management - New Users

Custom Privilege

Four privilege levels are supported:

• Super Administrator

- This is the highest privilege. Super Admin can access all pages on UCM6200 web GUI, change configuration for all options and execute all the operations.
- Super Admin can create, edit and delete one or more users with "Admin" privilege
- Super Admin can edit and delete one or more users with "Consumer" privilege
- Super Admin can view operation logs generated by all users.
- By default, the user account "admin" is configured with "Super Admin" privilege and it's the only user with "Super Admin" privilege. The User Name and Privilege level cannot be changed or deleted.
- Super Admin could change its own login password on web UI->Settings->Change Password page.
- Super Admin could view operations done by all the users in web UI->Settings->User Management->Operation Log

Administrator

- Users with "Admin" privilege can only be created by "Super Admin" user.
- "Admin" privilege users are not allowed to access the following pages:

Maintenance->Upgrade

Maintenance->Backup

Maintenance->Cleaner

Maintenance->Reset/Reboot

Settings->User Management->Operation Log

- "Admin" privilege users cannot create new users for login.

Consumer

- A user account for web UI login is created automatically by the system when a new extension is created.
- The user could log in the web UI with the extension number and password to access user information, extension configuration and CDR of that extension.





- The SuperAdmin user can click on on the "General_User" in order to enable/disable the custom privilege of deleting their own recording files in user level login.



Figure 13: General User

• Custom Privilege

The Super Admin user can create users with different privileges. 8 modules are available for privilege customization.

- CDR API
- CDR Records
- Conference
- Conference Schedule
- System Events
- PBX Status
- System Status
- Active Calls





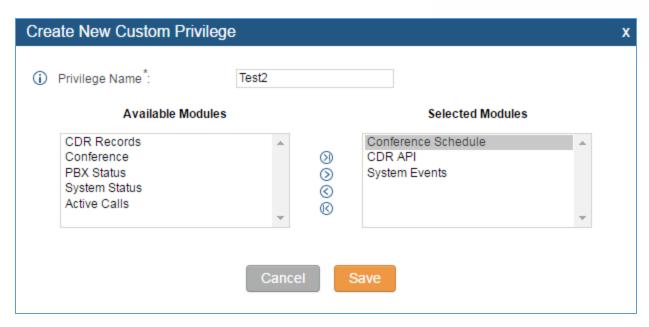


Figure 14: Create New custom Privilege

Log in UCM6200 as super admin and go to Settings->User Management->Custom Privilege, create privilege with customized available modules.

To assign custom privilege to a sub-admin, navigate to UCM webUI->Settings->User Management-> User Information->Create New User/Edit Users, select the custom privilege from "Privilege" option.

User Portal

The user could log in web UI user portal using the extension number and password. When there is an extension created in the UCM6200, the corresponding user account for the extension is automatically created. The user portal allows limited access including user information, extension configuration and CDR information of the extension. The login username is the extension number and the password is configured by Super Admin. The following figure shows the dialog of editing the account information by Super Admin. The User Name must be the extension number and it's not configurable.





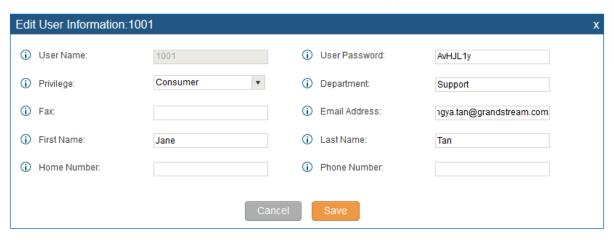


Figure 15: Edit User Information by Super Admin

The following figure shows an example of login page using extension number 1000 as the username.



Figure 16: User Portal Login

After login, the web UI displays is shown as below.





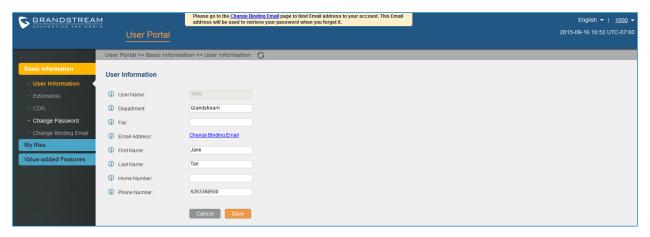


Figure 17: User Portal Layout

For the configuration parameter information in each page, please refer to [Table 6: User Management->Create New User] for options in User Portal->Basic Information->User Information page; please refer to [EXTENSIONS] for options in User Portal->Basic Information->Extension page; please refer to [CDR] for User Portal->Basic Information->CDR page.

Concurrent Multi-User Login

When there are multiple web UI users created, concurrent multi-user login is supported on the UCM6200. Multiple users could edit options and have configurations take effect simultaneously. However, if different users are editing the same option or making the same operation (by clicking on "Apply Changes"), a prompt will pop up as shown in the following figure.

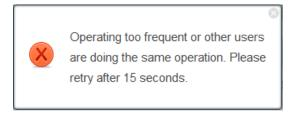


Figure 18: Multiple User Operation Error Prompt

Operation Log

Super Admin has the authority to view operation logs on UCM6200 web GUI->Settings->User Management->Operation Log page. Operation logs list operations done by all the web UI users, for example, web UI login, creating trunk, creating outbound rule and etc. There are 6 columns to record the operation details "Date", "User Name", "IP Address", "Results", "Page Operation" and "Specific Operation".





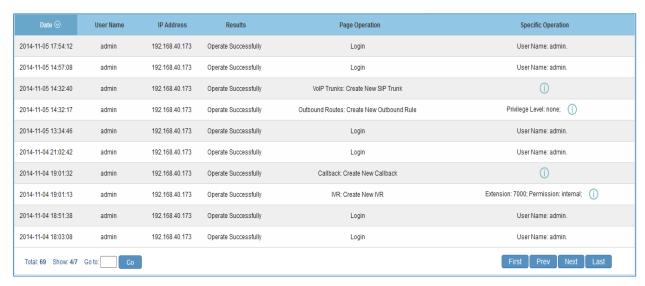


Figure 19: Operation Logs

The operation log can be sorted and filtered for easy access. Click on the header of each column to sort. For example, clicking on "Date" will sort the logs according to operation date and time. Clicking on "Date" again will reverse the order.

Table 7: Operation Log Column Header

Date	The date and time when the operation is executed.
User Name	The username of the user who performed the operation.
IP Address	The IP address from which the operation is made.
Results	The result of the operation.
Page Operation	The page where the operation is made. For example, login, logout, delete user, create trunk and etc.
Specific Operation	Click on it to view the options and values configured by this operation.

User could also filter the operation logs by time condition, IP address and/or username. Configure these conditions and then click on View Operation Logs







Figure 20: Operation Logs Filter

The above figure shows an example that operations made by user "support" on device with IP 192.168.40.173 from 2014-11-01 00:00 to 2014-11-06 15:38 are filtered out and displayed.

To delete operation logs, users can perform filtering first and then click on

Delete Searched Operation Logs to

delete the filtered result of operation logs. Or users can click on

logs at once.

Change Password

After logging in the UCM6200 web UI for the first time, it is highly recommended for users to change the default password "admin" to a more complicated password for security purpose. Follow the steps below to change the Web UI access password.

- 1. Go to Web UI->Settings->User Management-> Change Password page.
- 2. Enter the old password first.
- 3. Enter the new password and re-type the new password to confirm. The new password has to be at least 4 characters. The maximum length of the password is 30 characters.
- 4. Configure the Email Address that is used when login credential is lost.
- 5. Click on "Save" and the user will be automatically logged out.
- 6. Once the web page comes back to the login page again, enter the username "admin" and the new password to login.





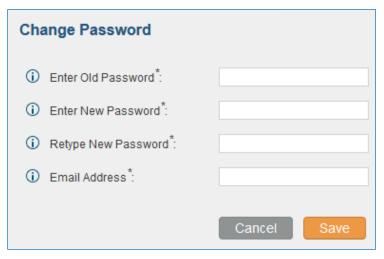


Figure 21 : Change Password

Enter Old Password	Enter the Old Password for UCM6200
Enter New Password	Enter the New Password for UCM6200
Retype New Password	Retype the New Password for UCM6200
Email Address	Configure the Email address for UCM6200. In case login credential is lost, Email address is used to retrieve login credential

Change binding Email

UCM6200 allows user to configure binding email in case login password is lost. UCM6200 login credential will be sent to the designated email address. The feature can be found under web UI->Settings->User Management->Change Binding Email.



Figure 22: Change Binding Email





Table 8: Change Binding Email option

Enter the password of the account	Enter the current login user credential for UCM6200
Email Address	Email Address is used to retrieve password when password is lost

Network Settings

After successfully connecting the UCM6200 to the network for the first time, users could login the Web GUI and go to **Settings->Network Settings** to configure the network parameters for the device.

• UCM6200 supports Route/Switch/Dual mode functions.

In this section, all the available network setting options are listed for all models. Select each tab in web GUI->**Settings**->**Network Settings** page to configure LAN settings, WAN settings, 802.1X and Port Forwarding.

Basic Settings

Please refer to the following tables for basic network configuration parameters on UCM6202/UCM6204/UCM6208.

Table 9: UCM6200 Network Settings->Basic Settings

Method	 Select "Route", "Switch" or "Dual" mode on the network interface of UCM6200. The default setting is "Route". Route WAN port interface will be used for uplink connection. LAN port interface will be used to serve as router. Switch WAN port interface will be used for uplink connection. LAN port interface will be used as bridge for PC connection. Dual Both ports can be used for uplink connection. Users will need assign LAN 1 or LAN 2 as the default interface in option "Default Interface" and configure "Gateway IP" for this interface.
MTU	Specifies the Maximum Transmission Unit. (By default its 1500)
IPv4 Address	
Preferred DNS Server	Enter the preferred DNS server address. If Preferred DNS is used, UCM will try to use it as Primary DNS server.
WAN (when "Me	ethod" is set to "Route")
IP Method	Select DHCP, Static IP, or PPPoE. The default setting is DHCP.
IP Address	Enter the IP address for static IP settings. The default setting is 192.168.0.160.
Subnet Mask	Enter the subnet mask address for static IP settings. The default setting is 255.255.0.0.
Gateway IP	Enter the gateway IP address for static IP settings. The default setting is 0.0.0.0.





DNS Server 1	Enter the DNS server 1 address for static IP settings. The default setting is 0.0.0.0.
DNS Server 2	Enter the DNS server 2 address for static IP settings.
User Name	Enter the user name to connect via PPPoE.
Password	Enter the password to connect via PPPoE.
Layer 2 QoS 802.1Q/VLAN Tag	Assign the VLAN tag of the layer 2 QoS packets for WAN port. The default value is 0.
Layer 2 QoS 802.1p Priority Value	Assign the priority value of the layer 2 QoS packets for WAN port. The default value is 0.
LAN (when Meth	nod is set to "Route")
IP Address	Enter the IP address assigned to LAN port. The default setting is 192.168.2.1.
Subnet Mask	Enter the subnet mask. The default setting is 255.255.25.0.
DHCP Server Enable	Enable or disable DHCP server capability. The default setting is "Yes".
DNS Server 1	Enter DNS server address 1. The default setting is 8.8.8.8.
DNS Server 2	Enter DNS server address 2. The default setting is 208.67.222.222.
Allow IP Address From	Enter the DHCP IP Pool starting address. The default setting is 192.168.2.100.
Allow IP Address To	Enter the DHCP IP Pool ending address. The default setting is 192.168.2.254.
Default IP Lease Time	Enter the IP lease time (in seconds). The default setting is 43200.
LAN (when Meth	nod is set to "Switch")
IP Method	Select DHCP, Static IP, or PPPoE. The default setting is DHCP.
IP Address	Enter the IP address for static IP settings. The default setting is 192.168.0.160.
Subnet Mask	Enter the subnet mask address for static IP settings. The default setting is 255.255.0.0.
Gateway IP	Enter the gateway IP address for static IP settings. The default setting is 0.0.0.0.
DNS Server 1	Enter the DNS server 1 address for static IP settings. The default setting is 0.0.0.0.
DNS Server 2	Enter the DNS server 2 address for static IP settings.
User Name	Enter the user name to connect via PPPoE.
Password	Enter the password to connect via PPPoE.
Layer 2 QoS 802.1Q/VLAN Tag	Assign the VLAN tag of the layer 2 QoS packets for LAN port. The default value is 0.
Layer 2 QoS 802.1p Priority	Assign the priority value of the layer 2 QoS packets for LAN port. The default value is 0.





Value	
LAN 1 / LAN 2 (when Method is set to "Dual")
Default Interface	If "Dual" is selected as "Method", users will need assign the default interface to be LAN 1 (mapped to UCM6202 WAN port) or LAN 2 (mapped to UCM6202 LAN port) and then configure network settings for LAN 1/LAN 2. The default interface is LAN 2.
IP Method	Select DHCP, Static IP, or PPPoE. The default setting is DHCP.
IP Address	Enter the IP address for static IP settings. The default setting is 192.168.0.160.
Subnet Mask	Enter the subnet mask address for static IP settings. The default setting is 255.255.0.0.
Gateway IP	Enter the gateway IP address for static IP settings when the port is assigned as default interface. The default setting is 0.0.0.0.
DNS Server 1	Enter the DNS server 1 address for static IP settings. The default setting is 0.0.0.0.
DNS Server 2	Enter the DNS server 2 address for static IP settings.
User Name	Enter the user name to connect via PPPoE.
Password	Enter the password to connect via PPPoE.
Layer 2 QoS 802.1Q/VLAN Tag	Assign the VLAN tag of the layer 2 QoS packets for LAN port. The default value is 0.
Layer 2 QoS 802.1p Priority Value	Assign the priority value of the layer 2 QoS packets for LAN port. The default value is 0.
IPv6 Address	
WAN (when "Me	ethod" is set to "Route")
IP Method	Select Auto or Static. The default setting is Auto
IP Address	Enter the IP address for static IP settings.
IP Prefixlen	Enter the Prefix length for static settings. Default is 64
DNS Server 1	Enter the DNS server 1 address for static settings.
DNS Server 2	Enter the DNS server 2 address for static settings.
LAN (when Met	hod is set to "Route")
DHCP Server	Select Disable, Auto or DHCPv6. Disable: the DHCPv6 server is disabled. Auto: Stateless address auto configuration using NDP protocol. DHCPv6: Stateful address auto configuration using DHCPv6 protocol.
DHCP Prefix	Enter DHCP prefix. (Default is 2001:db8:2:2::)
DHCP prefixlen	Enter the Prefix length for static settings. Default is 64
DNS Server 1	Enter the DNS server 1 address for static settings. Default is (2001:4860:4860::8888)
DNS Server 2	Enter the DNS server 2 address for static settings. Default is (2001:4860:4860::8844)





Allow IP Address From	Configure starting IP address assigned by the DHCP prefix and DHCP prefixlen.
Allow IP Address To	Configure the ending IP address assigned by the DHCP Prefix and DHCP prefixlen.
Default IP Lease Time	Configure the lease time(in second) of the IP address.
LAN (when Met	hod is set to "Switch")
IP Method	Select Auto or Static. The default setting is Auto
IP Address	Enter the IP address for static IP settings.
IP Prefixlen	Enter the Prefix length for static settings. Default is 64
DNS Server 1	Enter the DNS server 1 address for static settings.
DNS Server 2	Enter the DNS server 2 address for static settings.
LAN 1 / LAN 2 (when Method is set to "Dual")
Default Interface	Users will need assign the default interface to be LAN 1 (mapped to UCM6200 WAN port) or LAN 2 (mapped to UCM6200 LAN port) and then configure network settings for LAN 1/LAN 2. The default interface is LAN 2.
IP Method	Select Auto or Static. The default setting is Auto
IP Address	Enter the IP address for static IP settings.
IP Prefixlen	Enter the Prefix length for static settings. Default is 64
DNS Server 1	Enter the DNS server 1 address for static settings.
DNS Server 2	Enter the DNS server 2 address for static settings.

Method: Route

When the UCM6200 has method set to Route in network settings, WAN port interface is used for uplink connection and LAN port interface is used as a router. Please see a sample diagram below.





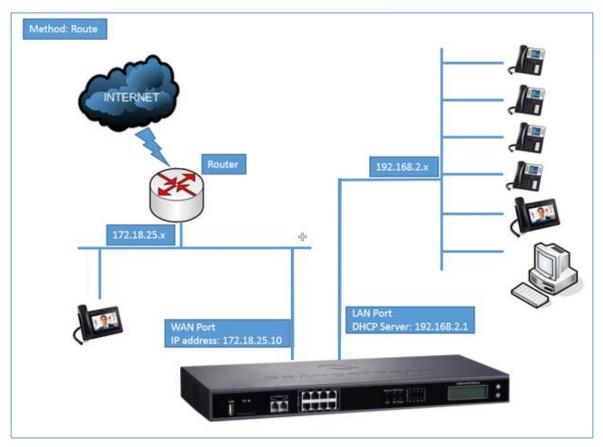


Figure 23: UCM6200 Network Interface Method: Route

Method: Switch

WAN port interface is used for uplink connection; LAN port interface is used as bridge for PC connection.





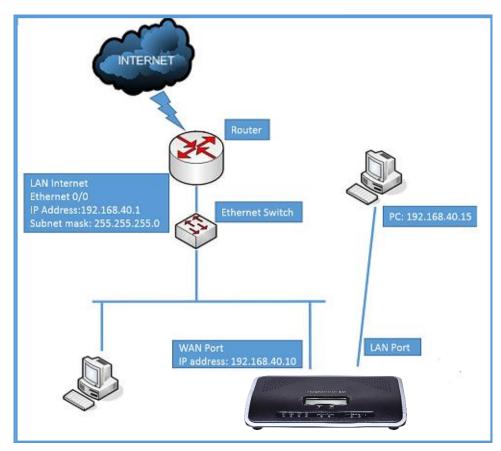


Figure 24: UCM6200 Network Interface Method: Switch

Method: Dual

Both WAN port and LAN port are used for uplink connection. Users will need assign LAN 1 or LAN 2 as the default interface in option "Default Interface" and configure "Gateway IP" if static IP is used for this interface.





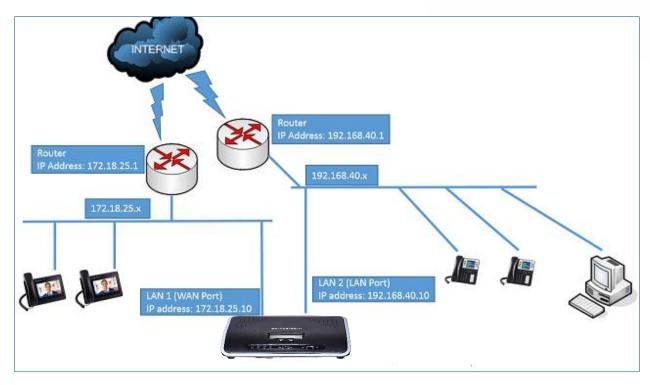


Figure 25: UCM6200 Network Interface Method: Dual

DHCP Client List

This feature can bind MAC to IP addresses on the LAN port when UCM6200 is set to Route mode.

When devices receive IP addresses from LAN port, they will be listed on the webUI under "Settings > Network Settings > DHCP Client List" as shown below.

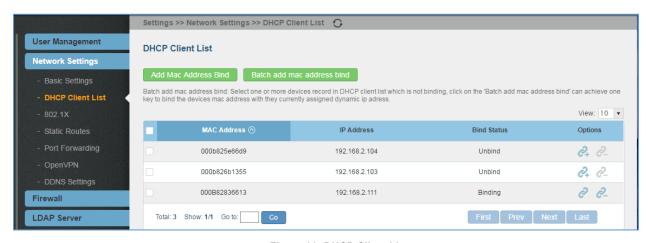


Figure 26: DHCP Client List

User can bind manually a MAC to an IP address by clicking on figure will pop up.

Add Mac Address Bind, the following







Figure 27: Add MAC Address Bind

User needs to set the device MAC address and the IP that will be bound to it (the IP address needs to be within the UCM6200 DHCP range).

In order to bind a batch of listed MAC addresses, user needs to check first the MAC addresses to bind and click

on Batch add mac address bind . A confirmation popup will be shown, click to bind the addresses.

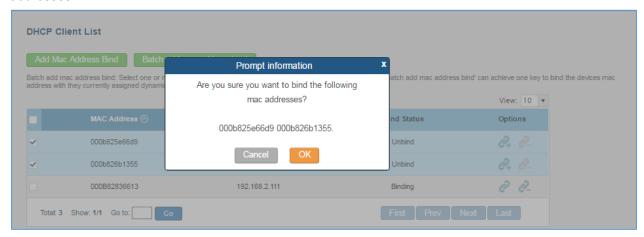


Figure 28: Batch Add MAC Address Bind

After Clicking "OK" to confirm the binding, the "Bind Status" will change from "Unbind" to "Binding".

802.1X

IEEE 802.1X is an IEEE standard for port-based network access control. It provides an authentication mechanism to device before the device is allowed to access Internet or other LAN resources. The UCM6200 supports 802.1X as a supplicant/client to be authenticated. The following diagram and figure show UCM6200 uses 802.1X mode "EAP-MD5" on WAN port as client in the network to access Internet.





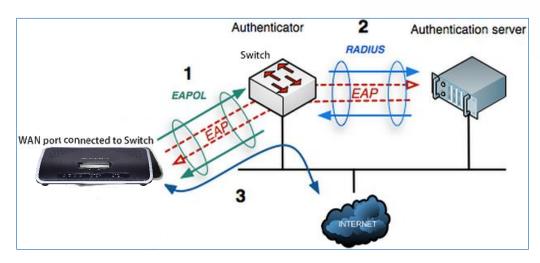


Figure 29: UCM6200 Using 802.1X as Client

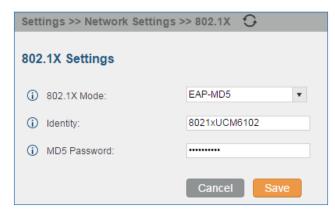


Figure 30: UCM6200 Using 802.1X EAP-MD5

The following table shows the configuration parameters for 802.1X on UCM6200. Identity and MD5 password are required for authentication, which should be provided by the network administrator obtained from the RADIUS server. If "EAP-TLS" or "EAP-PEAPv0/MSCHAPv2" is used as the 802.1X mode, users will also need to upload 802.1X CA Certificate and 802.1X Client Certificate, which should be also generated from the RADIUS server.

Table 10: UCM6200 Network Settings->802.1X

	Select 802.1X mode. The default setting is "Disable". The supported 802.1X mode
	are:
802.1X Mode	• EAP-MD5
	EAP-TLS
	EAP-PEAPv0/MSCHAPv2
Identity	Enter 802.1X mode identity information.
MD5 Password	Enter 802.1X mode MD5 password information.
802.1X Certificate	Select 802.1X certificate from local PC and then upload.





802.1X Client	Select 802.1X client certificate from local PC and then upload.
Certificate	

Static Routes

The UCM6200 provides users static routing capability that allows the device to use manually configured routes, rather than information only from dynamic routing or gateway configured in the UCM6200 web GUI->**Network Settings->Basic Settings** to forward traffic. It can be used to define a route when no other routes are available or necessary, or used in complementary with existing routing on the UCM6200 as a failover backup, and etc.

- Click on Create New Static Route to create a new static route. The configuration parameters are listed in the table below.
- Once added, users can select
 to edit the static route.
- Select to delete the static route.

Table 11: UCM6200 Network Settings->Static Routes

Destination	Configure the destination IP address or the destination IP subnet for the UCM6200 to reach using the static route. Example: IP address - 192.168.66.4 IP subnet - 192.168.66.0
Netmask	Configure the subnet mask for the above destination address. If left blank, the default value is 255.255.255.255. Example: 255.255.255.0
Gateway	Configure the gateway address so that the UCM6200 can reach the destination via this gateway. Gateway address is optional. Example: 192.168.40.5
Interface	Specify the network interface on the UCM6200 to reach the destination using the static route. LAN interface is eth0; WAN interface is eth1.





Static routes configuration can be reset from LCD menu->Network Menu.

The following diagram shows a sample application of static route usage on UCM6204.

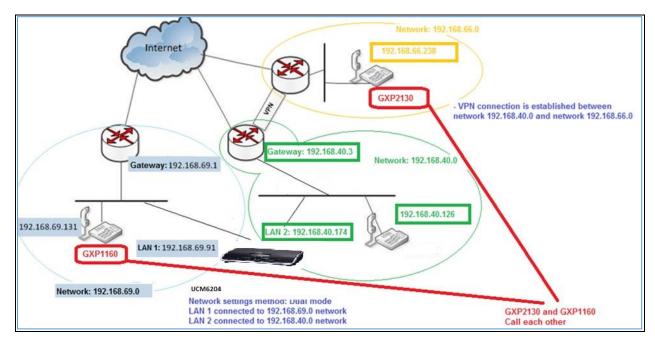


Figure 31: UCM6204 Static Route Sample

The network topology of the above diagram is as below:

- Network 192.168.69.0 has IP phones registered to UCM6204 LAN 1 address
- Network 192.168.40.0 has IP phones registered to UCM6204 LAN 2 address
- Network 192.168.66.0 has IP phones registered to UCM6204 via VPN
- Network 192.168.40.0 has VPN connection established with network 192.168.66.0

In this network, by default the IP phones in network 192.168.69.0 are unable to call IP phones in network 192.168.66.0 when registered on different interfaces on the UCM6204. Therefore, we need configure a static route on the UCM6204 so that the phones in isolated networks can make calls between each other.







Figure 32: UCM6204 Static Route Configuration

Port Forwarding

The UCM network interface supports router function which provides users the ability to do port forwarding. If LAN mode is set to "Route" under web GUI->Settings->Network Settings->Basic Settings page, port forwarding is available for configuration.

The port forwarding configuration is under web GUI->Settings->Network Settings->Port Forwarding page. Please see related settings in the table below.

Table 12: UCM6200 Network Settings->Port Forwarding

	Specify the WAN port number or a range of WAN ports. Unlimited number of ports can be configured.
WAN Port	Note: When it is set to a range, WAN port and LAN port must be configured with the same range, such as WAN port: 1000-1005 and LAN port: 1000-1005, and access from WAN port will be forwarded to the LAN port with the same port number, for example, WAN port 1000 will be port forwarding to LAN port 1000.
LAN IP	Specify the LAN IP address.
LAN Port	Note: When it is set to a range, WAN port and LAN port must be configured with the same range, such as WAN port: 1000-1005 and LAN port: 1000-1005, and access from WAN port will be forwarded to the LAN port with the same port number, for example, WAN port 1000 will be port forwarding to LAN port 1000.





Protocol Type

Select protocol type "UDP Only", "TCP Only" or "TCP/UDP" for the forwarding in the selected port. The default setting is "UDP Only".

The following figures demonstrate a port forwarding example to provide phone's web UI access to public side.

- UCM6200 network mode is set to "Route".
- UCM6200 WAN port is connected to uplink switch, with a public IP address configured, e.g. 1.1.1.1.
- UCM6200 LAN port provides DHCP pool that connects to multiple phone devices in the LAN network 192.168.2.x. The UCM6200 is used as a router, with gateway address 192.168.2.1.
- There is a GXP2160 connected under the LAN interface network of the UCM6200. It obtains IP address 192.168.2.100 from UCM6200 DHCP pool.
- On the UCM6200 web UI->Settings->Network Settings->Port Forwarding, configure a port forwarding entry as the figure shows below.
- Click on

Create New Port Forwarding

WAN Port: This is the port opened up on the WAN side for access purpose.

LAN IP: This is the GXP2160 IP address, under the LAN interface network of the UCM6200.

LAN Port: This is the port opened up on the GXP2160 side for access purpose.

Protocol Type: We select TCP here for web UI access using HTTP.

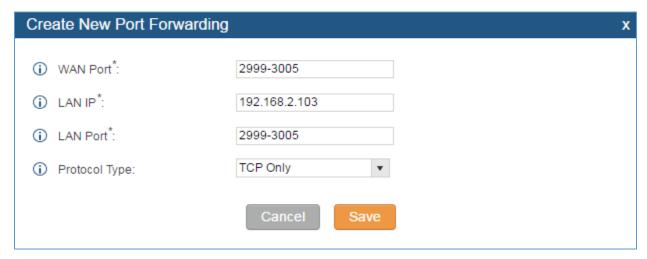


Figure 33: Create New Port Forwarding





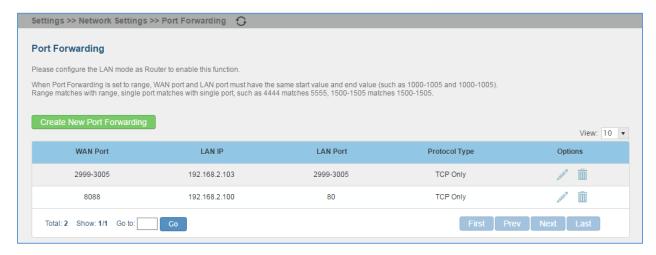


Figure 34: UCM6200 Port Forwarding Configuration

This will allow users to access the GXP2160 web UI from public side, by typing in address "1.1.1.1:8088".

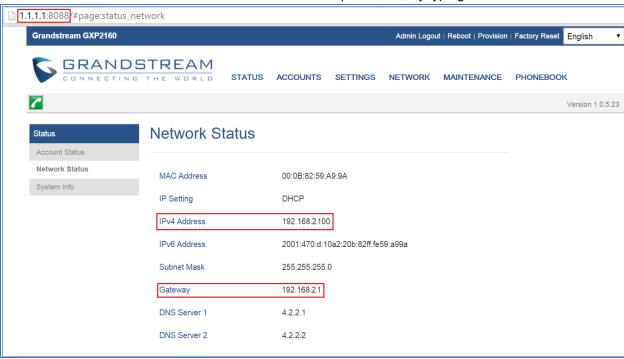


Figure 35: GXP2160 Web Access Using UCM6202 Port Forwarding

OpenVPN

Open VPN settings allow the users to configure UCM6200 to use VPN features

Table 13: UCM6200 Settings -> Network Settings -> Open VPN

Enable	Enable / Disable the open VPN feature.
Server Address	Configures the hostname/lp and port of the server. For example : 192.168.1.2:22





Server Protocol	Specify the protocol user, user should use the same settings as used on the server
Device Mode	Use the same setting as used on the server. Dev TUN: Create a routed IP tunnel. Dev TAP: Create an Ethernet tunnel.
User Compression	Compress tunnel packets using the LZO algorithm on the VPN link. Don't enable this unless it is also enabled in the server config file.
CA Cert	Upload as SSL/TLS root certificate. This file will be renamed as 'ca.crt' automatically.
Client Cert	Upload a client certificate. This file will be renamed as 'cliend.crt' automatically.
Client Key	Upload a client private key. This file will be renamed as 'client.key' automatically.

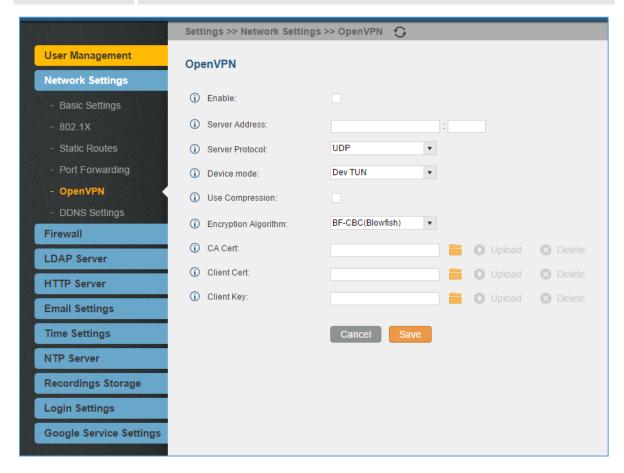


Figure 36: Open VPN feature on the UCM6200

DDNS Settings

DDNS setting allows user to access UCM6200 via domain name instead of IP address.

The UCM supports DDNS service from the following DDNS provider:





- dydns.org
- noip.com
- freedns.afraid.org
- zoneedit.com
- oray.net

Here is an example of using noip.com for DDNS.

1. Register domain in DDNS service provider. Please note the UCM6200 needs to have public IP access.

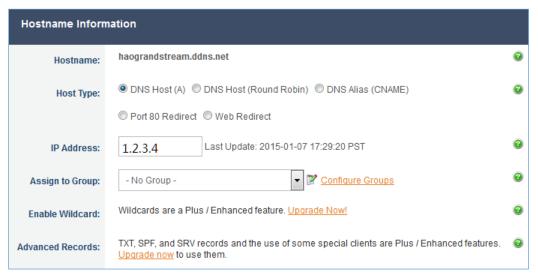


Figure 37: Register Domain Name on noip.com

2. On **web UI->Settings->Network Settings->DDNS Settings**, enable DDNS service and configure username, password and host name.

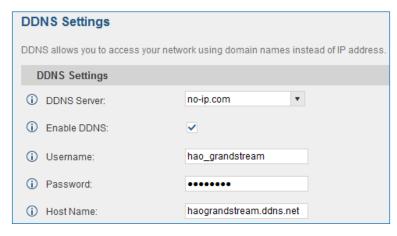


Figure 38: UCM6200 DDNS Setting





3. Now you can use domain name instead of IP address to connect to the UCM6200 web UI.

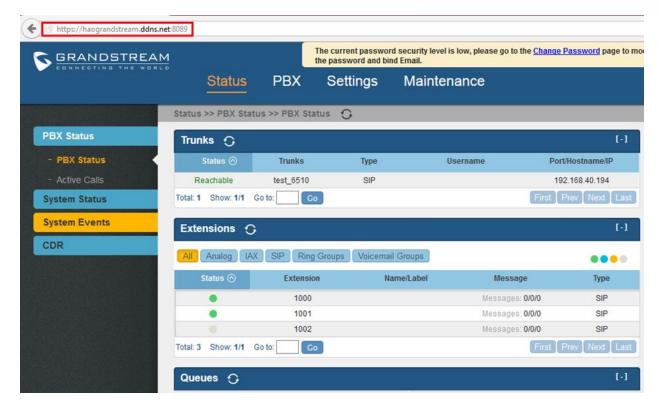


Figure 39: Using Domain Name to Connect to UCM6200

Firewall

The UCM6200 provides users firewall configurations to prevent certain malicious attack to the UCM6200 system. Users could configure to allow, restrict or reject specific traffic through the device for security and bandwidth purpose. The UCM6200 also provides Fail2ban feature for authentication errors in SIP REGISTER, INVITE and SUBSCRIBE. To configure firewall settings in the UCM6200, go to Web UI->**Settings**->**Firewall** page.

Static Defense

Under Web GUI->Settings->Firewall->Static Defense page, users will see the following information:

- Current service information with port, process and type.
- Typical firewall settings.
- Custom firewall settings.

The following table shows a sample current service status running on the UCM6200.





Table 14: UCM6200 Firewall->Static Defense->Current Service

Port	Process	Туре	Protocol or Service
7777	Asterisk	tcp/IPv4	SIP
389	Slapd	tcp/IPv4	LDAP
2000	Asterisk	tcp/IPv4	SCCP
22	Dropbear	tcp/IPv4	SSH
80	Lighthttpd	tcp/IPv4	HTTP
8089	Lighthttpd	tcp/IPv4	HTTPS
69	Opentftpd	udp/IPv4	TFTP
9090	Asterisk	udp/IPv4	SIP
6060	zero_config	udp/IPv4	UCM6200 zero_config service
5060	Asterisk	udp/IPv4	SIP
4569	Asterisk	udp/IPv4	SIP
5353	zero_config	udp/IPv4	UCM6200 zero_config service
37435	Syslogd	udp/IPv4	Syslog

For typical firewall settings, users could configure the following options on the UCM6200.

Table 15: Typical Firewall Settings

Ping Defense Enable	If enabled, ICMP response will not be allowed for Ping request. The default setting is disabled. To enable or disable it, click on the check box for the LAN or WAN (UCM6200) interface.
Ping-of-Death Defense Enable	Enable to prevent Ping-of-Death attack to the device. The default setting is disabled. To enable or disable it, click on the check box for the LAN or WAN (UCM6200) interface.

Under "Custom Firewall Settings", users could create new rules to accept, reject or drop certain traffic going through the UCM6200. To create new rule, click on "Create New Rule" button and a new window will pop up for users to specify rule options.

Right next to "Create New Rule" button, there is a checkbox for option "Reject Rules". If it's checked, all the rules will be rejected except the firewall rules listed below. In the firewall rules, only when there is a rule that meets all the following requirements, the option "Reject Rules" will be allowed to check:

- Action: "Accept"
- Type "In"
- Destination port is set to the system login port (e.g., by default 8089)
- Protocol is not UDP







Figure 40: Create New Firewall Rule

Table 16: Firewall Rule Settings

Rule Name	Specify the Firewall rule name to identify the firewall rule.
Action	Select the action for the Firewall to perform. ACCEPT REJECT DROP
Туре	 Select the traffic type. IN If selected, users will need specify the network interface "LAN" or "WAN" (for UCM6200) for the incoming traffic. OUT
Service	 Select the service type. FTP SSH Telnet TFTP HTTP LDAP Custom If "Custom" is selected, users will need specify Source (IP and port), Destination (IP and port) and Protocol (TCP, UDP or Both) for the service. Please note if the source or the destination field is left blank, it will be used as "Anywhere".

Save the change and click on "Apply" button. Then submit the configuration by clicking on "Apply Changes" on the upper right of the web page. The new rule will be listed at the bottom of the page with sequence number, rule name, action, protocol, type, source, destination and operation. More operations below:





- Click on to edit the rule
- Click on to delete the rule

Dynamic Defense

Dynamic defense is supported on the UCM6200 series. It can blacklist hosts dynamically when the LAN mode is set to "Route" under web GUI->Settings->Network Settings->Basic Settings page. If enabled, the traffic coming into the UCM6200 can be monitored, which helps prevent massive connection attempts or brute force attacks to the device. The blacklist can be created and updated by the UCM6200 firewall, which will then be displayed in the web page. Please refer to the following table for dynamic defense options on the UCM6200.

Table 17: UCM6200 Firewall Dynamic Defense

Dynamic Defense Enable	Enable dynamic defense. The default setting is disabled.
Periodical Time Interval	Configure the dynamic defense periodic time interval (in minutes). If the number of TCP connections from a host exceeds the connection threshold within this period, this host will be added into Blacklist. The valid value is between 1 and 59 when dynamic defense is turned on. The default setting is 59.
Blacklist Update Interval	Configure the blacklist update time interval (in seconds). The default setting is 120.
Connection Threshold	Configure the connection threshold. Once the number of connections from the same host reaches the threshold, it will be added into the blacklist. The default setting is 100.
Dynamic Defense Whitelist	Allowed IPs and ports range, multiple IP addresses and port range. For example, 192.168.5.100- 192.168.5.200 1500:2000

The following figure shows a configuration example like this:

- If a host at IP address 192.168.5.7 initiates more than 20 TCP connections to the UCM6200 within 1 minute, it will be added into UCM6200 blacklist.
- This host 192.168.5.7 will be blocked by the UCM6200 for 500 seconds.
- Since IP range 192.168.5.100-192.168.5.200 is in whitelist, if a host initiates more than 20 TCP connections
 to the UCM6200 within 1 minute, it will not be added into UCM6200 blacklist. It can still establish TCP
 connection with the UCM6200.





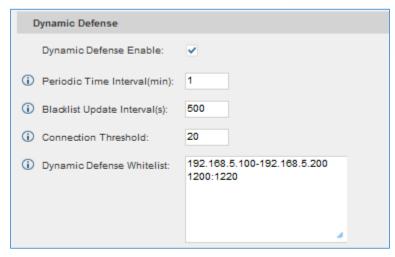


Figure 41: Configure Dynamic Defense

Fail2ban

Fail2Ban feature on the UCM6200 provides intrusion detection and prevention for authentication errors in SIP REGISTER, INVITE and SUBSCRIBE. Once the entry is detected within "Max Retry Duration", the UCM6200 will take action to forbid the host for certain period as defined in "Banned Duration". This feature helps prevent SIP brute force attacks to the PBX system.

Table 18: Fail2Ban Settings

Global Settings	
Enable Fail2Ban	Enable Fail2Ban. The default setting is disabled. Please make sure both "Enable Fail2Ban" and "Asterisk Service" are turned on in order to use Fail2Ban for SIP authentication on the UCM6200.
Banned Duration	Configure the duration (in seconds) for the detected host to be banned. The default setting is 300. If set to -1, the host will be always banned.
Max Retry Duration	Within this duration (in seconds), if a host exceeds the max times of retry as defined in "MaxRetry", the host will be banned. The default setting is 5.
MaxRetry	Configure the number of authentication failures during "Max Retry Duration" before the host is banned. The default setting is 10.
Fail2Ban Whitelist	Configure IP address, CIDR mask or DNS host in the whitelist. Fail2Ban will not ban the host with matching address in this list. Up to 5 addresses can be added into the list.
Local Settings	
Asterisk Service	Enable Asterisk service for Fail2Ban. The default setting is disabled. Please make sure both "Enable Fail2Ban" and "Asterisk Service" are turned on in order to use Fail2Ban for SIP authentication on the UCM6200.
Protocol	Configure the listening port number for the service. Currently only 5060 (for UDP)





	is supported.
MaxRetry	Configure the number of authentication failures during "Max Retry Duration" before the host is banned. The default setting is 10. Please make sure this option is properly configured as it will override the "MaxRetry" value under "Global Settings".
Blacklist	
Black List	Users will be able to view the IPs that have been blocked by UCM

LDAP Server

The UCM6200 has an embedded LDAP server for users to manage corporate phonebook in a centralized manner.

- By default, the LDAP server has generated the first phonebook with PBX DN "ou=pbx,dc=pbx,dc=com" based on the UCM6200 user extensions already.
- Users could add new phonebook with a different Phonebook DN for other external contacts. For example, "ou=people,dc=pbx,dc=com".
- All the phonebooks in the UCM6200 LDAP server have the same Base DN "dc=pbx,dc=com".

Term Explanation:

cn= Common Name

ou= Organization Unit

dc= Domain Component

These are all parts of the LDAP data Interchange Format, according to RFC 2849, which is how the LDAP tree is filtered.

If users have the Grandstream phone provisioned by the UCM6200, the LDAP directory will be set up on the phone and can be used right away for users to access all phonebooks.

Additionally, users could manually configure the LDAP client settings to manipulate the built-in LDAP server on the UCM6200. If the UCM6200 has multiple LDAP phonebooks created, in the LDAP client configuration, users could use "dc=pbx,dc=com" as Base DN to have access to all phonebooks on the UCM6200 LDAP server, or use a specific phonebook DN, for example "ou=people,dc=pbx,dc=com", to access to phonebook with Phonebook DN "ou=people,dc=pbx,dc=com" only.

UCM can also act as a LDAP client to download phonebook entries from other LDAP server. To access LDAP server and client settings, go to **Web GUI->Settings->LDAP Server**.

LDAP Server Configurations

The following figure shows the default LDAP server configurations on the UCM6200.





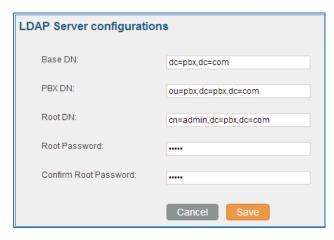


Figure 42: LDAP Server Configurations

The UCM6200 LDAP server supports anonymous access (read-only) by default. Therefore, the LDAP client doesn't have to configure username and password to access the phonebook directory. The "Root DN" and "Root Password" here are for LDAP management and configuration where users will need provide for authentication purpose before modifying the LDAP information.

The default phonebook list in this LDAP server can be viewed and edited by clicking on for the first phonebook under LDAP Phonebook.



Figure 43: Default LDAP Phonebook DN





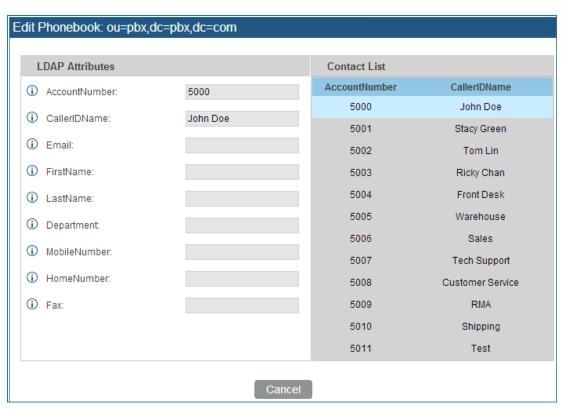


Figure 44: Default LDAP Phonebook Attributes

LDAP Phonebook

Users could use the default phonebook, edit the default phonebook, add new phonebook, import phonebook on the LDAP server as well as export phonebook from the LDAP server. The first phonebook with default phonebook dn "ou=pbx,dc=pbx,dc=com" displayed on the LDAP server page is for extensions in this PBX. Users cannot add or delete contacts directly. The contacts information will need to be modified via Web GUI->PBX->Basic/Call Routes->Extensions first. The default LDAP phonebook will then be updated automatically.

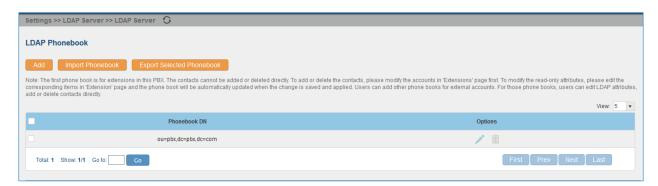


Figure 45: LDAP Server->LDAP Phonebook





• Add new phonebook

A new sibling phonebook of the default PBX phonebook can be added by clicking on "Add" under "LDAP Phonebook" section.

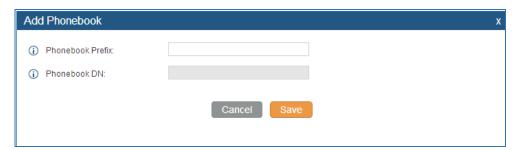


Figure 46: Add LDAP Phonebook

Configure the "Phonebook Prefix" first. The "Phonebook DN" will be automatically filled in. For example, if configuring "Phonebook Prefix" as "people", the "Phonebook DN" will be filled with "ou=people,dc=pbx,dc=com".

Once added, users can select / to edit the phonebook attributes and contact list (see figure below), or select

to delete the phonebook.

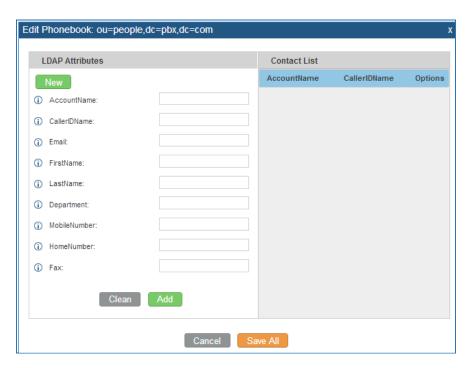


Figure 47: Edit LDAP Phonebook

• Import phonebook from your computer to LDAP server





Click on "Import Phonebook" and a dialog will prompt as shown in the figure below.

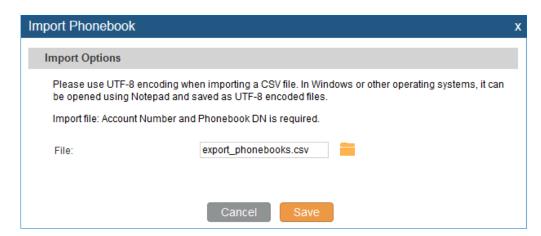


Figure 48: Import Phonebook

The file to be imported must be a CSV file with UTF-8 encoding. Users can open the CSV file with Notepad and save it with UTF-8 encoding.

Here is how a sample file looks like. Please note "Account Number" and "Phonebook DN" fields are required. Users could export a phonebook file from the UCM6200 LDAP phonebook section first and use it as a sample to start with.

 


Figure 49: Phonebook CSV File Format

The Phonebook DN field is the same "Phonebook Prefix" entry as when the user clicks on "Add" to create a new phonebook. Therefore, if the user enters "phonebook" in "Phonebook DN" field in the CSV file, the actual phonebook DN "ou=phonebook,dc=pbx,dc=com" will be automatically created by the UCM6200 once the CSV file is imported.

In the CSV file, users can specify different phonebook DN fields for different contacts. If the phonebook DN already exists on the UCM6200 LDAP Phonebook, the contacts in the CSV file will be added into the existing phonebook. If the phonebook DN doesn't exist on the UCM6200 LDAP Phonebook, a new phonebook with this phonebook DN will be created.

The sample phonebook CSV file in above picture will result in the following LDAP phonebook in the UCM6200.







Figure 50: LDAP Phonebook After Import

As the default LDAP phonebook with DN "ou=pbx,dc=pbx,dc=com" cannot be edited or deleted in LDAP phonebook section, users cannot import contacts with Phonebook DN field "pbx" if existed in the CSV file.

• Export phonebook to your computer from UCM6200 LDAP server

Select the checkbox for the LDAP phonebook and then click on "Export Selected Phonebook" to export the selected phonebook. The exported phonebook can be used as a record or a sample CSV file for the users to add more contacts in it and import to the UCM6200 again.

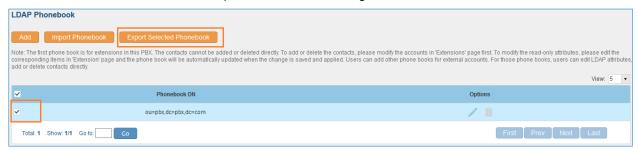


Figure 51: Export Selected LDAP Phonebook

LDAP Client Configurations

The configuration on LDAP client is similar when you use other LDAP servers. Here we provide an example on how to configure the LDAP client on the SIP end points to use the default PBX phonebook.

Assuming the server base dn is "dc=pbx,dc=com", configure the LDAP clients as follows (case insensitive):

Server Address: LDAP server IP address

Base DN: dc=pbx,dc=com

User Name: cn= "LDAP server login name", dc=pbx, dc=com [matching LDAP server format]





Password: "LDAP server login password"

Filter: (|(CallerIDName=%)(AccountNumber=%))

Port: 389

The following figure gives a sample configuration for UCM6200 acting as a LDAP client.

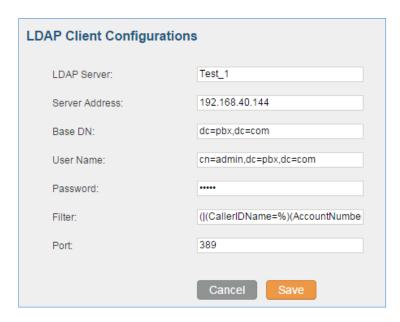


Figure 52: LDAP Client Configurations

To configure Grandstream IP phones as the LDAP client, please refer to the following example:

Server Address: The IP address or domain name of the UCM6200

Base DN: dc=pbx,dc=com

User Name: Please leave this field empty Password: Please leave this field empty

LDAP Name Attribute: CallerIDName Email Department FirstName LastName LDAP Number Attribute: AccountNumber MobileNumber HomeNumber Fax

LDAP Number Filter: (AccountNumber=%)
LDAP Name Filter: (CallerIDName=%)

LDAP Display Name: AccountNumber CallerIDName LDAP Version: If existed, please select LDAP Version 3

Port: 389

The following figure shows the configuration information on a Grandstream GXP2200 to successfully use the LDAP server as configured in *Figure 42: LDAP Server Configurations*.





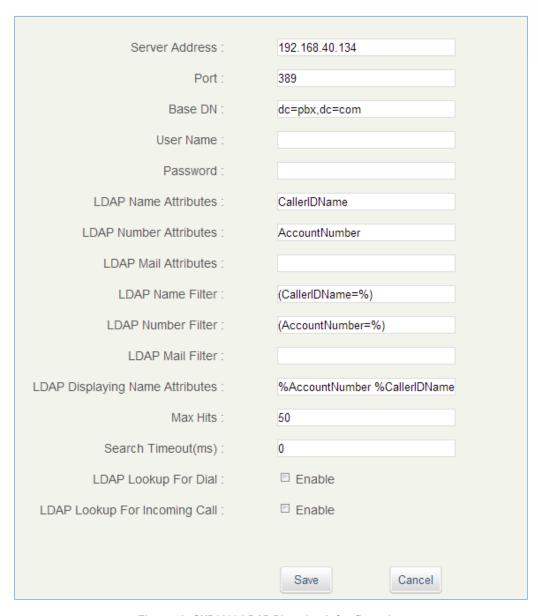


Figure 53: GXP2200 LDAP Phonebook Configuration

HTTP Server

The UCM6200 embedded web server responds to HTTP/HTTPS GET/POST requests. Embedded HTML pages allow the users to configure the PBX through a Web browser such as Microsoft IE, Mozilla Firefox and Google Chrome. By default, the PBX can be accessed via HTTPS using Port 8089 (e.g., https://192.168.40.50:8089). Users could also change the access protocol and port as preferred under Web GUI->Settings->HTTP Server.

Table 19: HTTP Server Settings





Redirect From Port 80	Enable or disable redirect from port 80. On the PBX, the default access protocol is HTTPS and the default port number is 8089. When this option is enabled, the access using HTTP with Port 80 will be redirected to HTTPS with Port 8089. The default setting is "Enable".
Protocol Type	Select HTTP or HTTPS. The default setting is "HTTPS". This is also the protocol used for zero config when the end point device downloads the config file from the UCM6200.
Port	Specify port number to access the HTTP server. The default port number is 8089.

Once the change is saved, the web page will be redirected to the login page using the new URL. Enter the username and password to login again.

Email settings

Email settings

The Email application on the UCM6200 can be used to send out alert event Emails, Fax (Fax-To-Email), Voicemail (Voicemail-To-Email) and etc. The configuration parameters can be accessed via Web GUI->Settings->Email Settings->Email Settings.

Table 20: Email Settings

TLS Enable	Enable or disable TLS during transferring/submitting your Email to other SMTP server. The default setting is "Yes".
Туре	 MTA: Mail Transfer Agent. The Email will be sent from the configured domain. When MTA is selected, there is no need to set up SMTP server for it or no user login is required. However, the Emails sent from MTA might be considered as spam by the target SMTP server. Client: Submit Emails to the SMTP server. A SMTP server is required and users need login with correct credentials.
Domain	Specify the domain name to be used in the Email when using type "MTA".
Server	Specify the SMTP server when using type "Client".
Username	Username is required when using type "Client". Normally it's the Email address.
Password	Password to login for the above Username (Email address) is required when using type "Client".
Display Name	Specify the display name in the FROM header in the Email.
Sender	Specify the sender's Email address. For example, pbx@example.mycompany.com.





The following figure shows a sample Email setting on the UCM6200, assuming the Email is using *smtp.gmail.com* as the SMTP server.

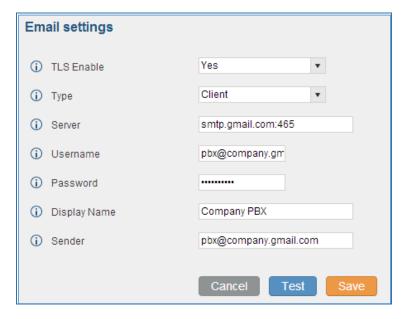


Figure 54: UCM6200 Email Settings

Once the configuration is finished, click on "Test". In the prompt, fill in a valid Email address to send a test Email to verify the Email settings on the UCM6200.

Email Templates

The Email templates on the UCM6200 can be used for email notification the configuration parameters can be accessed via Web GUI->Settings->Email Settings->Email Templates.

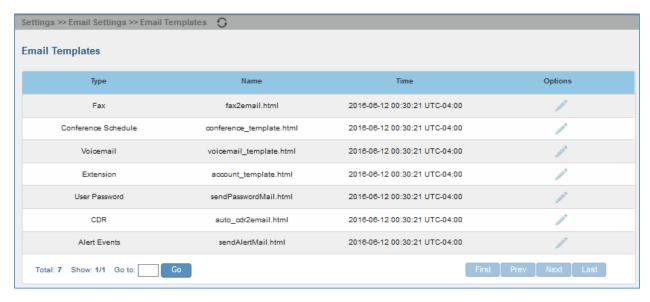


Figure 55: Email Templates





To configure the email template, simply click the button under Options column, and edit the template as desired.

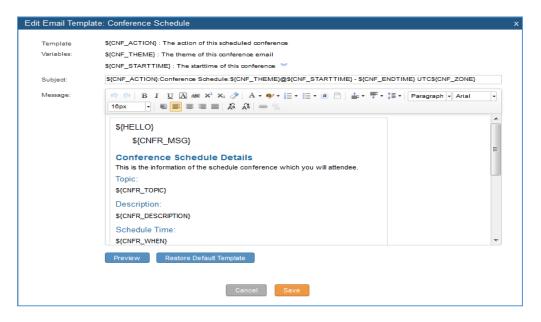


Figure 56: Conference Schedule Template

Email Send Log

Under UCM web UI->Settings->Email Settings->Email Send Log, users could search, filter and check whether the Email is sent out successfully or not. This page will also display the corresponding error message if the Email is not sent out successfully.

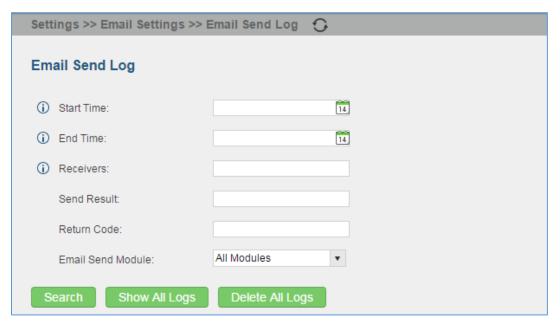


Figure 57: Email Send log





Table 21: Email Log

Field	Description
Start Time	Enter the start time for filter
End Time	Enter the end time for filter
Receivers	Enter the email recipient, while searching for multiple recipients, please separate then with comma and no spaces.
Send Result	Enter the status of the send result to filter with
Return Code	Enter the email code to filter with
Email Send Module	Select the email module to filter with from the drop down list, which contains: All Modules Extension Voicemail Conference Schedule User Password Alert Events CDR Fax Test

Email logs will be shown on bottom of The "Email Send Log" page, as shown on the following figure.



Figure 58: Email Logs

Time settings

Auto time updating

The current system time on the UCM6200 is displayed on the upper right of the web page. It can also be found under Web GUI->Status->System Status->General.

To configure the UCM6200 to update time automatically, go to Web GUI->Settings->Time Settings->Time Auto Updating.







The configurations under Web GUI->**Settings**->**Time Settings**->**Time Auto Updating** page require reboot to take effect. Please consider configuring auto time updating related changes when setting up the UCM6200 for the first time to avoid service interrupt after installation and deployment in production.

Table 22: Time Auto Updating

Remote NTP Server	Specify the URL or IP address of the NTP server for the UCM6200 to synchronize the date and time. The default NTP server is ntp.ipvideotalk.com.
Enable DHCP Option 2	If set to "Yes", the UCM6200 is allowed to get provisioned for Time Zone from DHCP Option 2 in the local server automatically. The default setting is "Yes".
Enable DHCP Option 42	If set to "Yes", the UCM6200 is allowed to get provisioned for NTP Server from DHCP Option 42 in the local server automatically. This will override the manually configured NTP Server. The default setting is "Yes".
Time Zone	Select the proper time zone option so the UCM6200 can display correct time accordingly. If "Self-Defined Tome Zone" is selected, please specify the time zone parameters in "Self-Defined Time Zone" field as described in below option.
Self-Defined Time Zone	If "Self-Defined Time Zone" is selected in "Time Zone" option, users will need define their own time zone following the format below. The syntax is: std offset dst [offset], start [/time], end [/time] Default is set to: MTZ+6MDT+5,M4.1.0,M11.1.0 MTZ+6MDT+5 This indicates a time zone with 6 hours offset and 1 hour ahead for DST, which is U.S central time. If it is positive (+), the local time zone is west of the Prime Meridian (A.K.A: International or Greenwich Meridian); If it is negative (-), the local time zone is east. M4.1.0,M11.1.0 The 1st number indicates Month: 1,2,3, 12 (for Jan, Feb,, Dec).





The 2nd number indicates the nth iteration of the weekday: (1st Sunday, 3rd Tuesday...). Normally 1, 2, 3, 4 are used. If 5 is used, it means the last iteration of the weekday.

The 3rd number indicates weekday: 0,1,2,..,6 (for Sun, Mon, Tues, ...

Therefore, this example is the DST which starts from the First Sunday of April to the 1st Sunday of November.

Set Time Manually

To manually set the time on the UCM6200, go to Web UI->Settings->Time Settings->Set Time Manually. The format is YYYY-MM-DD HH:MI:SS.



Figure 59: Set Time Manually



Manually setup time will take effect immediately after saving and applying change in the web UI. If users would like to reboot the UCM6200 and keep the manually setup time setting, please make sure "Remote NTP Server", "Enable DHCP Option 2" and "Enable DHCP Option 42" options under Web GUI->Settings->Time Settings->Time Auto Updating page are unchecked or set to empty. Otherwise, time auto updating settings in this page will take effect after reboot.

Office Time

On the UCM6200, the system administrator can define "office time", which can be used to configure time condition for extension call forwarding schedule and inbound rule schedule. To configure office time, go to Web UI->Settings->Time Settings->Office Time. Click on "Create New Office Time" to create an office time.





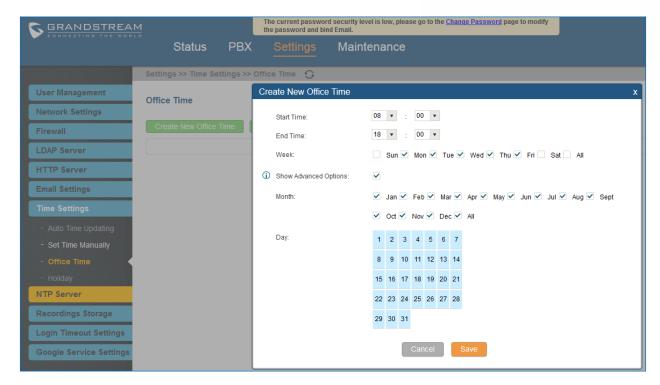


Figure 60: Create New Office Time

Table 23: Create New Office Time

Start Time	Configure the start time for office hour.
End Time	Configure the end time for office hour
Week	Select the work days in one week.
Show Advanced Options	Check this options to show advanced options. Once selected, please specify "Month" and "Day" below.
Month	Select the months for office time.
Day	Select the work days in one month.

Select "Start Time", "End Time" and the day for the "Week" for the office time. The system administrator can also define month and day of the month as advanced options. Once done, click on "Save" and then "Apply Change" for the office time to take effect. The office time will be listed in the web page as the figure shows below.







Figure 61: Settings->Time Settings->Office Time

- Click on

 to edit the office time.
- Click on to delete the office time.
- Click on "Delete Selected Office Times" to delete multiple selected office times at once.

Holiday

On the UCM6200, the system administrator can define "holiday", which can be used to configure time condition for extension call forwarding schedule and inbound rule schedule. To configure holiday, go to Web UI->**Settings**->**Time Settings**->**Holiday**. Click on "Create New Holiday" to create holiday time.

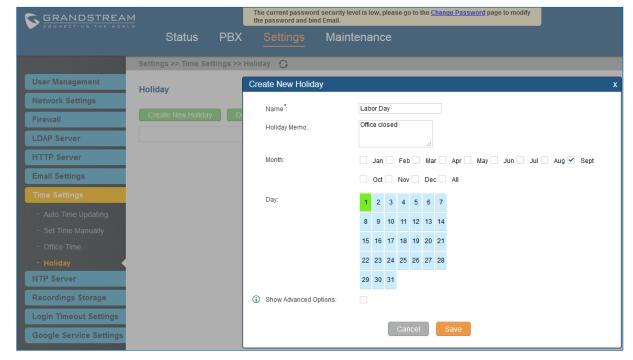


Figure 62: Create New Holiday

Table 24: Create New Holiday





Name	Specify the holiday name to identify this holiday.
Holiday Memo	Create a note for the holiday.
Month	Select the month for the holiday.
Day	Select the day for the holiday.
Show Advanced Options	Check this option to show advanced options. If selected, please specify the days as holiday in one week below.
Week	Select the days as holiday in one week.

Enter holiday "Name" and "Holiday Memo" for the new holiday. Then select "Month" and "Day". The system administrator can also define days in one week as advanced options. Once done, click on "Save" and then "Apply Change" for the holiday to take effect. The holiday will be listed in the web page as the figure shows below.

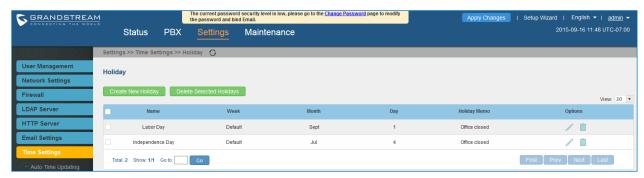


Figure 63: Settings->Time Settings->Holiday

- Click on

 to edit the holiday.
- Click on to delete the holiday.
- Click on "Delete Selected Holidays" to delete multiple selected holidays at once.

⚠ Note:

For more details on how to use office time and holiday, please refer to the link below:

http://www.grandstream.com/sites/default/files/Resources/How_to_use_office_time_and_holiday_UCM6100.pd f





NTP Server

The UCM6200 can be used as a NTP server for the NTP clients to synchronize their time with. To configure the UCM6200 as the NTP server, set "Enable NTP server" to "Yes" under web GUI->**Settings**->**NTP Server**. On the client side, point the NTP server address to the UCM6200 IP address or host name to use the UCM6200 as the NTP server.

Recordings Storage

The UCM6200 supports call recordings automatically or manually and the recording files can be saved in external storage plugged in the UCM6200 or on the UCM6200 locally. To manage the recording storage, users can go to UCM6200 web GUI->**Settings**->**Recordings Storage** page and select whether to store the recording files in USB Disk, SD card or locally on the UCM6200.



Figure 64: Settings->Recordings Storage

- If "Enable Auto Change" is selected, the recording files will be automatically saved in the available USB Disk
 or SD card plugged into the UCM6200. If both USB Disk and SD card are plugged in, the recording files will
 be always saved in the USB Disk.
- If "Local" is selected, the recordings will be stored in UCM6200 internal storage.
- If "USB Disk" or "SD Card" is selected, the recordings will be stored in the corresponding plugged in external storage device. Please note the options "USB Disk" and "SD Card" will be displayed only if they are plugged into the UCM6200.





Once "USB Disk" or "SD Card" is selected, click on "OK". The user will be prompted to confirm to copy the local files to the external storage device.

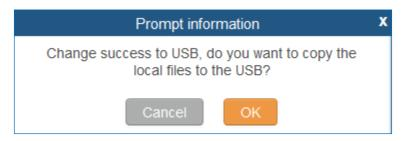


Figure 65: Recordings Storage Prompt Information

Click on "OK" to continue. The users will be prompted a new dialog to select the categories for the files to be copied over.

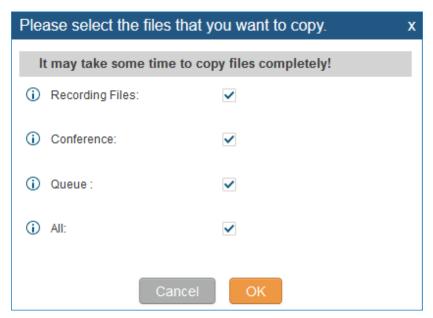


Figure 66: Recording Storage Category

On the UCM6200, recording files are generated and exist in 3 categories: normal call recording files, conference recording files, and call queue recording files. Therefore, users have the following options when select the categories to copy the files to the external device:

- Recording Files: Copy the normal recording files to the external device.
- Conference: Copy the conference recording files to the external device.
- Queue: Copy the call queue recording files to the external device.
- All: Copy all recording files to the external device.





Login Settings

After the user logs in the UCM6200 web UI, the user will be automatically logged out after certain timeout, or he/she can be banned for a specific period if the login timeout is exceeded. Those values can be specified under UCM6200 web GUI->Settings->Login Timeout Settings page.

The "**User Login Timeout**" value is in minute and the default setting is 10 minutes. If the user doesn't make any operation on web UI within the timeout, the user will be logged out automatically. After that, the web UI will be redirected to the login page and the user will need to enter username and password to log in.

If set to 0, there is no timeout for the web UI login session and the user will not be automatically logged out.

"User max number of try login" can prevent the UCM6200 from brutal force decryption, if this number is exceeded user IP address will be banned from accessing the UCM for a period of time based on user configuration, the default value is 5.

"User prevent login time" specify the period of time in minutes an IP will banned from accessing the UCM if the User max number of try login is exceeded, the default value is 5.

"Login Banned User List" show the list of IP's banned from the UCM.

"Login White List" User can add a list of IP's to avoid the above restriction, thus, they can exceed the User max number of try login.

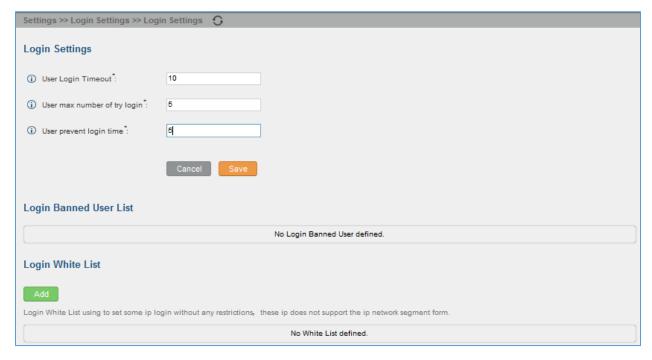


Figure 67: Login Timeout Settings





Google Service Settings Support

UCM6200 now supports Google OAuth 2.0 authentication. This feature is used for supporting UCM6200 conference scheduling system. Once OAuth 2.0 is enabled, UCM6200 conference system can access Google calendar to schedule or update conference.

Google Service Settings can be found under web GUI-> Settings-> Google Service Settings-> Google Service Settings.

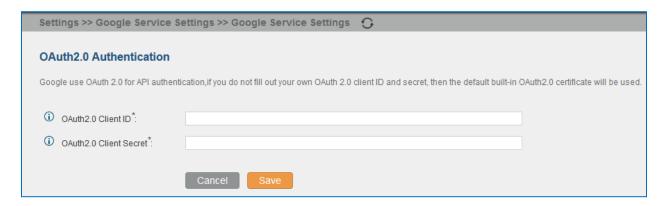


Figure 68: Google Service Settings->OAuth2.0 Authentication

If you already have OAuth2.0 project set up on **Google Developers** web page, please use your existing login credential for "OAuth2.0 Client ID" and "OAuth2.0 Client Secret" in the above figure for the UCM6200 to access Google Service.

If you do not have OAuth2.0 project set up yet, please following the steps below to create new project and obtain credentials:

Go to Google Developers page https://console.developers.google.com/start Create a New Project in Google Developers page.





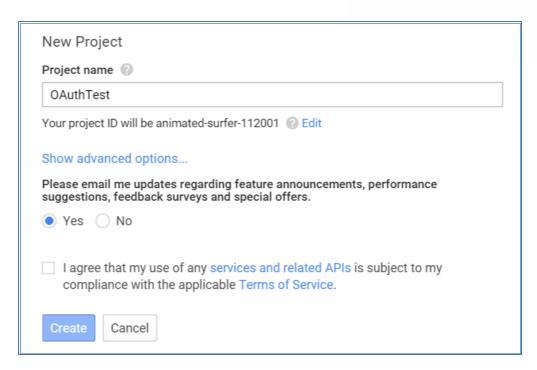


Figure 69: Google Service->New Project

- 2. Enable Calendar API from API Library.
- 3. Click "Credentials" on the left drop down menu to create new OAuth2.0 login credentials.

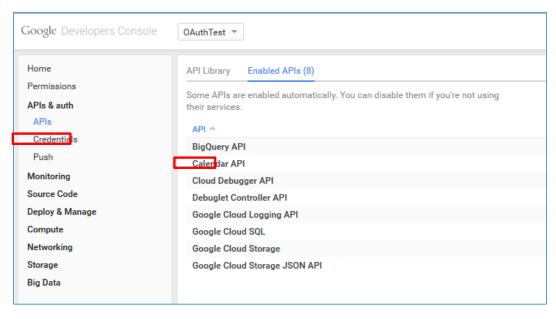


Figure 70: Google Service->Create New Credential

- 4. Use the newly created login credential to fill in "OAuth2.0 Client ID" and "OAuth2.0 Client Secret".
- 5. Click "Get Authentication Code" to obtain authentication code from Google Service.






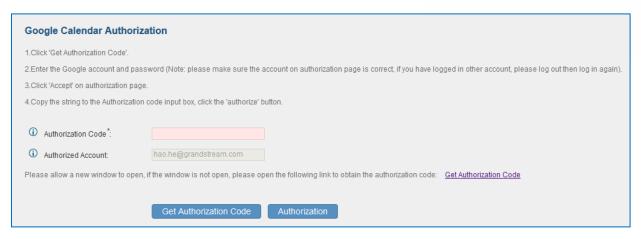


Figure 71: Google Service->OAuth2.0 Login

6. Now UCM6200 is connected with Google Service.

You can also configure the Status update, which refresh automatically your Google Calendar with the configured time (m). **Note:** Zero means disable.



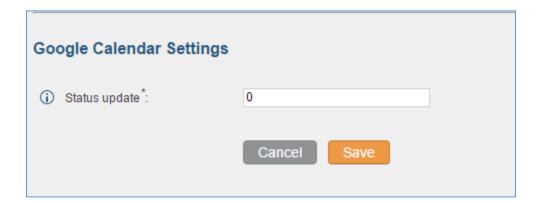



PROVISIONING

Overview

Grandstream SIP Devices can be configured via Web interface as well as via configuration file through TFTP/HTTP/HTTPS download. All Grandstream SIP devices support a proprietary binary format configuration file and XML format configuration file. The UCM6200 provides a Plug and Play mechanism to auto-provision the Grandstream SIP devices in a zero configuration manner by generating XML config file and having the phone to download it within LAN area. This allows users to finish the installation with ease and start using the SIP devices in a managed way.

To provision a phone, three steps are involved, i.e., discovery, configuration and provisioning. This section explains how Zero Config works on the UCM6200. The settings for this feature can be accessed via Web UI->PBX->Zero Config.

Configuration Architecture for End Point Device

Started from firmware version 1.0.7.10, the end point device configuration in zero config is divided into the following three layers with priority from the lowest to the highest:

- Global
 - This is the lowest layer. Users can configure the most basic options that could apply to all Grandstream SIP devices during provisioning via Zero config.
- Model
 In this layer, users can define model-specific options for the configuration template.
- Device

This is the highest layer. Users can configure device-specific options for the configuration for individual device here.

Each layer also has its own structure in different levels. Please see figure below. The details for each layer are explained in sections [Global configuration], [Model configuration] and [Device Configuration].





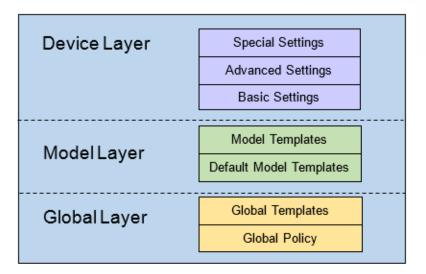


Figure 72: Zero Config Configuration Architecture for End Point Device

The configuration options in model layer and device layer have all the option in global layers already, i.e., the options in global layer is a subset of the options in model layer and device layer. If an option is set in all three layers with different values, the highest layer value will override the value in lower layer. For example, if the user selects English for Language setting in Global Policy and Spanish for Language setting in Default Model Template, the language setting on the device to be provisioned will use Spanish as model layer has higher priority than global layer. To sum up, configurations in higher layer will always override the configurations for the same options/fields in the lower layer when presented at the same time.

After understanding the zero config configuration architecture, users could configure the available options for end point devices to be provisioned by the UCM6200 by going through the three layers. This configuration architecture allows users to set up and manage the Grandstream end point devices in the same LAN area in a centralized way.

Auto Provisioning Settings

By default, the Zero Config feature is enabled on the UCM6200 for auto provisioning. Three methods of auto provisioning are used.





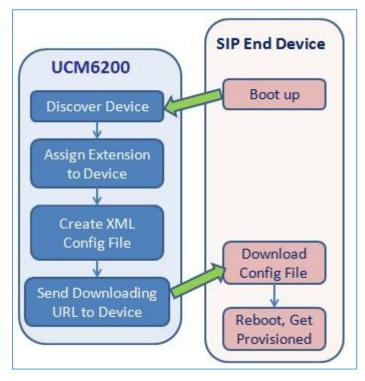


Figure 73: UCM6200 Zero Config

• SIP SUBSCRIBE

When the phone boots up, it sends out SUBSCRIBE to a multicast IP address in the LAN. The UCM6200 discovers it and then sends a NOTIFY with the XML config file URL in the message body. The phone will then use the path to download the config file generated in the UCM6200 and take the new configuration.

DHCP OPTION 66

Route mode need to be set to use this feature. When the phone restarts (by default DHCP Option 66 is turned on), it will send out a DHCP DISCOVER request. The UCM6200 receives it and returns DHCP OFFER with the config server path URL in Option 66, for example, https://192.168.2.1:8089/zccgi/. The phone will then use the path to download the config file generated in the UCM6200.

mDNS

When the phone boots up, it sends out mDNS query to get the TFTP server address. The UCM6200 will respond with its own address. The phone will then send TFTP request to download the XML config file from the UCM6200.

To start the auto provisioning process, under Web GUI->PBX->Zero Config->Zero Config Settings, fill in the auto provision information.





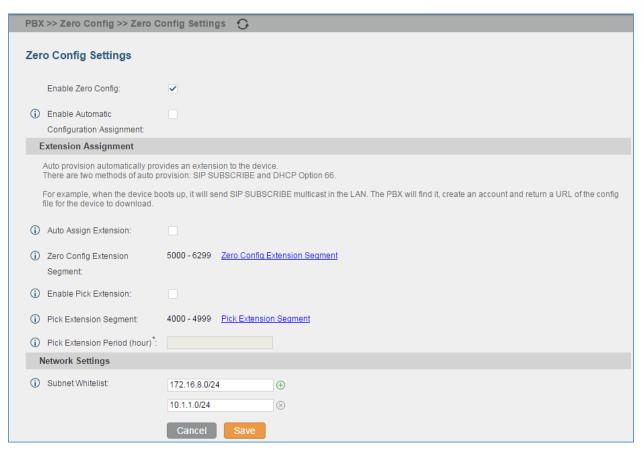


Figure 74: Auto Provision Settings

Table 25: Auto Provision Settings

Enable Zero Config	Enable or disable the zero config feature on the PBX. The default setting is enabled.
Enable Automatic Configuration Assignment	By default, this is disabled. If disabled, when SIP device boots up, the UCM6200 will not send the SIP device the URL to download the config file and therefore the SIP device will not be automatically provisioned by the UCM6200. Note: When disabled, SIP devices can still be provisioned by manually sending NOTIFY from the UCM6200 which will include the XML config file URL for the SIP device to download.
Automatically Assign Extension	If enabled, when the device is discovered, the PBX will automatically assign an extension within the range defined in "Zero Config Extension Segment" to the device. The default setting is disabled.
Zero Config Extension Segment	Click on the link "Zero Config Extension Segment" to specify the extension range to be assigned if "Automatically Assign Extension" is enabled. The default range is 5000-6299. Zero Config Extension Segment range can be





	defined in web UI-> PBX->Internal Options->General page->Extension Preference section: "Auto Provision Extensions".
Enable Pick Extension	If enabled, the extension list will be sent out to the device after receiving the device's request. This feature is for the GXP series phones that support selecting extension to be provisioned via phone's LCD. The default setting is disabled.
Pick Extension Segment	Click on the link "Pick Extension Segment" to specify the extension list to be sent to the device. The default range is 4000 to 4999. Pick Extension Segment range can be defined in web UI->PBX->Internal Options->General page->Extension Preference section: "Pick Extensions".
Pick Extension Period (hour)	Specify the number of minutes to allow the phones being provisioned to pick extensions.
Subnet Whitelist	This feature allows the UCM to provision devices in different subnets. The devices in the Subnet Whitelist can be provisioned via UCM zero config.

Please make sure an extension is manually assigned to the phone or "Automatically Assign Extension" is enabled during provisioning. After the configuration on the UCM6200 web GUI, click on "Save" and "Apply Changes". Once the phone boots up and picks up the config file from the UCM6200, it will take the configuration right away.

Discovery

Users could manually discover the device by specifying the IP address or scanning the entire LAN network. Three methods are supported to scan the devices.

- PING
- ARP
- SIP Message (NOTIFY)

Click on "Auto Discover" under web **UI-> PBX-> Zero Config.>Zero Config.**, fill in the "Scan Method" and "Scan IP". The IP address segment will be automatically filled in based on the network mask detected on the UCM6200. If users need scan the entire network segment, enter 255 (for example, 192.168.40.255) instead of a specific IP address. Then click on "Save" to start discovering the devices within the same network. To successfully discover the devices, "Zero Config" needs to be enabled on the UCM6200 web GUI->**PBX->Zero Config->Auto Provisioning Settings**.





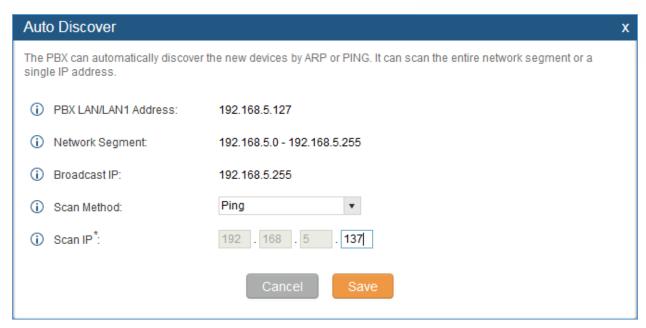


Figure 75: Auto Discover

The following figure shows a list of discovered phones. The MAC address, IP Address, Extension (if assigned), Version, Vendor, Model, Connection Status, Create Config, Options (Edit /Delete /Update /Reboot /Access Device WebGUI) are displayed in the list.

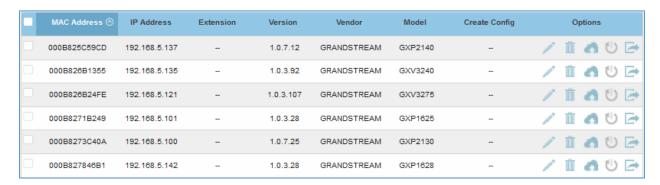


Figure 76: Discovered Devices

Global configuration

Global policy

Global configuration will apply to all the connected Grandstream SIP end point devices in the same LAN with the UCM6200 no matter what the Grandstream device model it is. It is divided into two levels:

- Web UI->PBX->Zero Config->Global Policy
- Web UI->PBX->Zero Config->Global Templates.





• Global Templates configuration has higher priority to Global Policy configuration.

Global Policy can be accessed in web GUI->PBX->Zero Config->Global Policy page. On the top of the configuration table, users can select category in the "Options" dropdown list to quickly navigate to the category. The categories are:

- Localization: configure display language, data and time.
- Phone Settings: configure dial plan, call features, NAT, call progress tones and etc.
- Contact List: configure LDAP and XML phonebook download.
- Maintenance: configure upgrading, web access, Telnet/SSH access and syslog.
- Network Settings: configure IP address, QoS and STUN settings.
- Customization: customize LCD screen wallpaper for the supported models.

Select the checkbox on the left of the parameter you would like to configure to active the dropdown list for this parameter.

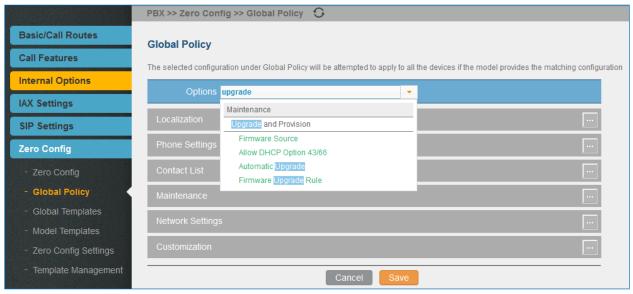


Figure 77: Global Policy Categories

The following tables list the Global Policy configuration parameters for the SIP end device.

Table 26: Global Policy Parameters->Localization

Language settings	
Language	Select the LCD display language on the SIP end device.
Date and Time	
Date Format	Configure the date display format on the SIP end device's LCD.
Time Format	Configure the time display in 12-hour or 24-hour format on the SIP end device's





	LCD.
NTP Server	Configure the URL or IP address of the NTP server. The SIP end device may obtain the date and time from the server.
Time Zone	Configure the time zone used on the SIP end device.

Table 27: Global Policy Parameters->Phone Settings

Default Call Settings	
Dial Plan	Configure the default dial plan rule. For syntax and examples, please refer to user manual of the SIP devices to be provisioned for more details.
Enable Call Features	When enabled, "Do Not Disturb", "Call Forward" and other call features can be used via the local feature code on the phone. Otherwise, the ITSP feature code will be used.
Use # as Dial Key	If set to "Yes", pressing the number key "#" will immediately dial out the input digits.
Auto Answer by Call- info	If set to "Yes", the phone will automatically turn on the speaker phone to answer incoming calls after a short reminding beep, based on the SIP Call-Info header sent from the server/proxy. The default setting is enabled.
NAT Traversal	Configure which NAT traversal mechanism will be enabled on the endpoint device. If set to "STUN" and STUN server is configured, the phone system will periodically send STUN message to the SUTN server to get the public IP address of its NAT environment and keep the NAT port open. STUN will not work if the NAT is symmetric type. If set to "Keep-alive", the phone system will send the STUN packets to maintain the connection that is first established during registration of the phone. The "Keep-alive" packets will fool the NAT device into keeping the connection open and this allows the host server to send SIP requests directly to the registered phone. If it needs to use OpenVPN to connect host server, it needs to set it to "VPN". If the firewall and the SIP device behind the firewall are both able to use UPNP, it can be set to "UPNP". The both parties will negotiate to use which port to allow SIP through. The default setting is "Keep-alive".
Use Random Port	Configure whether to allow the endpoint device to use random ports for both SIP and RTP messages. This is usually necessary when multiple phones are behind the same full cone NAT. The default setting is "No". Note: This parameter must be set to "No" for Direct IP Calling to work.





General Settings	
Call Progress Tones	Configure call progress tones including ring tone, dial tone, second dial tone, message waiting tone, ring back tone, call waiting tone, busy tone and reorder tone using the following syntax: f1=val, f2=val[, c=on1/ off1[- on2/ off2[- on3/ off3]]]; Frequencies are in Hz and cadence on and off are in 10ms). "on" is the period (in ms) of ringing while "off" is the period of silence. Up to three cadences are supported. Please refer to user manual of the SIP devices to be provisioned for more details
HEADSET Key Mode	Select "Default Mode" or "Toggle Headset/Speaker" for the Headset key. Please refer to user manual of the SIP devices to be provisioned for more details.

Table 28: Global Policy Parameters->Contact List

LDAP Phonebook	
Source	 Select "Manual" or "PBX" as the LDAP configuration source. If "Manual" is selected, the LDAP configuration below will be applied to the SIP end device. If "PBX" is selected, the LDAP configuration built-in from UCM6200 web UI->Settings->LDAP Server will be applied.
Address	Configure the IP address or DNS name of the LDAP server.
Port	Configure the LDAP server port. The default value is 389.
Base DN	This is the location in the directory where the search is requested to begin. Example: dc=grandstream, dc=com ou=Boston, dc=grandstream, dc=com
User Name	Configure the bind "Username" for querying LDAP servers. The field can be left blank if the LDAP server allows anonymous binds.
Password	Configure the bind "Password" for querying LDAP servers. The field can be left blank if the LDAP server allows anonymous binds.
Number Filter	Configure the filter used for number lookups. Please refer to user manual for more details.
Name Filter	Configure the filter used for name lookups. Please refer to user manual for more details.
Version	Select the protocol version for the phone to send the bind requests. The default value is 3.
Name Attribute	Specify the "name" attributes of each record which are returned in the LDAP





•	earch result. Example: gn cn sn description
	pecify the "number" attributes of each record which are returned in the LDAP earch result. Example: telephoneNumber telephoneNumber Mobile
	configure the entry information to be shown on phone's LCD. Up to 3 fields an be displayed. Example: %cn %sn %telephoneNumber
Max Hits	pecify the maximum number of results to be returned by the LDAP server. alid range is 1 to 3000. The default value is 50.
Search Timeout	pecify the interval (in seconds) for the server to process the request and client value for server to return. Valid range is 0 to 180. The default value is 30.
Sort Results	pecify whether the searching result is sorted or not. he default setting is No.
Incoming Calls	configure to enable LDAP number searching when receiving calls. The default etting is No.
Outgoing Calls	configure to enable LDAP number searching when making calls. The default etting is No.
Lookun Display Name	configures the display name when LDAP looks up the name for incoming call routgoing call. It must be a subset of the LDAP Name Attributes.
XML Phonebook	
Phonebook XML Server	Disable Disable phonebook XML downloading. Manual Once selected, users need specify downloading protocol HTTP, HTTPS or TFTP and the server path to download the phonebook XML file. The server path could be IP address or URL, with up to 256 characters. Local UCM Server Once selected, click on the Server Path field to upload the phonebook XML file. Please note: after uploading the phonebook XML file to the server, the original file name will be used as the directory name and the file will be renamed as phonebook.xml under that directory.
	configure the phonebook download interval (in Minute). If set to 0, automatic ownload will be disabled. Valid range is 5 to 720.





Remove manually-edited entries on download

If set to "Yes", when XML phonebook is downloaded, the entries added manually will be automatically removed.

Table 29: Global Policy Parameters->Maintenance

Upgrade and Provision	
Firmware Source	Firmware source via ZeroConfig provisioning could a URL for external server address, local UCM directory or USB media if plugged in to the UCM6200. Select a source to get the firmware file: URL If select to use URL to upgrade, complete the configuration for the following four parameters: "Upgrade Via", "Server Path", "File Prefix" and "File Postfix". Local UCM Server Firmware can be uploaded to the UCM6200 internal storage for firmware upgrade. If selected, click on "Manage Storage" icon next to "Directory" option, upload firmware file and select directory for the end device to retrieve the firmware file. Local USB Media If selected, the USB storage device needs to be plugged into the UCM6200 and the firmware file must be put under a folder named "ZC_firmware" in the USB storage root directory. Local SD Card Media If selected, an SD card needs to be plugged into the UCM6200 and the firmware file must be put under a folder named "ZC_firmware" in the USB storage root directory.
Upgrade via	When URL is selected as firmware source, configure upgrade via TFTP, HTTP or HTTPS.
Server Path	When URL is selected as firmware source, configure the firmware upgrading server path.
File Prefix	When URL is selected as firmware source, configure the firmware file prefix. If configured, only the firmware with the matching encrypted prefix will be downloaded and flashed into the phone, if URL is selected as firmware source.
File Postfix	When URL is selected as firmware source, configure the firmware file postfix. If configured, only the configuration file with the matching encrypted postfix will be downloaded and flashed into the phone.
Allow DHCP Option 43/66	If DHCP option 43 or 66 is enabled on the LAN side, the TFTP server can be redirected.
Automatic Upgrade	If enabled, the endpoint device will automatically upgrade if a new firmware is





	detected. Users can select automatic upgrading by day, by week or by minute.
	 By week Once selected, specify the day of the week to check HTTP/TFTP server
	for firmware upgrades or configuration files changes.
	By day
	Once selected, specify the hour of the day to check the HTTP/TFTP server
	for firmware upgrades or configuration files changes.
	By minute Once calcuted, anguist, the interval Y that the SIR and device will request.
	Once selected, specify the interval X that the SIP end device will request for new firmware every X minutes.
Firmware Upgrade Rule	Specify how firmware upgrading and provisioning request to be sent.
Web Access	about the state of
Admin Password	Configure the administrator password for admin level login.
End-User Password	Configure the end-user password for the end user level login.
Web Access Mode	Select HTTP or HTTPS as the web access protocol.
Web Server Port	Configure the port for web access. The valid range is 1 to 65535.
Security	
Coounty	Enable Telnet/SSH access for the SIP end device. If the SIP end device
	supports Telnet access, this option controls the Telnet access of the device; if
Disable Telnet/SSH	the SIP end device supports SSH access, this option controls the SSH access
	of the device.
Syslog	
Syslog Server	Configure the URL/IP address for the syslog server.
Syslog Level	Select the level of logging for syslog.
Send SIP Log	Configure whether the SIP log will be included in the syslog message.
	Table 30: Global Policy Parameters->Network Settings
Basic Settings	
	Configure how the SIP end device shall obtain the IP address. DHCP or PPPoE
	can be selected.
	• DHCP
ID Address	Once selected, users can specify the Host Name (option 12) of the SIP end
IP Address	device as DHCP client, and Vendor Class ID (option 60) used by the client and server to exchange vendor class ID information.
	PPPoE
	Once selected, users need specify the Account ID, Password and Service
	Name for PPPoE.
Advanced Setting	
Layer 3 QoS	Define the Layer 3 QoS parameter. This value is used for IP Precedence, Diff-





	Serv or MPLS. Valid range is 0-63.
Layer 2 QoS Tag	Assign the VLAN Tag of the Layer 2 QoS packets. Valid range is 0 -4095.
Layer 2 QoS Priority Value	Assign the priority value of the Layer 2 QoS packets. Valid range is 0-7.
STUN Server	Configure the IP address or Domain name of the STUN server. Only non-symmetric NAT routers work with STUN.
Keep Alive Interval	Specify how often the phone will send a blank UDP packet to the SIP server in order to keep the "ping hole" on the NAT router to open. Valid range is 10-160.

Table 31: Global Policy Parameters->Customization

Table 31: Global Policy Parameters->Customization	
Wallpaper	
Screen Resolution 1024 x 600	 Check this option if the SIP end device shall use 1024 x 600 resolution for the LCD screen wallpaper. Source Configure the location where wallpapers are stored. File If "URL" is selected as source, specify the URL of the wallpaper file. If "Local UCM Server" is selected as source, click to upload wallpaper file to the UCM6200.
Screen Resolution 800 x 400	 Check this option if the SIP end device shall use 800 x 400 resolution for the LCD screen wallpaper. Source Configure the location where wallpapers are stored. File If "URL" is selected as source, specify the URL of the wallpaper file. If "Local UCM Server" is selected as source, click to upload wallpaper file to the UCM6200.
Screen Resolution 480 x 272	 Check this option if the SIP end device shall use 480 x 272 resolution for the LCD screen wallpaper. Source Configure the location where wallpapers are stored. File If "URL" is selected as source, specify the URL of the wallpaper file. If "Local UCM Server" is selected as source, click to upload wallpaper file to the UCM6200.
Screen Resolution 320 x 240	Check this option if the SIP end device supports 320 x 240 resolution for the LCD screen wallpaper. • Source Configure the location where wallpapers are stored.





File
 If "URL" is selected as source, specify the URL of the wallpaper file. If "Local UCM Server" is selected as source, click to upload wallpaper file to the UCM6200.

Global Templates

Global Templates can be accessed in web GUI->PBX->Zero Config->Global Templates. Users can create multiple global templates with different sets of configurations and save the templates. Later on, when the user configures the device in Edit Device dialog->Advanced Settings, the user can select to use one of the global template for the device. Please refer to section [Manage Devices] for more details on using the global templates.

When creating global template, users can select the categories and the parameters under each category to be used in the template. The global policy and the selected global template will both take effect when generating the config file. However, the selected global template has higher priority to the global policy when it comes to the same setting option/field. If the same option/field has different value configured in the global policy and the selected global template, the value for this option/field in the selected global template will override the value in global policy.

Click on "Create New Template" to add a global template. Users will see the following configurations.

Table 32: Create New Template

Template Name	Create a name to identify this global template.
Description	Provide a description for the global template. This is optional.
Active	Check this option to enable the global template.

Click on

to edit the global template.

The window for editing global template is shown in the following figure. In the "Options" field, after entering the option name key word, the options containing the key word will be listed. Users could then select the options to be modified and click on "Add Option" to add it into the global template.





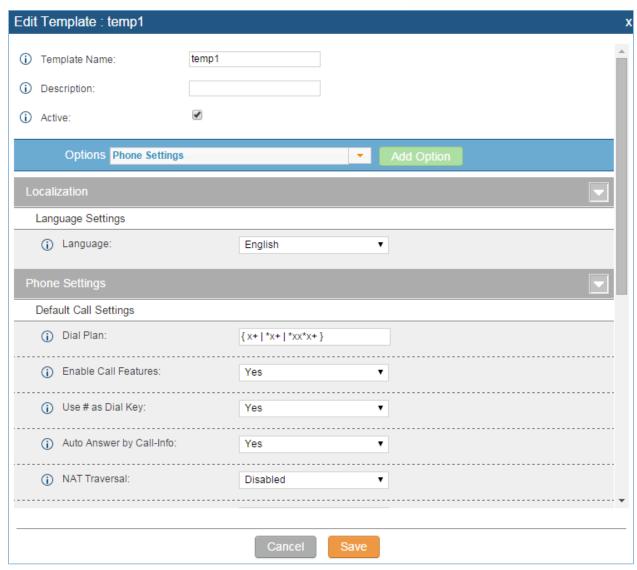


Figure 78: Edit Global Template

The added options will show in the list. Users can then enter or select value for each option to be used in the global template. On the left side of each added option, users can click on to remove this option from the template. On the right side of each option, users can click on to reset the option value to the default value.

Click on "Save" to save this global template.

• The created global templates will show in the web UI->PBX->Zero Config->Global Templates page. Users can click on to delete the global template or click on "Delete Selected Templates" to delete multiple selected templates at once.





• Click on "Toggle Selected Template(s)" to toggle the status between enabled/disabled for the selected templates.

Model configuration

Model templates

Model layer configuration allows users to apply model-specific configurations to different devices. Users could create/edit/delete a model template by accessing web GUI, page **PBX->Zero Config->Model Templates**. If multiple model templates are created and enabled, when the user configures the device in Edit Device dialog->Advanced Settings, the user can select to use one of the model template for the device. Please refer to section [Manage Devices] for more details on using the model template.

For each created model template, users can assign it as default model template. If assigned as default model template, the values in this model template will be applied to all the devices of this model. There is always only one default model template that can be assigned at one time on the UCM6200.

The selected model template and the default model template will both take effect when generating the config file for the device. However, the model template has higher priority to default model template when it comes to the same setting option/field. If the same option/field has different value configured in the default model template and the selected model template, the value for this option/field in the selected model template will override the value in default model template.

Click on "Create New Template" to add a model template.

Table 33: Create New Model Template

Model	Select a model to apply this template. The supported Grandstream models are listed in the dropdown list for selection.
Template Name	Create a name for the model template.
Description	Enter a description for the model template. This is optional.
Default Model Template	Select to assign this model template as the default model template. The value of the option in default model template will be overridden if other selected model template has a different value for the same option.
Active	Check this option to enable the model template.

Click on

to edit the model template.

The editing window for model template is shown in the following figure. In the "Options" field, enter the option name key word, the option that contains the key word will be listed. User could then select the option and click on "Add Option" to add it into the model template.





Once added, the option will be shown in the list below. On the left side of each option, users can click on to remove this option from the model template. On the right side of each option, users can click on to reset the option to the default value.

User could also click on "Add New Field" to add a P value number and the value to the configuration. The following figure shows setting P value "P1362" to "en", which means the display language on the LCD is set to English. For P value information of different models, please refer to configuration template here http://www.grandstream.com/support/tools.

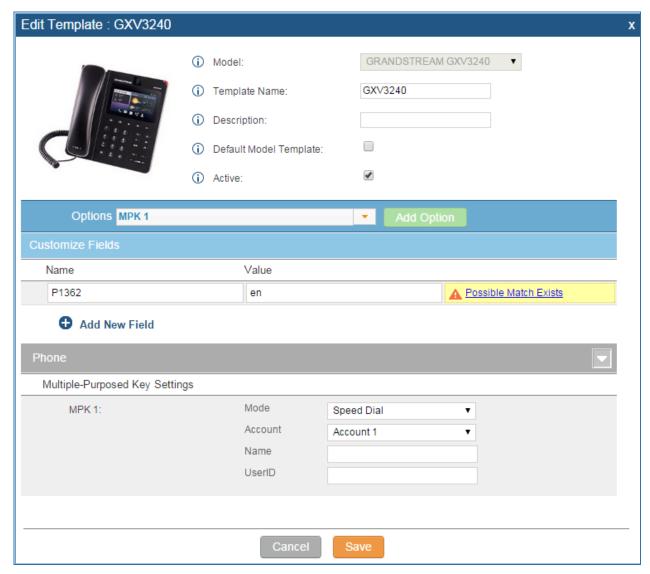


Figure 79: Edit Model Template

Click on Save when done. The model template will be displayed on web UI->PBX->Zero Config->Model
 Templates page.





- Click on to delete the model template or click on "Delete Selected Templates" to delete multiple selected templates at once.
- Click on "Toggle Selected Template(s)" to toggle the status between enabled/disabled for the selected model templates.

Model Update

UCM6200 zero config feature supports provisioning all models of Grandstream SIP end devices. Templates for most of the Grandstream models are built in with the UCM6200 already. Templates for GS Wave and Grandstream surveillance products require users to download and install under web UI->PBX->Zero Config->Model Update first before they are available in the UCM6200 for selection. After downloading and installing the model template to the UCM6200, it will show in the dropdown list for "Model" selection when editing the model template.

- Click on to download the template.
- Click on to upgrade the model template. Users will see this icon available if the device model has template updated in the UCM6200.

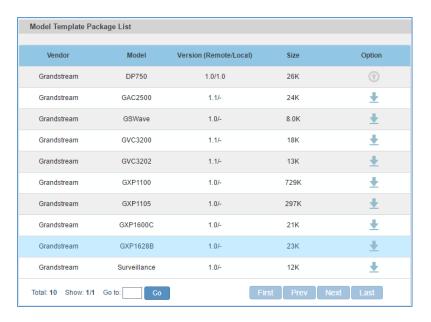


Figure 80: Template Management

In case the UCM6200 is placed in the private network and Internet access is restricted, users will not be able to get packages by downloading and installing from the remote server. Model template package can be manually uploaded from local device through web UI. Please contact Grandstream customer support if the model package





is needed for manual uploading.



Figure 81: Upload Model Template Manually

Device Configuration

On web GUI, page **PBX->Zero Config->Zero Config**, users could create new device, delete existing device(s), make special configuration for a single device, or send NOTIFY to existing device(s).

Create New Device

Besides configuring the device after the device is discovered, users could also directly create a new device and configure basic settings before the device is discovered by the UCM6200. Once the device is plugged in, it can then be discovered and provisioned. This gives the system administrator adequate time to set up each device beforehand.

Click on "Create New Device" and the following dialog will show. Follow the steps below to create the configurations for the new device.

- 1. Firstly, select a model for the device to be created and enter its MAC address, IP address and firmware version (optional) in the corresponding field.
- 2. Basic settings will show a list of settings based on the model selected in step 1. Users could assign extensions to accounts, assign functions to Line Keys and Multiple-Purposed Keys if supported on the selected model.
- 3. Click on "Create New Device" to save the configuration for this device.





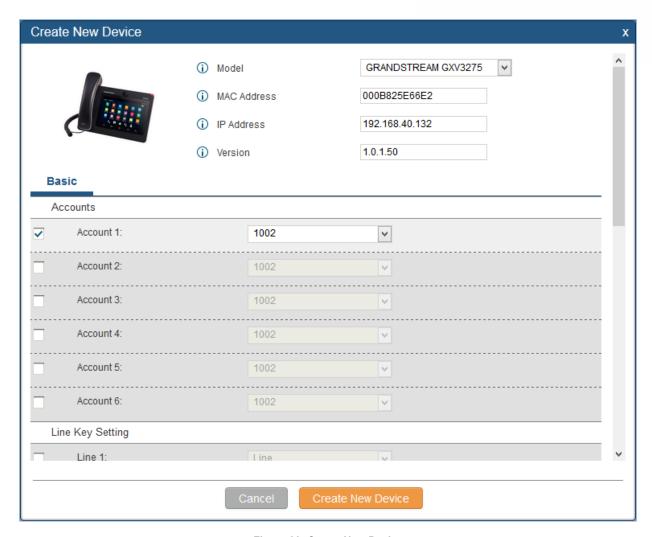


Figure 82: Create New Device

Manage Devices

The device manually created or discovered from Auto Discover will be listed in the web UI->PBX->Zero Config->Zero Config page. Users can see the devices with their MAC address, IP address, vendor, model and etc.



Figure 83: Manage Devices

- Click on to access the web UI of the phone.
- Click on

 to edit the device configuration.





A new dialog will be displayed for the users to configure "Basic" settings and "Advanced" settings. "Basic" settings have the same configurations as displayed when manually creating a new device, i.e., account, line key and MPK settings; "Advanced" settings allow users to configure more details in a five-level structure.

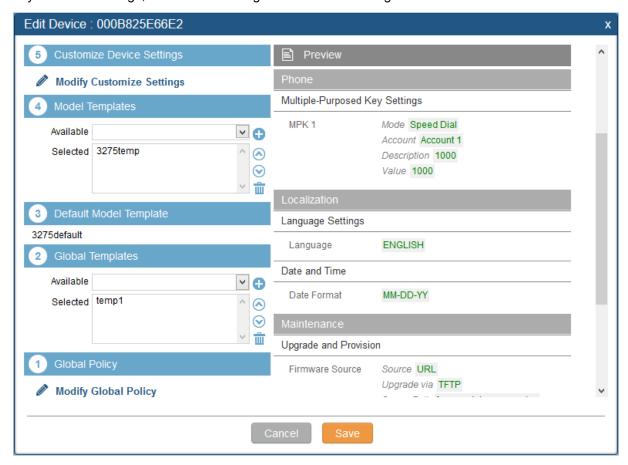


Figure 84: Edit Device

A preview of the "Advanced" settings is shown in the above figure. There are five levels configurations as described in (1) (2) (3) (4) (5) below, with priority from the lowest to the highest. The configurations in all levels will take effect for the device. If there are same options existing in different level configurations with different value configured, the higher level configuration will override the lower level configuration.

(1) Global Policy

This is the lowest level configuration. The global policy configured in web UI->PBX->Zero Config->Global Policy will be applied here. Clicking on "Modify Global Policy" to redirect to page PBX->Zero Config->Global Policy.

(2) Global Templates





Select a global template to be used for the device and click on to add. Multiple global templates can be selected and users can arrange the priority by adjusting orders via and . All the selected global templates will take effect. If the same option exists on multiple selected global templates, the value in the template with higher priority will override the one in the template with lower priority. Click on to remove the global template from the selected list.

(3) Default Model Template

Default Model Template will be applied to the devices of this model. Default model template can be configured in model template under web UI->PBX->Zero Config->Model Templates page. Please see default model template option in [Table 33: Create New Model Template].

(4) Model Templates

Select a model template to be used for the device and click on to add. Multiple global templates can be selected and users can arrange the priority by adjusting orders via and . All the selected model templates will take effect. If the same option exists on multiple selected model templates, the value in the template with higher priority will override the one in the template with lower priority. Click on

u to remove the model template from the selected list.

(5) Customize Device Settings

This is the highest level configuration for the device. Click on "Modify Customize Device Settings" and following dialog will show.





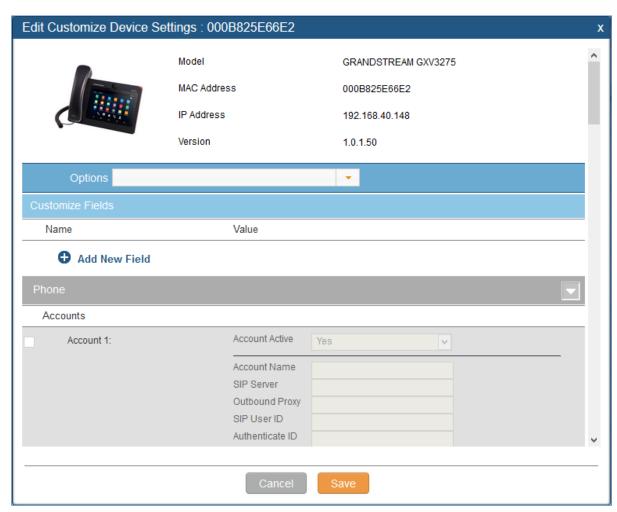


Figure 85: Edit Customize Device Settings

Scroll down in the dialog to view and edit the device-specific options. If the users would like to add more options which are not in the pre-defined list, click on "Add New Field" to add a P value number and the value to the configuration. The following figure shows setting P value "P1362" to "en", which means the display language on the LCD is set to English. The warning information on right tells that the option matching the P value number exists and clicking on it will lead to the matching option. For P value information of different models, please refer to configuration template here http://www.grandstream.com/sites/default/files/Resources/config-template.zip.





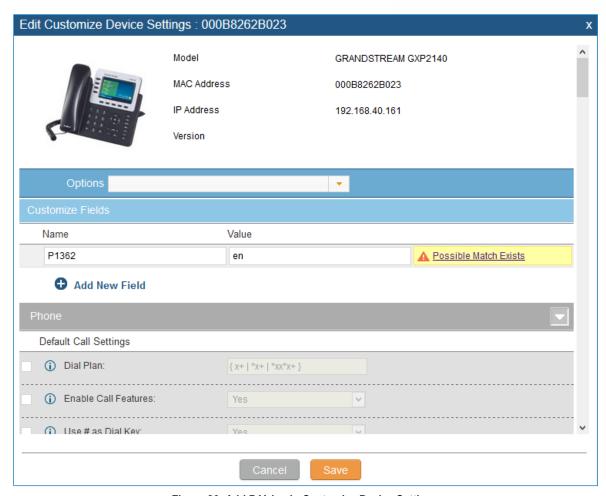


Figure 86: Add P Value in Customize Device Settings

 Select multiple devices that need to be modified and then click on modify devices.

Modify Selected Devices
to batch

If selected devices are of the same model, the configuration dialog is like the following figure. Configurations in five levels are all available for users to modify.





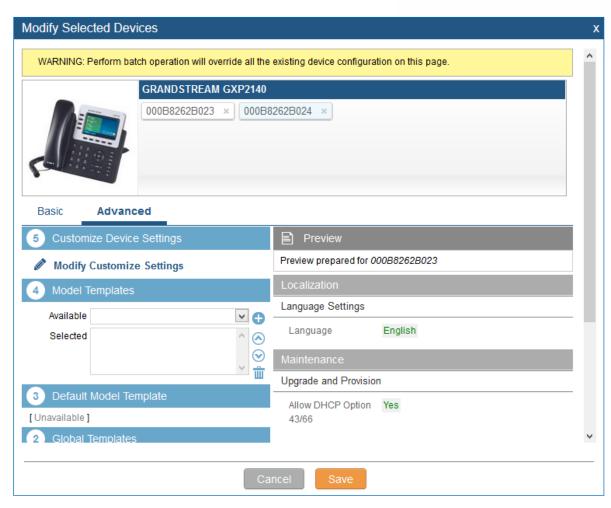


Figure 87: Modify Selected Devices - Same Model

If selected devices are of different models, the configuration dialog is like the following figure. Click on to view more devices of other models. Users are only allowed to make modifications in Global Templates and Global Policy level.





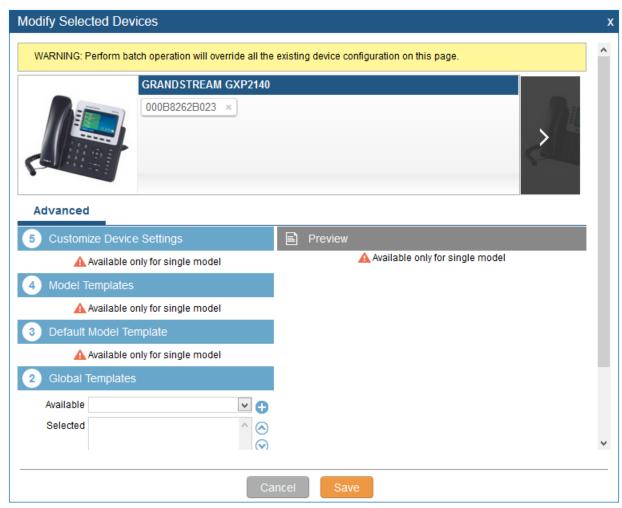


Figure 88: Modify Selected Devices - Different Models

⚠ Note:

Performing batch operation will override all the existing device configuration on the page.

.....

After the above configurations, save the changes and go back to web UI->PBX->Zero Config->Zero Config page. Users could then click on to send NOTIFY to the SIP end point device and trigger the provisioning process. The device will start downloading the generated configuration file from the URL contained in the NOTIFY message.





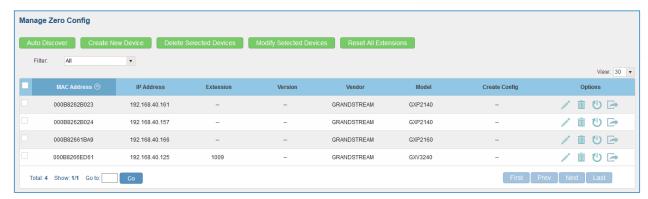


Figure 89: Device List in Zero Config

In this web page, users can also click on "Reset All Extensions" to reset the extensions of all the devices.

Sample Application

Assuming in a small business office where there are 8 GXP2140 phones used by customer support and 1 GXV3275 phone used by customer support supervisor. 3 of the 8 customer support members speak Spanish and the rest speak English. We could deploy the following configurations to provisioning the office phones for the customer support team.

- 1. Go to web GUI->PBX->Zero Config->Zero Config Settings, select "Enable Zero Config".
- 2. Go to web GUI->PBX->Zero Config->Global Policy, configure Date Format, Time Format and Firmware Source as follows.





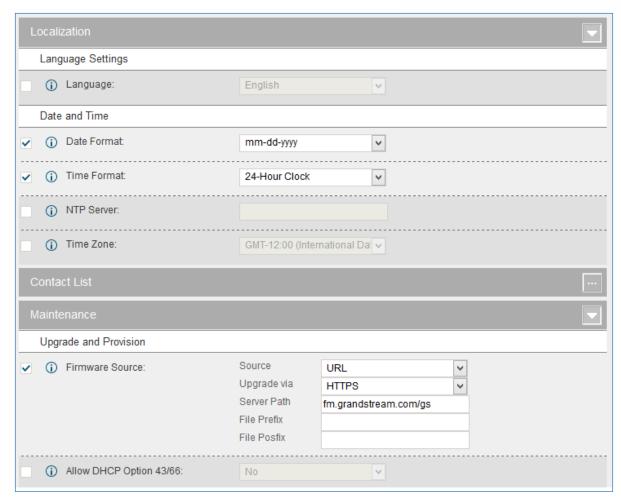


Figure 90: Zero Config Sample - Global Policy

- 3. Go to web GUI->PBX->Zero Config->Model Templates, create a new model template "English Support Template" for GXP2140. Add option "Language" and set it to "English". Then select the option "Default Model Template" to make it the default model template.
- 4. Go to web GUI->PBX->Zero Config->Model Templates, create another model template "Spanish Support Template" for GXP2140. Add option "Language" and set it to "Español".
- 5. After 9 devices are powered up and connected to the LAN network, use "Auto Discover" function or "Create New Device" function to add the devices to the device list on web UI->PBX->Zero Config.
- On web GUI->PBX->Zero Config->Zero Config page, users could identify the devices by their MAC addresses or IP addresses displayed on the list. Click on / to edit the device settings.





7. For each of the 5 phones used by English speaking customer support, in "Basic" settings select an available extension for account 1 and click on "Save". Then click on "Advanced" settings tab to bring up the following dialog. Users will see the English support template is applied since this is the default model template. A preview of the device settings will be listed on the right side.

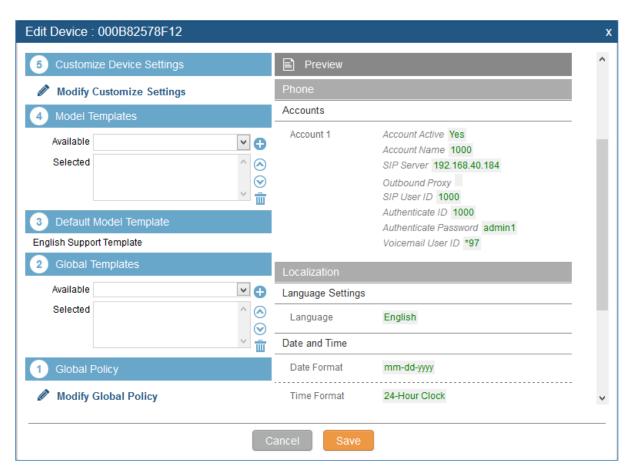


Figure 91: Zero Config Sample - Device Preview 1

8. For the 3 phones used by Spanish support, in "Basic" settings select an available extension for account 1 and click on "Save". Then click on "Advanced" settings tab to bring up the following dialog.





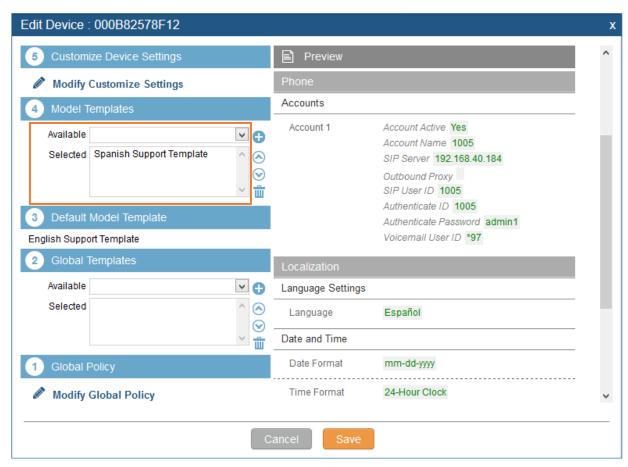


Figure 92: Zero Config Sample - Device Preview 2

Select "Spanish Support Template" in ④ "Model Template". The preview of the device settings is displayed on the right side and we can see the language is set to "Español" since Model Template has the higher priority for the option "Language", which overrides the value configured in default model template.

 For the GXV3275 used by the customer support supervisor, select an available extension for account 1 on "Basic" settings and click on "Save". Users can see the preview of the device configuration in "Advanced" settings. There is no model template configured for GXV3275.





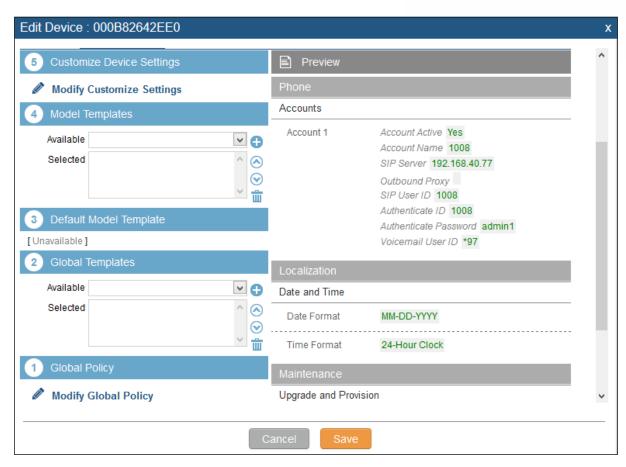


Figure 93: Zero Config Sample - Device Preview 3

- 10. Click on "Apply Changes" to apply saved changes.
- 11. On the web UI->PBX->Zero Config->Zero Config page, click on to send NOTIFY to trigger the device to download config file from UCM6200.

Now all the 9 phones in the network will be provisioned with an unique extension registered on the UCM6200. 3 of the phones will be provisioned to display Spanish on LCD and the other 5 will be provisioned to display English on LCD. The GXV3275 used by the supervisor will be provisioned to use the default language on LCD display since it's not specified in the global policy.





EXTENSIONS

Create new user

Create new SIP extension

To manually create new SIP user, go to Web GUI->PBX->Basic/Call Routes->Extensions. Click on "Create New User"->"Create New SIP Extension" and a new dialog window will show for users to fill in the extension information.

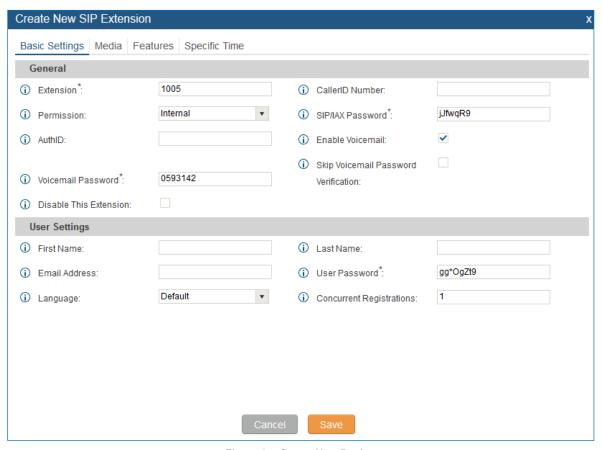


Figure 94: Create New Device

SIP extension options are divided into four categories:

- Basic Settings
- Media
- Features
- Specific Time

Click on the tag to view or edit options belonging to that category.

The configuration parameters are as follows.





Table 34: SIP Extension Configuration Parameters->Basic Settings

General	
Extension	The extension number associated with the user.
CallerID Number	Configure the CallerID Number that would be applied for outbound calls from this user. Note: The ability to manipulate your outbound Caller ID may be limited by your VoIP provider.
Permission	Assign permission level to the user. The available permissions are "Internal", "Local", "National" and "International" from the lowest level to the highest level. The default setting is "Internal". Note: Users need to have the same level as or higher level than an outbound rule's privilege in order to make outbound calls using this rule.
SIP/IAX Password	Configure the password for the user. A random secure password will be automatically generated. It is recommended to use this password for security purpose.
Auth ID	Configure the authentication ID for the user. If not configured, the extension number will be used for authentication.
Enable Voicemail	Enable voicemail for the user. The default setting is "Yes".
Voicemail Password	Configure voicemail password (digits only) for the user to access the voicemail box. A random numeric password is automatically generated. It is recommended to use the random generated password for security purpose.
Skip Voicemail Password Verification	When user dials voicemail code, the password verification IVR is skipped. If enabled, this would allow one-button voicemail access. By default this option is disabled.
Disable This Extension	If selected, this extension will be disabled on the UCM6200. Note: The disabled extension still exists on the PBX but can't be used on the end device.
User Settings	
First Name	Configure the first name of the user. The first name can contain characters, letters, digits and
Last Name	Configure the last name of the user. The last name can contain characters, letters, digits and $_$.
Email Address	Fill in the Email address for the user. Voicemail will be sent to this Email address.
User Password	Configure the password for user portal access. A random numeric password is automatically generated. It is recommended to use the randomly generated password for security purpose.
Language	Select the voice prompt language to be used for this extension. The default setting is "Default" which is the selected voice prompt language under web GUI-> PBX -





	>Internal Options->Language. The dropdown list shows all the current available voice prompt languages on the UCM6200. To add more languages in the list, please download voice prompt package by selecting "Check Prompt List" under web UI->PBX->Internal Options->Language.
Concurrent Registrations	The maximum endpoints which can be registered into this extension. For security concerns, the default value is 1.
Mobile Phone Number	Configure the phone number for the extension, user can type the related star code for phone number followed by the extension number to call directly this number. Example: user can type *881000 to call the mobile number associated with extension 1000.

Table 35: SIP Extension Configuration Parameters->Media

	• • • • • • • • • • • • • • • • • • • •
SIP Settings	
NAT	Use NAT when the UCM6200 is on a public IP communicating with devices hidden behind NAT (e.g., broadband router). If there is one-way audio issue, usually it's related to NAT configuration or Firewall's support of SIP and RTP ports. The default setting is enabled.
Can Direct Media	By default, the UCM6200 will route the media steams from SIP endpoints through itself. If enabled, the PBX will attempt to negotiate with the endpoints to route the media stream directly. It is not always possible for the UCM6200 to negotiate endpoint-to-endpoint media routing. The default setting is "No".
DTMF Mode	Select DTMF mode for the user to send DTMF. The default setting is "RFC2833". If "Info" is selected, SIP INFO message will be used. If "Inband" is selected, 64-kbit PCMU and PCMA are required. When "Auto" is selected, RFC2833 will be used if offered, otherwise "Inband" will be used.
TEL URI	If the phone has an assigned PSTN telephone number, this field should be set to "User=Phone". "User=Phone" parameter will be attached to the Request-Line and "TO" header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel" will be used instead of "SIP" in the SIP request.
Enable Keep-alive	If enabled, empty SDP packet will be sent to the SIP server periodically to keep the NAT port open. The default setting is "Yes".
Keep-alive Frequency	Configure the Keep-alive interval (in seconds) to check if the host is up. The default setting is 60 seconds.
Alert-Info	When present in an INVITE request, the alert-Info header field specifies and alternative ring tone to the UAS.
Enable T.38 UDPTL	Enable or disable T.38 UDPTL support.
SRTP	Enable SRTP for the call. The default setting is disabled.
Fax Mode	Select Fax mode. The default setting is "None".





	 None: Disable Fax. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38.
Strategy	 This option controls how the extension can be used on devices within different types of network. The default setting is "Allow All". Allow All Device in any network can register this extension. Local Subnet Only Only the user in specific subnet can register this extension. Up to three subnet addresses can be specified. A Specific IP Address Only the device on the specific IP address can register this extension.
Codec Preference	Select audio and video codec for the extension. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G,726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p and VP8.

Table 36: SIP Extension Configuration Parameters->Features

Call Transfer	
Call Forward Unconditional	Configure the Call Forward Unconditional target number. If not configured, the Call Forward Unconditional feature is deactivated. The default setting is deactivated.
CFU Time Condition	 Select time condition for Call Forward Unconditional. CFU takes effect only during the selected time condition. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
Call Forward No Answer	Configure the Call Forward No Answer target number. If not configured, the Call Forward No Answer feature is deactivated. The default setting is deactivated.
CFN Time Condition	Select time condition for Call Forward No Answer. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time





	 period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
Call Forward Busy	Configure the Call Forward Busy target number. If not configured, the Call Forward Busy feature is deactivated. The default setting is deactivated.
CFB Time Condition	 Select time condition for Call Forward Busy. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
Do Not Disturb	If enabled the extension will ignore all incoming calls
DND Time Condition	 Select time condition for Do Not Disturb. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
DND Whitelist	If DND is enabled, all calls to this extension will be rejected except the numbers listed on this list. Note: The maximum number on the Whitelist is 10.
CC Settings	
Enable CC	If enabled, UCM6200 will automatically alert this extension when a called party is available, given that a previous call to that party failed for some reason. By default it's disabled.
CC Mode	 Two modes for Call Completion are supported: Normal: This extension is used as ordinary extension. For Trunk: This extension is registered from a PBX. The default setting is "Normal".
CC Max Agents	Configure the maximum number of CCSS agents which may be allocated for this





	channel. In other words, this number serves as the maximum number of CC requests this channel is allowed to make. The minimum value is 1.
CC Max Monitors	Configure the maximum number of monitor structures which may be created for this device. In other words, this number tells how many callers may request CC services for a specific device at one time. The minimum value is 1.
Ring Simultaneously	y .
Ring Simultaneously	Enable this option to have an external number ring simultaneously along with the extension. If a register trunk is used for outbound, the register number will be used to be displayed for the external number as caller ID number.
External Number	Set the external number to be rang simultaneously. '-' is the connection character which will be ignored.
Time Condition for Ring Simultaneously	Ring the external number simultaneously along with the extension on the basis of this time condition.
Monitor privilege co	ntrol
Allowed to call- barging	Add members from "Available Extensions" to "Selected Extensions" so that the selected extensions can spy on the used extension using feature code.
Seamless transfer p	rivilege control
Allowed to seamless transfer	Any extensions on the UCM can perform seamless transfer. When using Pickup Incall feature, only extensions available on the "Selected Extensions" list can perform seamless transfer to the edited extension.
Other Settings	
Ring Timeout	Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under web GUI->Internal Options->IVR Prompt: General Preference. The valid range is between 5 seconds and 600 seconds. Note: If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.
Auto Record	Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.
Skip Trunk Auth	 If set to "yes", users can skip entering the password when making outbound calls. If set to "By Time", users can skip entering the password when making outbound calls during the selected time condition. If set to "No", users will be asked to enter the password when making outbound calls.
Time Condition for Skip Trunk Auth	If 'Skip Trunk Auth' is set to 'By Time', select a time condition during which users can skip entering password when making outbound calls.





Dial Trunk Password	Configure personal password when making outbound calls via trunk.
Support Hot- Desking Mode	If enabled, SIP Password will accept only alphabet characters and digits. Auth ID will be changed to the same as Extension.
Enable LDAP	If enabled, the extension will be added to LDAP Phonebook PBX list.
Enable WebRTC Support	Enable registration and call from WebRTC.
Music On Hold	Specify which Music On Hold class to suggest to the bridged channel when putting them on hold.
Call Duration Limit	The maximum duration of call-blocking.
Maximum Call Duration	The maximum call duration (in seconds). The default value 0 means no limit.
Custom Call-info for Auto Answer	If enabled, when a call is sent to this extension from UCM, the SIP INVITE message will contain a Call-info header indicating auto answer.

Table 37: SIP Extension Configuration Parameters->Specific Time

Specific Time	
Time Condition	Click to add Time Condition to configure specific time for this extension.

Create New IAX Extension

The UCM6200 supports Inter-Asterisk eXchange (IAX) protocol. IAX is used for transporting VoIP telephony sessions between servers and terminal devices. IAX is similar to SIP but also has its own characteristic. For more information, please refer to RFC 5465.

To manually create new IAX user, go to Web GUI->PBX->Basic/Call Routes->Extensions. Click on "Create New User"->"Create New IAX Extension" and a new dialog window will show for users to fill in the extension information. The configuration parameters are as follows.

Table 38: IAX Extension Configuration Parameters->Basic Settings

General	
Extension	The extension number associated with the user.
CallerID Number	Configure the CallerID Number that would be applied for outbound calls from this user.





	Note: The ability to manipulate your outbound Caller ID may be limited by your VoIP provider.
Permission	Assign permission level to the user. The available permissions are "Internal", "Local", "National" and "International" from the lowest level to the highest level. The default setting is "Internal". Note: Users need to have the same level as or higher level than an outbound rule's privilege in order to make outbound calls using this rule.
SIP/IAX Password	Configure the password for the user. A random secure password will be automatically generated. It is recommended to use this password for security purpose.
Enable Voicemail	Enable voicemail for the user. The default setting is "Yes".
Voicemail Password	Configure voicemail password (digits only) for the user to access the voicemail box. A random numeric password is automatically generated. It is recommended to use the random generated password for security purpose.
Skip Voicemail Password Verification	When user dials voicemail code, the password verification IVR is skipped. If enabled, this would allow one-button voicemail access. By default this option is disabled.
Disable This Extension	If selected, this extension will be disabled on the UCM6200. Note: The disabled extension still exists on the PBX but can't be used on the end device.
User Settings	
First Name	Configure the first name of the user. The first name can contain characters, letters, digits and $_$.
Last Name	Configure the last name of the user. The last name can contain characters, letters, digits and $_$.
Email Address	Fill in the Email address for the user. Voicemail will be sent to this Email address.
User Password	Configure the password for user portal access. A random numeric password is automatically generated. It is recommended to use the randomly generated password for security purpose.
Language	Select the voice prompt language to be used for this extension. The default setting is "Default" which is the selected voice prompt language under web GUI->PBX->Internal Options->Language. The dropdown list shows all the current available voice prompt languages on the UCM6200. To add more languages in the list, please download voice prompt package by selecting "Check Prompt List" under web UI->PBX->Internal Options->Language.

Table 39: IAX Extension Configuration Parameters->Media

SIP Settings	
Max Number of	Configure the maximum number of calls allowed for each remote IP address.
Calls	





Require Call Token	Configure to enable/disable requiring call token. If set to "Auto", it might lock out users who depend on backward compatibility when peer authentication credentials are shared between physical endpoints. The default setting is "Yes".
SRTP	Enable SRTP for the call. The default setting is disabled.
Fax Mode	 Select Fax Mode. The default setting is "None". None: Disable Fax. This is the default setting. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38.
Strategy	 This option controls how the extension can be used on devices within different types of network. Allow All Device in any network can register this extension. Local Subnet Only Only the user in specific subnet can register this extension. Up to three subnet addresses can be specified. A Specific IP Address Only the device on the specific IP address can register this extension. The default setting is "Allow All".
Codec Preference	Select audio and video codec for the extension. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G,726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p and VP8.

Table 40: IAX Extension Configuration Parameters->Features

Call Transfer	
Call Forward Unconditional	Configure the Call Forward Unconditional target number. If not configured, the Call Forward Unconditional feature is deactivated. The default setting is deactivated.
CFU Time	Select time condition for Call Forward Unconditional. CFU takes effect only during the selected time condition. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time
Condition	 Specific has higher phonty to Office Times in there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.





Call Forward No Answer	Configure the Call Forward No Answer target number. If not configured, the Call Forward No Answer feature is deactivated. The default setting is deactivated.
CFN Time Condition	 Select time condition for Call Forward No Answer. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
Call Forward Busy	Configure the Call Forward Busy target number. If not configured, the Call Forward Busy feature is deactivated. The default setting is deactivated.
CFB Time Condition	 Select time condition for Call Forward Busy. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
Ring Simultaneously	y
Ring Simultaneously	Enable this option to have an external number ring simultaneously along with the extension. If a register trunk is used for outbound, the register number will be used to be displayed for the external number as caller ID number.
External Number	Set the external number to be rang simultaneously. '-' is the connection character which will be ignored.
Time Condition for Ring Simultaneously	Ring the external number simultaneously along with the extension on the basis of this time condition.
Other Settings	
Ring Timeout	Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under web GUI->Internal Options->IVR Prompt: General Preference. The valid range is between 5 seconds and 600 seconds. Note:





	If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.
Auto Record	Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.
Skip Trunk Auth	 If set to "Yes", users can skip entering the password when making outbound calls. If set to "By Time", users can skip entering the password when making outbound calls during the selected time condition. If set to "No", users will be asked to enter the password when making outbound calls.
Time Condition for Skip Trunk Auth	If "Skip Trunk Auth" is set to "By Time", select a time condition during which users can skip entering password when making outbound calls.
Dial Trunk Password	Configure personal password when making outbound calls via trunk.
Enable LDAP	If enabled, the extension will be added to LDAP Phonebook PBX lists.
Music On Hold	Configure the Music On Hold class to suggest to the bridged channel when putting them on hold.
Call Duration Limit	The maximum duration of call-blocking.

Table 41: IAX Extension Configuration Parameters->Specific Time

Specific Time	
Time Condition	Click to add Time Condition to configure specific time for this extension.

Create New FXS Extension

The UCM6200 supports Foreign eXchange Subscriber (FXS) interface. FXS is used when user needs to connect analog phone lines or FAX machines to the UCM6200.

To manually create new FXS user, go to Web GUI->PBX->Basic/Call Routes->Extensions. Click on "Create New User"->"Create New FXS Extension" and a new dialog window will show for users to fill in the extension information. The configuration parameters are as follows.

Table 42: FXS Extension Configuration Parameters->Basic Settings

General	
Extension	The extension number associated with the user.
Analog Station	Select the FXS port to be assigned for this extension.
	Configure the CallerID Number that would be applied for outbound calls from this
Caller ID Number	user. Note:
	The ability to manipulate your outbound Caller ID may be limited by your VoIP





	provider.
Permission	Assign permission level to the user. The available permissions are "Internal", "Local", "National" and "International" from the lowest level to the highest level. The default setting is "Internal". Note: Users need to have the same level as or higher level than an outbound rule's privilege in order to make outbound calls using this rule.
Enable Voicemail	Enable voicemail for the user. The default setting is "Yes".
Voicemail Password	Configure voicemail password (digits only) for the user to access the voicemail box. A random numeric password is automatically generated. It is recommended to use the random generated password for security purpose.
Skip Voicemail Password Verification	When user dials voicemail code, the password verification IVR is skipped. If enabled, this would allow one-button voicemail access. By default this option is disabled.
Disable This Extension	If selected, this extension will be disabled on the UCM6200. Note: The disabled extension still exists on the PBX but can't be used on the end device.
User Settings	
First Name	Configure the first name of the user. The first name can contain characters, letters, digits and
Last Name	Configure the last name of the user. The last name can contain characters, letters, digits and
Email Address	Fill in the Email address for the user. Voicemail will be sent to this Email address.
User Password	Configure the password for user portal access. A random numeric password is automatically generated. It is recommended to use the randomly generated password for security purpose.
Language	Select the voice prompt language to be used for this extension. The default setting is "Default" which is the selected voice prompt language under web GUI->PBX->Internal Options->Language. The dropdown list shows all the current available voice prompt languages on the UCM6200. To add more languages in the list, please download voice prompt package by selecting "Check Prompt List" under web UI->PBX->Internal Options->Language.

Table 43: FXS Extension Configuration Parameters->Media

Analog Settings	
Call Waiting	Configure to enable/disable call waiting feature. The default setting is "No".
User '#' as SEND	If configured, the # key can be used as SNED key after dialing the number on the analog phone. The default setting is "Yes".





Configure the RX gain for the receiving channel of analog FXS port. The valid range
is -30dB to +6dB. The default setting is 0.
Configure the TX gain for the transmitting channel of analog FXS port. The valid range is -30dB to +6dB. The default setting is 0.
Configure the minimum period of time (in milliseconds) that the hook-flash must remain unpressed for the PBX to consider the event as a valid flash event. The valid range is 30ms to 1000ms. The default setting is 200ms.
Configure the maximum period of time (in milliseconds) that the hook-flash must remain unpressed for the PBX to consider the event as a valid flash event. The minimum period of time is 256ms and it can't be modified. The default setting is 1250ms.
If enabled, a polarity reversal will be marked as received when an outgoing call is answered by the remote party. For some countries, a polarity reversal is used for signaling the disconnection of a phone line and the call will be considered as hangup on a polarity reversal. The default setting is "Yes".
Specify "ON", "OFF" or a value (the power of 2) from 32 to 1024 as the number of taps of cancellation. Note: When configuring the number of taps, the number 256 is not translated into 256ms of echo cancellation. Instead, 256 taps means 256/8 = 32 ms. The default setting is "ON", which is 128 taps.
Configure to enable/disable 3-way calling feature on the user. The default setting is enabled.
Configure the number of rings before sending CID. Default setting is 1.
 For FXS extension, there are three options available in Fax Mode. The default setting is "None". None: Disable Fax. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38. Fax Gateway: If selected, the UCM6200 can support conversation and processing of Fax data from T.30 to T.38 or T.38 to T.30. This feature is only available for FXS or FXO port.
ii Cii Crrcr1 li a s c s t N 2 s C e C F ii •

Table 44: FXS Extension Configuration Parameters->Features

Call Transfer	
Call Forward	Configure the Call Forward Unconditional target number. If not configured, the Call





Unconditional	Forward Unconditional feature is deactivated. The default setting is deactivated.
CFU Time Condition	 Select time condition for Call Forward Unconditional. CFU takes effect only during the selected time condition. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
Call Forward No Answer	Configure the Call Forward No Answer target number. If not configured, the Call Forward No Answer feature is deactivated. The default setting is deactivated.
CFN Time Condition	 Select time condition for Call Forward No Answer. The available time conditions are "Office Time", "Out of Office Time", "Holiday", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
Call Forward Busy	Configure the Call Forward Busy target number. If not configured, the Call Forward Busy feature is deactivated. The default setting is deactivated.
CFB Time Condition	 Select time condition for Call Forward Busy. The available time conditions are "Office Time", "Out of Office Time", "Out of Holiday", "Out of Office Time or Holiday" and "Specific". Note: "Specific" has higher priority to "Office Times" if there is a conflict in terms of time period. Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. Office Time and Holiday could be configured on page Settings->Time Settings->Office Time/Holiday page.
CC Settings	
Enable CC	If enabled, UCM6200 will automatically alert this extension when a called party is available, given that a previous call to that party failed for some reason.
Ring Simultaneousl	
Ring	Enable this option to have an external number ring simultaneously along with the





Simultaneously	extension. If a register trunk is used for outbound, the register number will be used to be displayed for the external number as caller ID number.
External Number	Set the external number to be rang simultaneously. '-' is the connection character which will be ignored.
Time Condition for Ring Simultaneously	Ring the external number simultaneously along with the extension on the basis of this time condition.
Hotline	
Enable Hotline	If enabled, hotline dialing plan will be activated, a pre-configured number will be used according to the selected Hotline Type.
Hotline Number	Configure the Hotline Number
Hotline Type	 Configure the Hotline Type: Immediate Hotline: When the phone is off-hook, UCM6200 will immediately dial the preset number Delay Hotline: When the phone is off-hook, if there is no dialing within 5 seconds, UCM6200 will dial the preset number.
Other Settings	
Ring Timeout	Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under web GUI->Internal Options->IVR Prompt: General Preference. The valid range is between 5 seconds and 600 seconds. Note: If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.
Auto Record	Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.
Skip Trunk Auth	 If set to "Yes", users can skip entering the password when making outbound calls. If set to "By Time", users can skip entering the password when making outbound calls during the selected time condition. If set to "No", users will be asked to enter the password when making outbound calls.
Time Condition for Skip Trunk Auth	If "Skip Trunk Auth" is set to "By Time", select a time condition during which users can skip entering password when making outbound calls.
Dial Trunk Password	Configure personal password when making outbound calls via trunk.
Enable LDAP	If enabled, this extension will be added to LDAP Phonebook PBX list; if disabled, this extension will be skipped when creating LDAP Phonebook.
Music On Hold	Select which Music On Hold class to suggest to extension when putting the active call





	on hold.
Call Duration Limit	Configure the maximum duration of call-blocking.

Table 45: FXS Extension Configuration Parameters->Specific Time

Specific Time	
Time Condition	Click to add Time Condition to configure specific time for this extension.

Batch Add Extensions

Batch Add SIP Extensions

In order to add multiple SIP extensions, BATCH add can be used to create standardized SIP extension accounts. However, unique extension user name can't be set using BATCH add.

Under Web GUI->PBX->Basic/Call Routes->Extensions, click on "Batch Add Extensions"->"Batch Add SIP Extensions".

Table 46: Batch Add SIP Extension Parameters

General	
Start Extension	Configure the starting extension number of the batch of extensions to be added.
Create Number	Specify the number of extensions to be added. The default setting is 5.
Extension Interval	Specify the interval between extensions as preferred when creating a batch of extension.
Permission	Assign permission level to the user. The available permissions are "Internal", "Local", "National" and "International" from the lowest level to the highest level. The default setting is "Internal". Note: Users need to have the same level as or higher level than an outbound rule's privilege in order to make outbound calls from this rule.
Enable Voicemail	Enable Voicemail for the user. The default setting is "Yes".
Enable WebRTC Support	Enable WebRTC support.
SIP/IAX Password	 Configure the SIP/IAX password for the users. Three options are available to create password for the batch of extensions. User Random Password. A random secure password will be automatically generated. It is recommended to use this password for security purpose. Use Extension as Password. Enter a password to be used on all the extensions in the batch.
Voicemail Password	Configure Voicemail password (digits only) for the users. • User Random Password. A random password in digits will be automatically generated. It is recommended





	to use this password for security purpose. • Use Extension as Password.	
	 Enter a password to be used on all the extensions in the batch. 	
CallerID Number	Configure CallerID Number when adding Batch Extensions. • Use Extension as Number Users can choose to use the extension number as CallerID • Use as Number Users can choose to set a specific number instead of using the extension number as CallerID.	
Ring Timeout	Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under web GUI->Internal Options->IVR Prompt: General Preference. The valid range is between 5 seconds and 600 seconds. Note: If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.	
Auto Record	Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.	
Skip Voicemail Password Verification	When user dials voicemail code, the password verification IVR is skipped. If enabled, this would allow one-button voicemail access. By default this option is disabled.	
Music On Hold	Select which Music On Hold class to suggest to extensions when putting them on hold.	
Enable LDAP	If enabled, the batch added extensions will be added to LDAP Phonebook PBX list; if disabled, the batch added extensions will be skipped when creating LDAP Phonebook.	
Enable WebRTC Support	If enabled, extensions will be able to login to user portal and use Web RTC features.	
Call Duration Limit	Configure the maximum duration of call-blocking.	
SIP Settings	SIP Settings	
NAT	Use NAT when the PBX is on a public IP communicating with devices hidden behind NAT (e.g., broadband router). If there is one-way audio issue, usually it's related to NAT configuration or Firewall's support of SIP and RTP ports. The default setting is enabled.	
Can Direct Media	By default, the PBX will route the media steams from SIP endpoints through itself. If enabled, the PBX will attempt to negotiate with the endpoints to route the media stream directly. It is not always possible for the PBX to negotiate endpoint-to-endpoint	





	media routing. The default setting is "No".
DTMF Mode	Select DTMF mode for the user to send DTMF. The default setting is "RFC2833". If "Info" is selected, SIP INFO message will be used. If "Inband" is selected, 64-kbit codec PCMU and PCMA are required. When "Auto" is selected, RFC2833 will be used if offered, otherwise "Inband" will be used.
Enable Keep-alive	If enabled, empty SDP packet will be sent to the SIP server periodically to keep the NAT port open. The default setting is "Yes".
Keep-alive Frequency	Configure the number of seconds for the host to be up for Keep-alive. The default setting is 60 seconds.
TEL URI	If the end device/phone has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.
Concurrent Registrations	The maximum endpoints which can be registered into this extension. For security concerns, the default value is 1.
Other Settings	
SRTP	Enable SRTP for the call. The default setting is "No".
Fax Mode	 Select Fax mode for this user. The default setting is "None". None: Disable Fax. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38.
Strategy	 This option controls how the extension can be used on devices within different types of network. The default setting is "Allow All". Allow All Device in any network can register this extension. Local Subnet Only Only the user in specific subnet can register this extension. Up to three subnet addresses can be specified. A Specific IP Address. Only the device on the specific IP address can register this extension.
Enable T.38 UDPTL	Enable or disable T.38 UDPTL Support.
Skip Trunk Auth	If enable "All", users do not need to enter password when making an outbound call. If enable "Follow Me", the user can dial out via follow me without password.
Codec Preference	Select audio and video codec for the extension. The available codecs are: PCMU,





PCMA, GSM, AAL2-G.726-32, G.722, G.729, G.723, Ilbc, ADPCM, LPC10, H.264, H.263, H.263p and VP8.

Batch Add IAX Extensions

Under Web GUI->PBX->Basic/Call Routes->Extensions, click on "Batch Add Extensions"-> "Batch Add IAX Extensions".

Table 47: Batch Add IAX Extension Parameters

General	
Start Extension	Configure the starting extension number of the batch of extensions to be added.
Create Number	Specify the number of extensions to be added. The default setting is 5.
Permission	Assign permission level to the user. The available permissions are "Internal", "Local", "National" and "International" from the lowest level to the highest level. The default setting is "Internal". Note: Users need to have the same level as or higher level than an outbound rule's privilege in order to make outbound calls from this rule.
Enable Voicemail	Enable Voicemail for the user. The default setting is "Yes".
SIP/IAX Password	 Configure the SIP/IAX password for the users. Three options are available to create password for the batch of extensions. User Random Password. A random secure password will be automatically generated. It is recommended to use this password for security purpose. Use Extension as Password. Enter a password to be used on all the extensions in the batch.
Voicemail Password	 Configure Voicemail password (digits only) for the users. User Random Password. A random password in digits will be automatically generated. It is recommended to use this password for security purpose. Use Extension as Password. Enter a password to be used on all the extensions in the batch.
Ring Timeout	Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under web GUI->Internal Options->IVR Prompt: General Preference. The valid range is between 5 seconds and 600 seconds. Note: If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.





Auto Record	Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.
Skip Voicemail Password Verification	When user dials voicemail code, the password verification IVR is skipped. If enabled, this would allow one-button voicemail access. By default this option is disabled.
Music On Hold	Select which Music On Hold class to suggest to extensions when putting them on hold.
Enable LDAP	If enabled, the batch added extensions will be added to LDAP Phonebook PBX list; if disabled, the batch added extensions will be skipped when creating LDAP Phonebook.
Call Duration Limit	Configure the maximum duration of call-blocking.
IAX Settings	
Max Number of Calls	Configure the maximum number of calls allowed for each remote IP address.
Require Call Token	Configure to enable/disable requiring call token. If set to "Auto", it might lock out users who depend on backward compatibility when peer authentication credentials are shared between physical endpoints. The default setting is "Yes".
Other Settings	
SRTP	Enable SRTP for the call. The default setting is "No".
Fax Mode	 Select Fax Mode for this user. The default setting is "None". None: Disable Fax. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38.
Strategy	 This option controls how the extension can be used on devices within different types of network. Allow All Device in any network can register this extension. Local Subnet Only Only the user in specific subnet can register this extension. Up to three subnet addresses can be specified. A Specific IP Address. Only the device on the specific IP address can register this extension. The default setting is "Allow All".
Skip Trunk Auth	If enable "All", users do not need to enter password when making an outbound call. If enable "Follow Me", the call can dial out via follow me without password.
Codec Preference	Select audio and video codec for the extension. The available codecs are: PCMU,





PCMA, GSM, AAL2-G.726-32, G.722, G.729, G.723, iLBC, ADPCM, LPC10, H.264, H.263, H.263p and VP8.

Search and Edit Extension

All the UCM6200 extensions are listed under Web GUI->PBX->Basic/Call Routes->Extensions, with status, Extension, CallerID Name, Technology (SIP, IAX and FXS), IP and Port. Each extension has a checkbox for users to "Modify Selected Extensions" or "Delete Selected Extensions". Also, options "Edit", "Reboot" and "Delete" are available per extension. User can search an extension by specifying the extension number to find an extension quickly.

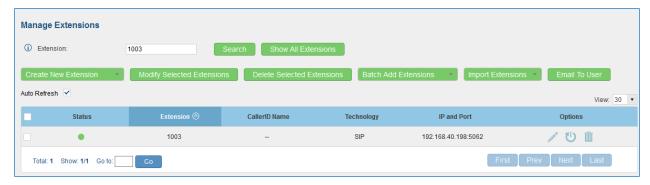


Figure 95: Manage Extensions

Status

Users can see the following icon for each extension to indicate the SIP status.

Green: Free
Blue: Ringing
Yellow: In Use

Grey: Unavailable (the extension is not registered or disabled on the PBX)

Edit single extension

Click on / to start editing the extension parameters.

· Reboot the user

Click on to send NOTIFY reboot event to the device which has an UCM6200 extension already registered. To successfully reboot the user, "Zero Config" needs to be enabled on the UCM6200 web GUI->PBX->Zero Config->Auto Provisioning Settings.





Delete single extension

Click on to delete the extension. Or select the checkbox of the extension and then click on "Delete Selected Extensions".

Modify selected extensions

Select the checkbox for the extension(s). Then click on "Modify Selected Extensions" to edit the extensions in a batch.

Delete selected extensions

Select the checkbox for the extension(s). Then click on "Delete Selected Extensions" to delete the extension(s).

Export Extensions

The extensions configured on the UCM6200 can be exported to csv format file with selected technology "SIP", "IAX" or "FXS". Click on "Export Extensions" button and select technology in the prompt below.



Figure 96: Export Extensions

The exported csv file can serve as a template for users to fill in desired extension information to be imported to the UCM6200.

Import Extensions

The capability to import extensions to the UCM6200 provides users flexibility to batch add extensions with similar or different configuration quickly into the PBX system.

- 1. Export extension csv file from the UCM6200 by clicking on "Export Extensions" button.
- 2. Fill up the extension information you would like in the exported csv template.
- 3. Click on "Import Extensions" button. The following dialog will be prompted.





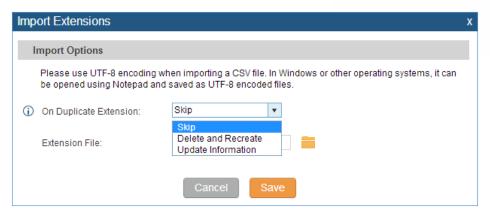


Figure 97: Import Extensions

- 4. Select the option in "On Duplicate Extension" to define how the duplicate extension(s) in the imported csv file should be treated by the PBX.
 - **Skip:** Duplicate extensions in the csv file will be skipped. The PBX will keep the current extension information as previously configured without change.
 - **Delete and Recreate:** The current extension previously configured will be deleted and the duplicate extension in the csv file will be loaded to the PBX.
 - **Update Information:** The current extension previously configured in the PBX will be kept. However, if the duplicate extension in the csv file has different configuration for any options, it will override the configuration for those options in the extension.
- 5. Click on to select csv file from local directory in the PC.
- 6. Click on "Save" to import the csv file.
- 7. Click on "Apply Changes" to apply the imported file on the UCM6200.

Notes

The imported file should look like the following:

Α	В	C	D	E	F	G	н	I	J	K	L	M	N
Extension	Technology	Enable Voicemail	CallerID	SIP/IAX Password	Voicema	Skip Voicemail Password Verification	Ring Timeout	Auto Record	SRTP	Fax Mode	Strategy	Local Subnet 1	Local Sub
1000	SIP	yes	1000	admin123	61783	no		no	no	None	Allow All		
1001	SIP	yes	1001	admin123	955921	no		no	no	None	Allow All		
1002	SIP	yes	1002	admin123	269824	no		no	no	None	Allow All		
1003	SIP	yes	1003	admin123	363196	no		no	no	None	Allow All		
1004	SIP	yes	1004	admin123	12860	no		no	no	None	Allow All		

Figure 98: Import File

Table 48: SIP extensions Imported File Example

Field	Supported values
Extension	Digits
Technology	SIP/SIP(WebRTC)
Enable Voicemail	yes/no
CallerID Number	Digits





SIP/IAX Password	Alphanumeric characters
Voicemail Password	Digits
Skip Voicemail Password Verification	yes/no
Ring Timeout	Empty/ 3 to 600 (in second)
SRTP	yes/no
Fax Mode	None/Fax Detection
	Allow All/Local Subnet Only/A Specific IP Address
Strategy Local Subnet 1	IP address/Mask
Local Subnet 2	IP address/Mask
Local Subnet 3	IP address/Mask
Local Subnet 4	IP address/Mask
Local Subnet 5	IP address/Mask
Local Subnet 6	
	IP address/Mask IP address/Mask
Local Subnet 7 Local Subnet 8	IP address/Mask
Local Subnet 40	IP address/Mask
Local Subnet 10	IP address/Mask
Specific IP Address	IP address
Skip Trunk Auth	yes/no/bytime
Codec Preference	PCMU,PCMA,GSM,G.726,G.722,G.729,H.264,ILBC,AAL2-G.726-32,ADPCM,G.723,H.263,H.263p,vp8,opus
Permission	Internal/Local/National/International
NAT	yes/no
DTMF Mode	RFC2833/info/inband/auto
Insecure	Port
Enable Keep-alive	Yes/no
•	Value from 1-3600
Keep-alive Frequency AuthID	
	Alphanumeric value without special characters
TEL URI	Disabled/user=phone/enabled
Call Forward No Arguer	Digits
Call Forward Hangard History	Digits
Call Forward Unconditional	Digits
Support Hot-Desking Mode	Yes/no
Dial Trunk Password	Digits
Disable This Extension	Yes/no
CFU Time Condition	All time/Office time/out of office time/holiday/out of





	holiday/out of office time or holiday/specific time
CFN Time Condition	All time/Office time/out of office time/holiday/out of
or it mile condition	holiday/out of office time or holiday/specific time
CFB Time Condition	All time/Office time/out of office time/holiday/out of
	holiday/out of office time or holiday/specific time
Music On Hold	Default/ringbacktone_default
CC Agent Policy	If CC is disabled use: never
	If CC is set to normal use: generic
2011 11 2 11	If CC is set to trunk use: native
CC Monitor Policy	Generic/never
CCBS Available Timer	3600/4800
CCNR Available Timer	3600/7200
CC Offer Timer	60/120
CC Max Agents	Value from 1-999
CC Max Monitors	Value from 1-999
Ring simultaneously	Yes/no
External Number	Digits
Time Condition for Ring Simultaneously	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Time Condition for Skip Trunk Auth	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Enable LDAP	Yes/no
Enable T.38 UDPTL	Yes/no
Max Contacts	Values from 1-10
Enable WebRTC	Yes/no
Alert-Info	None/Ring 1/Ring2/Ring3/Ring 4/Ring 5/Ring 6/Ring 7/
	Ring 8/Ring 9/Ring 10/bellcore-dr1/bellcore-dr2/
	bellcore-dr3/ bellcore-dr4/ bellcore-dr5/custom
Do Not Disturb	Yes/no
DND Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Custom Autoanswer	Yes/no
Do Not Disturb Whitelist	Empty/digits
User Password	Alphanumeric characters.
User Password First Name	Alphanumeric characters. Alphanumeric without special characters.





Language	Default/en/zh
Phone Number	Digits
Call-Barging Monitor	Extensions allowed to call barging
Seamless Transfer Members	Extensions allowed to seamless transfer

Table 49: IAX extensions Imported File Example

Field	Supported values
Extension	Digits
Technology	IAX
Enable Voicemail	yes/no
CallerID Number	Digits
SIP/IAX Password	Alphanumeric characters
Voicemail Password	Digits
Skip Voicemail Password Verification	yes/no
Ring Timeout	Empty/ 3 to 600 (in second)
SRTP	yes/no
Fax Mode	None/Fax Detection
Strategy	Allow All/Local Subnet Only/A Specific IP Address
Local Subnet 1	IP address/Mask
Local Subnet 2	IP address/Mask
Local Subnet 3	IP address/Mask
Local Subnet 4	IP address/Mask
Local Subnet 5	IP address/Mask
Local Subnet 6	IP address/Mask
Local Subnet 7	IP address/Mask
Local Subnet 8	IP address/Mask
Local Subnet 9	IP address/Mask
Local Subnet 10	IP address/Mask
Specific IP Address	IP address
Skip Trunk Auth	yes/no/bytime
Codec Preference	PCMU,PCMA,GSM,G.726,G.722,G.729,H.264,ILBC,AAL2-
	G.726-32,ADPCM,G.723,H.263,H.263p,vp8,opus
Permission	Internal/Local/National/International
NAT	yes/no
Call Forward Busy	Digits
Call Forward No Answer	Digits





Call Forward Unconditional	Digits
Require Call Token	Yes/no/auto
Max Number of Calls	Values from 1-512
Dial Trunk Password	Digits
Disable This Extension	Yes/no
CFU Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFN Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFB Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Music On Hold	Default/ringbacktone_default
Ring simultaneously	Yes/no
External Number	Digits
Time Condition for Ring Simultaneously	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Time Condition for Skip Trunk Auth	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Enable LDAP	Yes/no
Limit Max time (s)	empty
Do Not Disturb	Yes/no
DND Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Do Not Disturb Whitelist	Empty/digits
User Password	Alphanumeric characters.
First Name	Alphanumeric without special characters.
Last Name	Alphanumeric without special characters.
Email Address	Email address
Language	Default/en/zh
Phone Number	Digits
Call-Barging Monitor	Extensions allowed to call barging
Seamless Transfer Members	Extensions allowed to seamless transfer





Table 50: FXS extensions Imported File Example

Field	Supported values
Extension	Digits
Technology	FXS
Analog Station	FXS1/FXS2
Enable Voicemail	yes/no
CallerID Number	Digits
Voicemail Password	Digits
Skip Voicemail Password Verification	yes/no
Ring Timeout	Empty/ 3 to 600 (in second)
Auto Record	yes/no
Fax Mode	None/Fax Detection
Skip Trunk Auth	Yes/no/bytime
Permission	Internal/Local/National/International
Call Forward Busy	Digits
Call Forward No Answer	Digits
Call Forward Unconditional	Digits
Call Waiting	Yes/no
Use # as SEND	Yes/no
RX Gain	Values from -30 -> 6
TX Gain	Values from -30 -> 6
MIN RX Flash	Values from: 30 – 1000
MAX RX Flash	Values from: 40 – 2000
Enable Polarity Reversal	Yes/no
Echo Cancellation	On/Off/32/64/128/256/512/1024
3-Way Calling	Yes/no
Send CallerID After	1/2
Dial Trunk Password	digits
Disable This Extension	Yes/no
CFU Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFN Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFB Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Music On Hold	Default/ringbacktone_default





CC Agent Policy	If CC is disabled use: never
	If CC is set to normal use: generic
	If CC is set to trunk use: native
CC Monitor Policy	Generic/never
CCBS Available Timer	3600/4800
CCNR Available Timer	3600/7200
CC Offer Timer	60/120
CC Max Agents	Value from 1-999
CC Max Monitors	Value from 1-999
Ring simultaneously	Yes/no
External Number	Digits
Time Condition for Ring Simultaneously	All time/Office time/out of office time/holiday/out of
	holiday/out of office time or holiday/specific time
Time Condition for Skip Trunk Auth	All time/Office time/out of office time/holiday/out of
	holiday/out of office time or holiday/specific time
Enable LDAP	Yes/no
Enable Hotline	Yes/no
Hotline Type	Immediate hotline/delay hotline
Hotline Number	digits
Limit Max time (s)	empty
Do Not Disturb	Yes/no
DND Time Condition	All time/Office time/out of office time/holiday/out of
	holiday/out of office time or holiday/specific time
Do Not Disturb Whitelist	Empty/digits
User Password	Alphanumeric characters.
First Name	Alphanumeric without special characters.
Last Name	Alphanumeric without special characters.
Email Address	Email address
Language	Default/en/zh
Phone Number	Digits
Call-Barging Monitor	Extensions allowed to call barging
Seamless Transfer Members	Extensions allowed to seamless transfer

The CSV file should contain all the above fields, if one of them is missing or empty, the UCM6200 will display the following error message for missing fields.





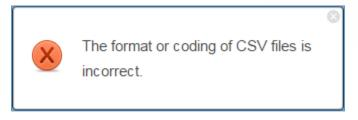


Figure 99: Import Error

UCM6200 will display the following message if a field is empty or contain wrong data. The following figure shows the error displayed when the auto record field is empty.

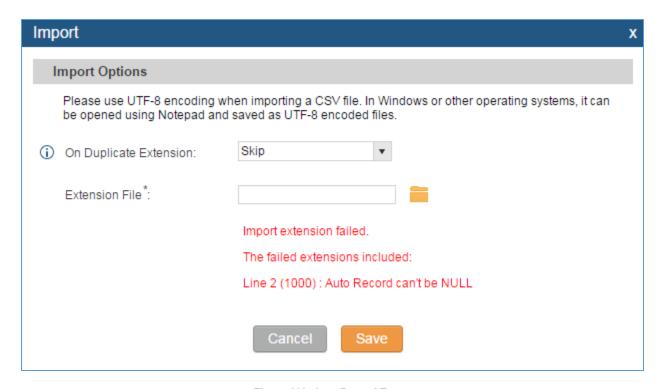


Figure 100: Auto Record Empty

Email to User

Once the extensions are created with Email addresses, the PBX administrator can click on button "Email To User" to send the account registration and configuration information to the user. Please make sure Email setting under web UI->**Settings**->**Email Settings** is properly configured and tested on the UCM6200 before using "Email To User".

When click on "Email To User" button, the following message will be prompted in the web page. Click on OK to confirm sending the account information to all users' Email addresses.





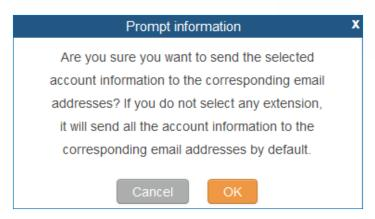


Figure 101: Email To User - Prompt Information

The user will receive Email including account registration information and LDAP configuration. A QR code is also generated for Mobile applications to scan it and get automatically provisioned. QR code provisioning is supported on Grandstream Softphone GS Wave Android™ application and iOS application.



Figure 102: Account Registration Information and QR Code





Server Address : 192.168.2.1
Port : 389
Base : dc=pbx,dc=com
This is the QR code of this LDAP config.

Figure 103: LDAP Client Information and QR Code





Multiple Registrations Per Extension

UCM6200 supports multiple registrations per extension so that users can use the same extension on devices in different locations.

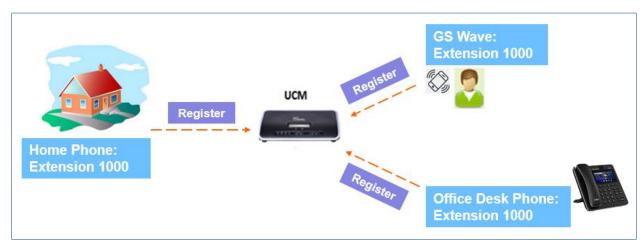


Figure 104: Multiple Registrations per Extension

This feature can be enabled by configuring option "Concurrent Registrations" under web **UI->PBX->Basic/Call Routes->Edit Extension**. The default value is set to 1 for security purpose.

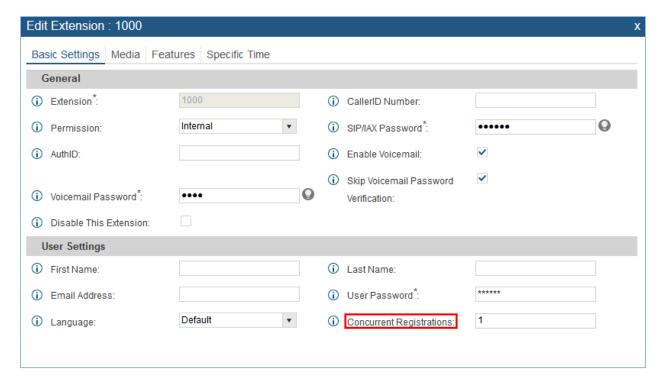


Figure 105: Extension - Concurrent Registration





SMS message support

The UCM6200 provides built-in SIP SMS message support. For SIP end devices such as Grandstream GXP or GXV phones that supports SIP message, after an UCM6200 account is registered on the end device, the user can send and receive SMS message. Please refer to the end device documentation on how to send and receive SMS message.

SMS Message support is a new feature added since firmware 1.0.10.x.



Figure 106: SMS Message Support





TRUNKS

Analog Trunks

Go to Web GUI->PBX->Basic/Call Routes->Analog Trunks to add and edit analog trunks.

- Click on "Create New Analog Trunk" to add a new analog trunk.
- Click on to edit the analog trunk.
- Click on to delete the analog trunk.

Analog Trunk Configuration

The analog trunk options are listed in the table below.

Table 51: Analog Trunk Configuration Parameters

Channels	Select the channel for the analog trunk. UCM6202: 2 channels UCM6204: 4 channels UCM6208: 8 channels
Trunk Name	Specify a unique label to identify the trunk when listed in outbound rules, incoming rules and etc.
SLA Mode	Enable this option to satisfy two primary use cases, which include emulating a simple key system and creating shared extensions on a PBX. Enable SLA Mode will disable polarity reversal.
Barge Allowed	The barge option specifies whether or not other stations are allowed to join a call in progress on this trunk. If enabled, the other stations can press the line button to join the call. The default setting is Yes.
Hold Access	The hold option specifies hold permissions for this trunk. If set to "Open", any station can place this trunk on hold and any other station is allowed to retrieve the call. If set to "Private", only the station that places the call on hold can retrieve the call. The default setting is Yes.
Advanced Options	
Enable Polarity Reversal	If enabled, a polarity reversal will be marked as received when an outgoing call is answered by the remote party. For some countries, a polarity reversal is used for signaling the disconnection of a phone line and the call will be considered as "hangup" on a polarity reversal. The default setting is "No".





Polarity on Answer Delay	When FXO port answers the call, FXS may send a Polarity Reversal. If this interval is shorter than the value of "Polarity on Answer Delay", the Polarity Reversal will be ignored. Otherwise, the FXO will onhook to disconnect the call. The default setting is 600ms.		
Current Disconnect Threshold (ms)	This is the periodic time (in ms) that the UCM6200 will use to check on a voltage drop in the line. The default setting is 200. The valid range is 50 to 3000.		
Ring Timeout	Configure the ring timeout (in ms). Trunk (FXO) devices must have a timeout to determine if there was a hangup before the line is answered. This value can be used to configure how long it takes before the UCM6200 considers a non-ringing line with hangup activity. The default setting is 8000.		
RX Gain	Configure the RX gain for the receiving channel of analog FXO port. The valid range is from -13.5 (dB) to + 12.0 (dB). The default setting is 0 .		
TX Gain	Configure the TX gain for the transmitting channel of analog FXO port. The valid range is from -13.5 (dB) to + 12.0 (dB). The default setting is 0.		
Use CallerID	Configure to enable CallerID detection. The default setting is "Yes".		
Caller ID Scheme	Select the Caller ID scheme for this trunk. The default setting is "Bellcore/Telcordia".		
FXO Dial Delay(ms)	Configure the time interval between off-hook and first dialed digit for outbound calls.		
Auto Record	Enable automatic recording for the calls using this trunk. The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.		
Disable This Trunk	If selected, the trunk will be disabled.		
	 This is to implement analog trunk outbound line selection strategy. Three options are available: Ascend When the call goes out from this analog trunk, it will always try to use the first idle FXO port. The port order that the call will use to go out would be port 1->port 2->port 10->port 16. Every time it will start with port 1 (if it's idle). 		
DAHDI Out Line Selection	 Poll When the call goes out from this analog trunk, it will use the port that is not used last time. And it will always use the port in the order of port 1->2->10->16->1->2->10->16->1->2->10->16->1->2->10->16->1->2->10->16->1->2->10->16->1->2->10->16->1->2->10->16->10->16->10->16->16->16->16->16->16->16->16->16->16		





Tone Settings	
Busy Detection	Busy Detection is used to detect far end hangup or for detecting busy signal. The default setting is "Yes".
Busy Tone Count	If "Busy Detection" is enabled, users can specify the number of busy tones to be played before hanging up. The default setting is 2. Better results might be achieved if set to 4, 6 or even 8. Please note that the higher the number is, the more time is needed to hangup the channel. However, this might lower the probability to get random hangup.
Congestion Detection	Congestion detection is used to detect far end congestion signal. The default setting is "Yes".
Congestion Count	If "Congestion Detection" is enabled, users can specify the number of congestion tones to wait for. The default setting is 2.
Tone Country	Select the country for tone settings. If "Custom" is selected, users could manually configure the values for Busy Tone and Congestion Tone. The default setting is "United States of America (USA)".
Busy Tone	Syntax: f1=val[@level][,f2=val[@level]],c=on1/off1[-on2/off2[-on3/off3]]; Frequencies are in Hz and cadence on and off are in ms. Frequencies Range: [0, 4000) Busy Level Range: (-300, 0) Cadence Range: [0, 16383]. Select Tone Country "Custom" to manually configure Busy Tone value. Default value: f1=480@-50,f2=620@-50,c=500/500
Congestion Tone	Syntax: f1=val[@level][,f2=val[@level]],c=on1/off1[-on2/off2[-on3/off3]]; Frequencies are in Hz and cadence on and off are in ms. Frequencies Range: [0, 4000) Busy Level Range: (-300, 0) Cadence Range: [0, 16383]. Select Tone Country "Custom" to manually configure Busy Tone value. Default value: f1=480@-50,f2=620@-50,c=250/250
PSTN Detection	Click on "Detect" to detect the busy tone, Polarity Reversal and Current Disconnect by PSTN. Before the detecting, please make sure there are more than one channel configured and working properly. If the detection has busy tone, the "Tone Country" option will be set as "Custom".





PSTN Detection

The UCM6200 provides PSTN detection function to help users detect the busy tone, Polarity Reversal and Current Disconnect by making a call from the PSTN line to another destination. The detecting call will be answered and up for about 1 minute. Once done, the detecting result will show and can be used for the UCM6200 settings.

- 1. Go to UCM6200 web GUI->PBX->Basic/Call Routes->Analog Trunks page.
- 2. Click to edit the analog trunk created for the FXO port.
- 3. In the dialog window to edit the analog trunk, go to "Tone Settings" section and there are two methods to set the busy tone.
 - Tone Country. The default setting is "United States of America (USA)".
 - PSTN Detection.

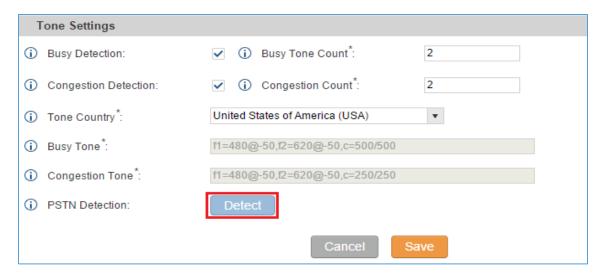


Figure 107: UCM6200 FXO Tone Settings

4. Click on "Detect" to start PSTN detection.





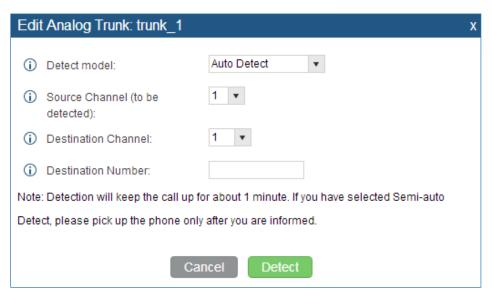


Figure 108: UCM6200 PSTN Detection

If there are two FXO ports connected to PSTN lines, use the following settings for auto-detection.

Detect Model: Auto Detect.

Source Channel: The source channel to be detected.

Destination Channel: The channel to help detecting. For example, the second FXO port.

Destination Number: The number to be dialed for detecting. This number must be the actual PSTN

number for the FXO port used as the destination channel.

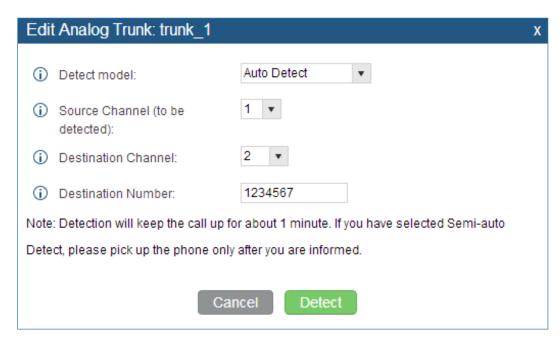


Figure 109: UCM6200 PSTN Detection: Auto Detect





If there is only one FXO port connected to PSTN line, use the following settings for auto-detection.

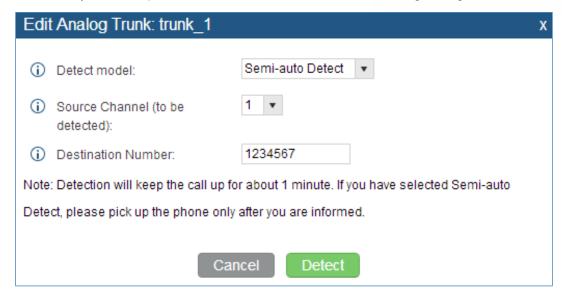


Figure 110: UCM6200 PSTN Detection: Semi-Auto Detect

Detect Model: Semi-auto Detect.

Source Channel: The source channel to be detected.

Destination Number: The number to be dialed for detecting. This number could be a cell phone number or other PSTN number that can be reached from the source channel PSTN number.

- 5. Click "Detect" to start detecting. The source channel will initiate a call to the destination number. For "Auto Detect", the call will be automatically answered. For "Semi-auto Detect", the UCM6200 web GUI will display prompt to notify the user to answer or hang up the call to finish the detecting process.
- 6. Once done, the detected result will show. Users could save the detecting result as the current UCM6200 settings.

Table 52: PSTN Detection for Analog Trunk

Detect Model	 Select "Auto Detect" or "Semi-auto Detect" for PSTN detection. Auto Detect Please make sure two or more channels are connected to the UCM6200 and in idle status before starting the detection. During the detection, one channel will be used as caller (Source Channel) and another channel will be used as callee (Destination Channel). The UCM6200 will control the call to be established and hang up between caller and callee to finish the detection. Semi-auto Detect Semi-auto detection requires answering or hanging up the call
--------------	---





	manually. Please make sure one channel is connected to the UCM6200 and in idle status before starting the detection. During the detection, source channel will be used as caller and send the call to the configured Destination Number. Users will then need follow the prompts in web GUI to help finish the detection. The default setting is "Auto Detect".
Sauras Channal	Select the channel to be detected.
Source Channel	Select the channel to be detected.
Destination Channel	Select the channel to help detect when "Auto Detect" is used.
Destination Number	Configure the number to be called to help the detection.



- The PSTN detection process will keep the call up for about 1 minute.
- If "Semi-auto Detect' is used, please pick up the call only after informed from the web GUI prompt.
- Once the detection is successful, the detected parameters "Busy Tone", "Polarity Reversal" and "Current Disconnect by PSTN" will be filled into the corresponding fields in the analog trunk configuration.

VOIP Trunks

VoIP trunks can be configured in UCM6200 under Web GUI->PBX->Basic/Call Routes->VoIP Trunks. Once created, the VoIP trunks will be listed with Provider Name, Type, Hostname/IP, Username and Options to edit/detect the trunk.

- Click on "Create New SIP Trunk" or "Create New IAX Trunk" to add a new VoIP trunk.
- Click on

 to configure detailed parameters for the VoIP trunk.
- Click on to configure Direct Outward Dialing (DOD) for the SIP Trunk.
- Click on to start LDAP Sync.
- Click on to delete the VoIP trunk.

For VoIP trunk example, please refer to the document in the following link: http://www.grandstream.com/sites/default/files/Resources/ucm_to_ucm_peer_guide.pdf





The VoIP trunk options are listed in the table below.

Table 53: Create New SIP Trunk

Туре	Select the VoIP trunk type.Peer SIP TrunkRegister SIP Trunk
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules and etc.
Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Keep Original CID	Keep the CID from the inbound call when dialing out. This setting will override "Keep Trunk CID" option. Please make sure that the peer PBX at the other side supports to match user entry using "username" field from authentication line.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
NAT	Turn on this setting when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it is related to NAT configuration or SIP/RTP port support on the firewall.
Disable This Trunk	If checked, the trunk will be disabled. Note: If a current SIP trunk is disabled, UCM will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.
TEL URI	If the trunk has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.
Caller ID	Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored. When making outgoing calls, the following rules are used to determine which CallerID will be used if they exist: The CallerID configured for the extension will be looked up first. If no CallerID is configured for the extension, the CallerID configured for the trunk will be used. If the above two are missing, the "Global Outbound CID" defined in Web GUI->PBX->Internal Options->General will be used.
Need Registration	Select whether the trunk needs to register on the external server or not when "Register SIP Trunk" type is selected. The default setting is No.





Username	Enter the username to register to the trunk from the provider when "Register SIP Trunk" type is selected.
Password	Enter the password to register to the trunk from the provider when "Register SIP Trunk" is selected.
Auth ID	Enter the Authentication ID for "Register SIP Trunk" type.
Auto Record	Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.

Table 54: SIP Register Trunk Configuration Parameters

	Table 54: SIP Register Trunk Configuration Parameters
Basic Settings	
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules and etc.
Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Transport	 Configure the SIP transport protocol to be used in this trunk. The default setting is "All - UDP Primary". UDP Only TCP Only TLS Only All - UDP Primary: UDP is the primary transport protocol when all the other SIP transport methods are available too. All - TCP Primary: TCP is the primary transport protocol when all the other SIP transport methods are available too. All - TLS Primary: TLS is the primary transport protocol when all the other SIP transport methods are available too.
Keep Original CID	Keep the CID from the inbound call when dialing out. This setting will override "Keep Trunk CID" option. Please make sure that the peer PBX at the other side supports to match user entry using "username" field from authentication line.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
NAT	Turn on this option when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it's related to NAT configuration or SIP/RTP port configuration on the firewall.
Disable This Trunk	If selected, the trunk will be disabled. Note: If a current SIP trunk is disabled, UCM will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.
TEL URI	If the trunk has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-





	Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.
Need Registration	Select whether the trunk needs to register on the external server or not when "Register SIP Trunk" type is selected. The default setting is No.
Allow outgoing calls if registration failure	If enabled outgoing calls even if the registration to this trunk fail will still be able to go through. Note that if we uncheck "Need Registration" option, this option will be ignored.
CallerID Name	Configure the new name of the caller when the extension has no CallerID Name configured.
From Domain	Configure the actual domain name where the extension comes from. This can be used to override the "From" Header. For example, "trunk.UCM6200.provider.com" is the From Domain in From Header: sip:1234567@trunk.UCM6200.provider.com.
From User	Configure the actual user name of the extension. This can be used to override the "From" Header. There are cases where there is a single ID for registration (single trunk) with multiple DIDs. For example, "1234567" is the From User in From Header: sip:1234567@trunk.UCM6200.provider.com.
Username	Enter the username to register to the trunk from the provider when "Register SIP Trunk" type is selected.
Password	Enter the password to register to the trunk from the provider when "Register SIP Trunk" is selected.
Auth ID	Enter the Authentication ID for "Register SIP Trunk" type.
Auth Trunk	If enabled, the UCM will send 401 response to the incoming call to authenticate the trunk.
Auto Record	Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.
Advanced Settings	
Codec Preference	Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p and VP8.
Send PPI Header	If enabled, the SIP INVITE message sent to the trunk will contain PPI (P-Preferred-Identity) header. The default setting is "No". Note: "Send PPI Header" and "Send PAI Header" cannot be enabled at the same time. Only one of the two headers is allowed to be contained in SIP INVITE message.





Use DOD in PPI	If enabled, the SIP INVITE message sent to the trunk will contain PAI (P-Asserted-Identity) header. The PPI header will include the configured DOD for this extension. Note: "Send PPI Header" needs to be enabled in order to use this feature.
Send PAI Header	If enabled, the SIP INVITE message sent to the trunk will contain PAI (P-Asserted-Identity) header including configured PAI Header. The default setting is "No". Note: "Send PPI Header" and "Send PAI Header" cannot be enabled at the same time. Only one of the two headers is allowed to be contained in the SIP INVITE message.
PAI Header	If "Send PAI Header" is enabled and "PAI Header" is configured as "123456" for instance, the PAI header in the SIP message sent from the UCM will contain "123456". If "Send PAI Header" is enabled and "PAI Header" is configured as "empty", the PAI header in the SIP message sent from the UCM will contain the original CID. Note: "Send PAI Header" needs to be enabled in order to use this feature
Outbound Proxy Support	Select to enable outbound proxy in this trunk. The default setting is "No".
Outbound Proxy	When outbound proxy support is enabled, enter the IP address or URL of the outbound proxy.
Remove OBP from Route	It is used to set if the phone system will remove outbound proxy URI from the route header. If is set to "Yes", it will remove the route header from SIP requests. The default setting is "No".
DID Mode	Configure where to get the destination ID of an incoming SIP call, from SIP Request-line or To-header. The default is set to "Request-line".
DTMF Mode	 Configure the default DTMF mode when sending DTMF on this trunk. Default: The global setting of DTMF mode will be used. The global setting for DTMF Mode setting is under web UI->PBX->SIP Settings->ToS. RFC2833: Send DTMF using RFC2833. Info: Send DTMF using SIP INFO message. Inband: Send DTMF using inband audio. This requires 64 bit codec, i.e., PCMU and PCMA. Auto: Send DTMF using RFC2833 if offered. Otherwise, inband will be used.
Enable Heartbeat Detection	If enabled, the UCM6200 will regularly send SIP OPTIONS to the device to check if the device is still online. The default setting is "No".
Heartbeat Frequency	When "Enable Heartbeat Detection" option is set to "Yes", configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.





Maximum Number of Call Lines	The maximum number of concurrent calls using the trunk. The default settings 0, which means no limit.
Fax Mode	 Select Fax mode. The default setting is "None". None: Disable Fax. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38.
SRTP	Enable SRTP for the VoIP trunk. The default setting is "No".
CC Settings	
Enable CC	If enabled, the system will automatically alert the user when a called party is available, given that a previous call to that party failed for some reason.
CC Max Agents	Configure the maximum number of CCSS agents which may be allocated for this channel. In other words, this number serves as the maximum number of CC requests this channel is allowed to make. The minimum value is 1.
CC Max Monitors	Configure the maximum number of monitor structures which may be created for this device. In other words, this number tells how many callers may request CC services for a specific device at one time. The minimum value is 1.

Table 55: SIP Peer Trunk Configuration Parameters

Basic Settings	
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules and etc.
Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Transport	 Configure the SIP transport protocol to be used in this trunk. The default setting is "All - UDP Primary". UDP Only TCP Only TLS Only All - UDP Primary: UDP is the primary transport protocol when all the other SIP transport methods are available too. All - TCP Primary: TCP is the primary transport protocol when all the other SIP transport methods are available too. All - TLS Primary: TLS is the primary transport protocol when all the other SIP transport methods are available too.
Keep Original CID	Keep the CID from the inbound call when dialing out, this setting will override "Keep Trunk CID" option. Please make sure that the peer PBX at the other side supports to match user entry using "username" field from authentication line.





Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
NAT	Turn on this option when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it's related to NAT configuration or SIP/RTP port configuration on the firewall.
Disable This Trunk	If selected, the trunk will be disabled. Note: If a current SIP trunk is disabled, UCM will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.
TEL URI	If the trunk has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.
Caller ID	Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored. When making outgoing calls, the following rules are used to determine which CallerID will be used if they exist: The CallerID configured for the extension will be looked up first. If no CallerID configured for the extension, the CallerID configured for the trunk will be used. If the above two are missing, the "Global Outbound CID" defined in Web GUI>PBX->Internal Options->General will be used.
CallerID Name	Configure the name of the caller to be displayed when the extension has no CallerID Name configured.
Auto Record	Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under web GUI->CDR->Recording Files.
Advanced Settings	
Codec Preference	Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p and VP8.
DID Mode	Configure where to get the destination ID of an incoming SIP call, from SIP Request-line or To-header. The default is set to "Request-line".
DTMF Mode	 Configure the default DTMF mode when sending DTMF on this trunk. Default: The global setting of DTMF mode will be used. The global setting for DTMF Mode setting is under web UI->PBX->SIP Settings->ToS. RFC2833: Send DTMF using RFC2833. Info: Send DTMF using SIP INFO message.





	 Inband: Send DTMF using inband audio. This requires 64 bit codec, i.e., PCMU and PCMA. Auto: Send DTMF using RFC2833 if offered. Otherwise, inband will be used.
Enable Heartbeat Detection	If enabled, the UCM6200 will regularly send SIP OPTIONS to the device to check if the device is still online. The default setting is "No".
Heartbeat Frequency	When "Enable Heartbeat Detection" option is set to "Yes", configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.
Maximum Number of Call Lines	The maximum number of concurrent calls using the trunk. The default settings 0, which means no limit.
Fax Mode	 Select Fax mode. The default setting is "None". None: Disable Fax. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38.
SRTP	Enable SRTP for the VoIP trunk. The default setting is "No".
Sync LDAP Enable	If enabled, the local UCM6200 will automatically provide and update the local LDAP contacts to the remote UCM6200 SIP peer trunk. In order to ensure successful synchronization, the remote UCM6200 peer also needs to enable this option on the SIP peer trunk. The default setting is "No".
Sync LDAP Password	This is the password used for LDAP contact file encryption and decryption during the LDAP sync process. The password must be the same on both UCM6200 peers to ensure successful synchronization.
Sync LDAP Port	Configure the TCP port used LDAP sync feature between two peer UCM6200.
LDAP Outbound Rule	Specify an outbound rule for LDAP sync feature. The UCM6200 will automatically modify the remote contacts by adding prefix parsed from this rule.
LDAP Dialed Prefix	Specify the prefix for LDAP sync feature. The UCM6200 will automatically modify the remote contacts by adding this prefix.
CC Settings	
Enable CC	If enabled, the system will automatically alert the user when a called party is available, given that a previous call to that party failed for some reason.
CC Max Agents	Configure the maximum number of CCSS agents which may be allocated for this channel. In other words, this number serves as the maximum number of CC requests this channel is allowed to make. The minimum value is 1.
CC Max Monitors	Configure the maximum number of monitor structures which may be created for this device. In other words, this number tells how many callers may request CC





services for a specific device at one time.
The minimum value is 1.

Table 56: Create New IAX Trunk

Туре	Select the VoIP trunk type. Peer IAX Trunk Register IAX Trunk
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules and etc.
Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
Username	Enter the username to register to the trunk from the provider when "Register IAX Trunk" type is selected.
Password	Enter the password to register to the trunk from the provider when "Register IAX Trunk" type is selected.
Disable This Trunk	If selected, the trunk will be disabled.

Table 57: IAX Register Trunk Configuration Parameters

Basic Settings	
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules and etc.
Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
Disable This Trunk	If selected, the trunk will be disabled.
Caller ID	Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored. When making outgoing calls, following rules are used to determine which CallerID will be used if they exist: The CallerID configured for the extension will be looked up first. If no CallerID configured for the extension, the CallerID configured for the trunk will be used. If the above two are missing, the "Global Outbound CID" defined in Web GUI->PBX->Internal Options->General will be used.
CallerID Name	Configure the name of the caller to be displayed when the extension has no CallerID Name configured.
Username	Enter the username to register to the trunk from the provider.





Password	Enter the password to register to the trunk from the provider.
Advanced Settings	
Codec Preference	Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p and VP8.
Enable Heartbeat Detection	If enabled, the UCM6200 will regularly send SIP OPTIONS to the device to check if the device is still online. The default setting is "No".
Heartbeat Frequency	When "Enable Heartbeat Detection" option is set to "Yes", configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.
Maximum Number of Call Lines	The maximum number of concurrent calls using the trunk. The default settings 0, which means no limited.
Fax Mode	 Select Fax mode. The default setting is "None". None: Disable Fax. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38.

Table 58: IAX Peer Trunk Configuration Parameters

Basic Settings	
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules and etc.
Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
Disable This Trunk	If selected, the trunk will be disabled.
Caller ID	Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored. When making outgoing calls, the following rules are used to determine which CallerID will be used if they exist: The CallerID configured for the extension will be looked up first. If no CallerID configured for the extension, the CallerID configured for the trunk will be used. If the above two are missing, the "Global Outbound CID" defined in Web GUI->PBX->Internal Options->General will be used.
CallerID Name	Configure the name of the caller to be displayed when the extension has no





	CallerID Name configured.
Advanced Settings	
Codec Preference	Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p and VP8.
Enable Heartbeat Detection	If enabled, the UCM6200 will regularly send SIP OPTIONS to the device to check if the device is still online. The default setting is "No".
Heartbeat Frequency	When "Enable Heartbeat Detection" option is set to "Yes", configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.
Maximum Number of Call Lines	The maximum number of concurrent calls using the trunk. The default settings 0, which means no limited.
Fax Mode	 Select Fax mode. The default setting is "None". None: Disable Fax. Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under web UI->PBX->Internal Options->Fax/T.38.

Direct Outward Dialing (DOD)

The UCM6200 provides Direct Outward Dialing (DOD) which is a service of a local phone company (or local exchange carrier) that allows subscribers within a company's PBX system to connect to outside lines directly.

Example of how DOD is used:

Company ABC has a SIP trunk. This SIP trunk has 4 DIDs associated to it. The main number of the office is routed to an auto attendant. The other three numbers are direct lines to specific users of the company. At the moment when a user makes an outbound call their caller ID shows up as the main office number. This poses a problem as the CEO would like their calls to come from their direct line. This can be accomplished by configuring DOD for the CEO's extension.

Steps on how to configure DOD on the UCM6200:

- 1. To setup DOD go to UCM6200 web GUI->PBX->Basic/Call Routes->VoIP Trunks page.
- 2. Click to access the DOD options for the selected SIP Trunk.
- 3. Click "Create a new DOD" to begin your DOD setup





- 4. For "DOD Number" enter one of the numbers (DIDs) from your SIP trunk provider. In the example above Company ABC received 4 DIDs from their provider. ABC will enter in the number for the CEO's direct line.
- 5. If extension number need to be appended to the DID number click on "Add Extension".
- 6. Select an extension from the "Available Extensions" list. Users have the option of selecting more than one extension. In this case, Company ABC would select the CEO's extension. After making the selection, click on the button to move the extension(s) to the "Selected Extensions" list.

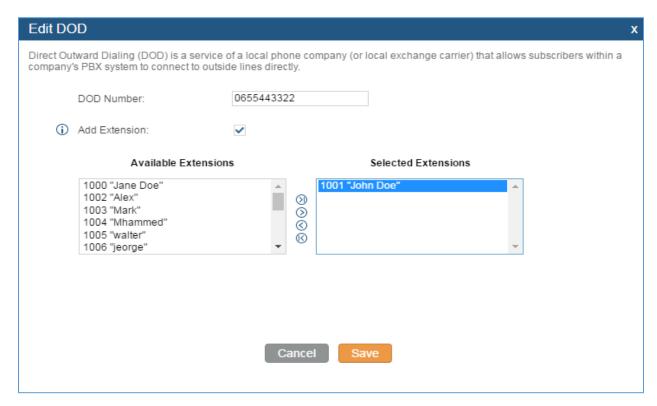


Figure 111: DOD extension selection

7. Click "Save" at the bottom.

Once completed, the user will return to the EDIT DOD page that shows all the extensions that are associated to a particular DOD.







Figure 112: Edit DOD





SLA STATION

The UCM6200 supports SLA that allows mapping the key with LED on a multi-line phone to different external lines. When there is an incoming call and the phone starts to ring, the LED on the key will flash in red and the call can be picked up by pressing this key. This allows users to know if the line is occupied or not. The SLA function on the UCM6200 is similar to BLF but SLA is used to monitor external line i.e., analog trunk on the UCM6200. Users could configure the phone with BLF mode on the MPK to monitor the analog trunk status or press the line key pick up call from the analog trunk on the UCM6200.

Create/Edit SLA Station

SLA Station can be configured on web GUI->PBX->Basic/Call Routes->SLA Station.



Figure 113: SLA Station

- Click on "Create New SLA Station" to add a SLA Station.
- Click on to edit the SLA Station. The following table shows the SLA Station configuration parameters.
- Click on to delete the SLA Station.

Table 59: SLA Station Configuration Parameters

Station Name	Configure a name to identify the SLA Station.
Station	Specify a SIP extension as a station that will be using SLA.
Available SLA Trunks	Existing Analog Trunks with SLA Mode enabled will be listed here.
Selected SLA Trunks	Select a trunk for this SLA from the Available SLA Trunks list. Click on \bigcirc \bigcirc \bigcirc to arrange the order. If there are multiple trunks selected, when there are calls on those trunks at the same time, pressing the LINE key on the phone will pick up the call on the first trunk here.
SLA Station Options	
Ring Timeout	Configure the time (in seconds) to ring the station before the call is considered unanswered. No timeout is set by default. If set to 0, there will be no timeout.
Ring Delay	Configure the time (in seconds) for delay before ringing the station when a call





	first coming in on the shared line. No delay is set by default. If set to 0, there will be no delay.
Hold Access	This option defines the competence of the hold action for one particular trunk. If set to "open", any station could hold a call on that trunk or resume one held session; if set to "private", only the station that places the trunk call on hold could resume the session. The default setting is "open".

Sample Configuration

On the UCM6200, go to web UI->Basic/Call Routes->Analog Trunks page. Create analog trunk or edit the
existing analog trunk. Make sure "SLA Mode" is enabled for the analog trunk. Once enabled, this analog
trunk will be only available for the SLA stations created under web UI->Basic/Call Routes->SLA Station
page.

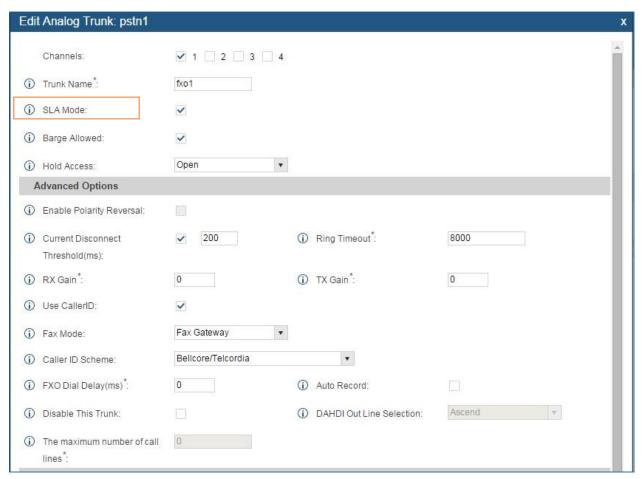


Figure 114: Enable SLA Mode for Analog Trunk

Click on "Save". The analog trunk will be listed with trunk mode "SLA".



Figure 115: Analog Trunk with SLA Mode Enabled





On the UCM6200, go to web UI->Basic/Call Routes->SLA Station page, click on "Create New SLA Station".
 Please refer to section [Create/Edit SLA Station] for the configuration parameters. Users can create one or more SLA stations to monitor the analog trunk. The following figure shows two stations, 1002 and 1005, are configured to be associated with SLA trunk "fxo1".



Figure 116: SLA Example - SLA Station

- 3. On the SIP phone 1, configure to register UCM6200 extension 1002. Configure the MPK as BLF mode and the value must be set to "extension_trunkname", which is 1002_fxo1 in this case.
- 4. On the SIP phone 2, configure to register UCM6200 extension 1005. Configure the MPK as BLF mode and value must be set to "extension_trunkname", which is 1005_fxo1 in this case.



Figure 117: SLA Example - MPK Configuration

Now the SLA station is ready to use. The following functions can be achieved by this configuration.

- Making an outbound call from the station/extension, using LINE key
 When the extension is in idle state, pressing the line key for this extension on the phone to off hook. Then
 dial the station's extension number, for example, dial 1002 on phone 1 (or dial 1005 on phone 2), to hear the
 dial tone. Then the users could dial external number for the outbound call.
- Making an outbound call from the station/extension, using BLF key
 When the extension is in idle state, pressing the MPK and users could dial external numbers directly.
- Answering call using LINE key
 When the station is ringing, pressing the LINE key to answer the incoming call.
- Barging-in active call using BLF key
 When there is an active call between an SLA station and an external number using the SLA trunk, other SLA stations monitoring the same trunk could join the call by pressing the BLF key if "Barge Allowed" is enabled for the analog trunk.
- Hold/Unhold using BLF key
 If the external line is previously put on hold by an SLA station, another station that monitors the same SLA
 trunk could unhold the call by pressing the BLF key if "Hold Access" is set to "open" on the analog trunk and
 the SLA station.





CALL ROUTES

Outbound Routes

Outbound Routes

In the UCM6200, an outgoing calling rule pairs an extension pattern with a trunk used to dial the pattern. This allows different patterns to be dialed through different trunks (e.g., "Local" 7-digit dials through a FXO while "Long distance" 10-digit dials through a low-cost SIP trunk). Users can also set up a failover trunk to be used when the primary trunk fails.

Go to Web GUI->PBX->Basic/Call Routes->Outbound Routes to add and edit outbound rules.

- Click on "Create New Outbound Rule" to add a new outbound route.
- Click on

 to edit the outbound route.
- Click on to delete the outbound route.
- On the UCM6200, the outbound route priority is based on "Best matching pattern". For example, the UCM6200 has outbound route A with pattern 1xxx and outbound route B with pattern 10xx configured. When dialing 1000 for outbound call, outbound route B will always be used first. This is because pattern 10xx is a better match than pattern 1xxx. Only when there are multiple outbound routes with the same pattern configured, users can click on \bigcirc to move the outbound route up/down to arrange the priority among those outbound routes.

Note: Under Web GUI->PBX->Basic/Call Routes->Outbound Routes -> Country codes section, the UCM display a list of countries international codes and the administrator can exclude specific countries to be reached.

Table 60: Outbound Route Configuration Parameters

Calling Rule Name	Configure the name of the calling rule (e.g., local, long_distance, and etc). Letters, digits, _ and - are allowed.	
Pattern	 All patterns are prefixed with the "_". Special characters: X: Any Digit from 0-9. Z: Any Digit from 1-9. N: Any Digit from 2-9. ".": Wildcard. Match one or more characters. "!": Wildcard. Match zero or more characters immediately. Example: [12345-9] - Any digit from 1 to 9. 	
Disable This Route	After creating the outbound route, users can choose to enable and disable it. If the route is disabled, it will not take effect anymore. However, the route settings will	





	remain in UCM. Users can enable it again when it's needed.	
Password	Configure the password for users to use this rule when making outbound calls.	
Call Duration Limit	Enable to configure the maximum duration for the call using this outbound route.	
Maximum Call Duration	Configure the maximum duration of the call (in seconds). The default setting is 0, which means no limit.	
Warning Time	Configure the warning time for the call using this outbound route. If set to x seconds, the warning tone will be played to the caller when x seconds are left to end the call.	
Warning Repeat Interval	Configure the warning repeat interval for the call using this outbound route. If set to x seconds, the warning tone will be played every x seconds after the first warning.	
Privilege Level	 Select privilege level for the outbound rule. Internal: The lowest level required. All users can use this rule. Local: Users with Local, National, or International level are allowed to use this rule. National: Users with National or International level are allowed to use this rule. International: The highest level required. Only users with international level can use this rule. Disable: The default setting is "Disable". If selected, only the matched source caller ID will be allowed to use this outbound route. Please be aware of the potential security risks when using "Internal" level, which means all users can use this outbound rule to dial out from the trunk. 	
Enable Filter on Source Caller ID	When enabled, users could specify extensions allowed to use this outbound route. "Privilege Level" is automatically disabled if using "Enable Filter on Source Caller ID". The following two methods can be used at the same time to define the extensions as the source caller ID. 1. Select available extensions/extension groups from the left to the right. This allows users to specify arbitrary single extensions available in the PBX. 2. Custom Dynamic Route: define the pattern for the source caller ID. This allows users to define extension range instead of selecting them one by one. • All patterns are prefixed with the "_". • Special characters: X: Any Digit from 0-9. Z: Any Digit from 1-9. N: Any Digit from 2-9. ".": Wildcard. Match one or more characters immediately.	





	Example: [12345-9] - Any digit from 1 to 9.	
Send This Call Throug	h Trunk	
Use Trunk	Select the trunk for this outbound rule.	
Strip	Allows the user to specify the number of digits that will be stripped from the beginning of the dialed string before the call is placed via the selected trunk. Example: The users will dial 9 as the first digit of a long distance calls. However, 9 should not be sent out via analog lines and the PSTN line. In this case, 1 digit should be stripped before the call is placed.	
Prepend	Specify the digits to be prepended before the call is placed via the trunk. Those digits will be prepended after the dialing number is stripped.	
Use Failover Trunk		
Failover Trunk	Failover trunks can be used to make sure that a call goes through an alternate route, when the primary trunk is busy or down. If "Use Failover Trunk" is enabled and "Failover trunk" is defined, the calls that cannot be placed via the regular trunk may have a secondary trunk to go through. UCM62XX support up to 10 failover trunks. Example: The user's primary trunk is a VoIP trunk and the user would like to use the PSTN when the VoIP trunk is not available. The PSTN trunk can be configured as the failover trunk of the VoIP trunk.	
Strip	Allows the user to specify the number of digits that will be stripped from the beginning of the dialed string before the call is placed via the selected trunk. Example: The users will dial 9 as the first digit of a long distance calls. However, 9 should not be sent out via analog lines and the PSTN line. In this case, 1 digit should be stripped before the call is placed.	
Prepend	Specify the digits to be prepended before the call is placed via the trunk. Those digits will be prepended after the dialing number is stripped.	
Time Condition		
Time Condition	Users could customize holiday time, office time or a specified time to allow the outbound route to be used.	

Outbound Blacklist

The UCM6200 allows users to configure blacklist for outbound routes. If the dialing number matches the blacklist numbers or patterns, the outbound call will not be allowed. The outbound blacklist can be configured under UCM web UI->PBX->Basic Call/Routes->Outbound Routes: Outbound Blacklist.

Users can configure numbers, patterns or select country code to add in the blacklist. Please note that the blacklist settings applies to all outbound routes.





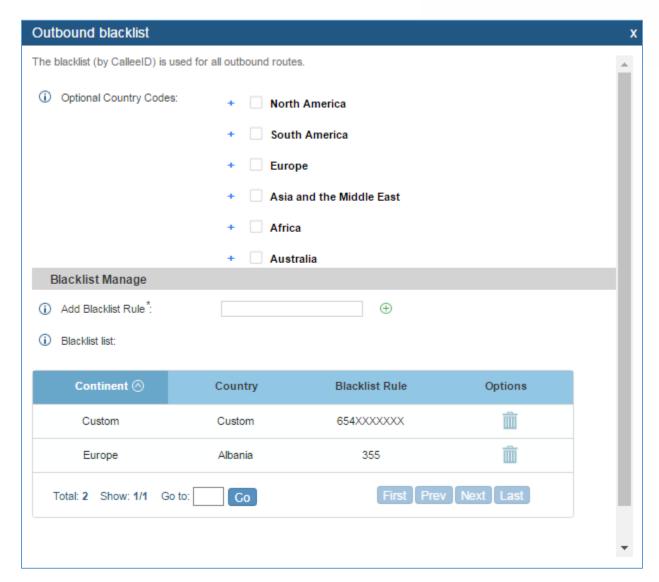


Figure 118: Country Codes

Inbound Routes

Inbound routes can be configured via Web GUI->PBX->Basic/Call Routes->Inbound Routes.

- Click on "Create New Inbound Rule" to add a new inbound route.
- Click on "Blacklist" to configure blacklist for all inbound routes.
- Click on

 to edit the inbound route.
- Click on to delete the inbound route.

Inbound Rule Configurations

Table 61: Inbound Rule Configuration Parameters





Trunks	Select the trunk to configure the inbound rule.	
Trunks		
DID Pattern	 All patterns are prefixed with the "_". Special characters: X: Any Digit from 0-9. Z: Any Digit from 1-9. N: Any Digit from 2-9. ".": Wildcard. Match one or more characters. "!": Wildcard. Match zero or more characters immediately. Example: [12345-9] - Any digit from 1 to 9. The pattern can be composed of two parts, divided by a '/' character. The first part is used to specify the dialed number the second part is used to specify the caller ID and it is optional, if set it means only the extension with the specific caller ID is allowed to call in or call out. For example, patter '_2XXX/1234' means the only extension with the caller ID '1234' is allowed to use this rule. 	
Disable This Route	After creating the inbound route, users can choose to enable and disable it. If the route is disabled, it will not take effect anymore. However, the route settings will remain in UCM. Users can enable it again when it's needed.	
Prepend Trunk Name	Prepend trunk name to display.	
Alert-Info	Configure the Alert-Info, when UCM6200 receives an INVITE request, the Alert-Info header field specifies an alternative ring tone to the UAS.	
Inbound Multiple Mode	Multiple mode allows user to switch between destinations of the inbound rule by feature codes. Configure related feature codes in the "Feature Codes" page. If this option is enabled, user can use feature code to switch between different destinations.	
Default Destination	Select the default destination for the inbound call. Extension Voicemail Conference Room Queue Ring Group Paging/Intercom Voicemail Group Fax DISA IVR Dial by Name External Number By DID When "By DID" is used, the UCM6200 will look for the destination based on the number dialed, which could be local extensions, conference, call queue,	





	ring group, paging/intercom group, IVR, voicemail groups and Fax extension as configured in "DID destination". If the dialed number matches the DID pattern, the call will be allowed to go through.
Strip	Configure the number of digits to be stripped from the beginning of the DID. This option shows up only when "By DID" is selected.
Prepend	Configure the number of digits to be prepended to an inbound DID pattern, with strip taking precedence over prepend.
Dial Trunk	This option shows up only when "By DID" is selected. If enabled, the external users dialing in to the trunk via this inbound route can dial outbound call using the UCM6200's trunk.
DID Destination	This option shows up only when "By DID" is selected. This controls the destination that can be reached by the external caller via the inbound route. The DID destination are: Extension Conference Call Queue Ring Group Paging/Intercom Groups IVR Voicemail Groups Fax Extension Dial by Name All
Time Condition	
Time Conditions	Select the time condition for the inbound rule.
Destination	Select the destination for the inbound call during the specified time condition.

Inbound Route: Prepend Example

UCM6200 now allows user to prepend digits to an inbound DID pattern, with strip taking precedence over prepend. With the ability to prepend digits in inbound route DID pattern, user no longer needs to create multiple routes for the same trunk in order to route calls to different extensions.





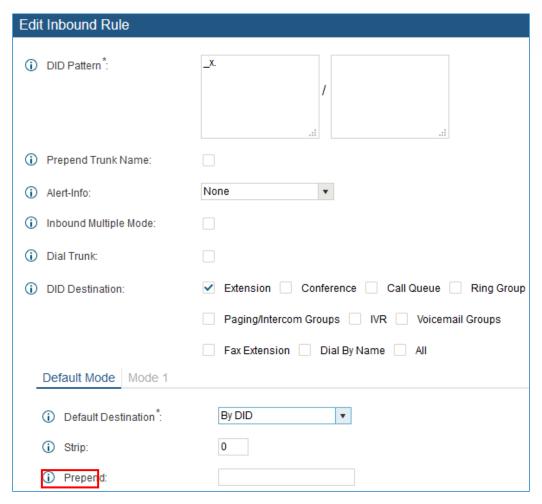


Figure 119: Inbound Route feature: Prepend

The following example demonstrates the process,

- 1. If Trunk provides a DID pattern of 18005251163.
- 2. If Strip is set to 8, UCM6200 will strip the first 8 digits.
- 3. If **Prepend** is set to 2, UCM6200 will then prepend a 2 to the stripped number, now the number become 2163.
- 4. UCM6200 will now forward the incoming call to extension 2163.

Inbound Route: Multiple Mode

In the UCM6200, the user can configure inbound route to enable multiple mode to switch between different destinations. The inbound multiple mode can be enabled under Inbound Route settings.





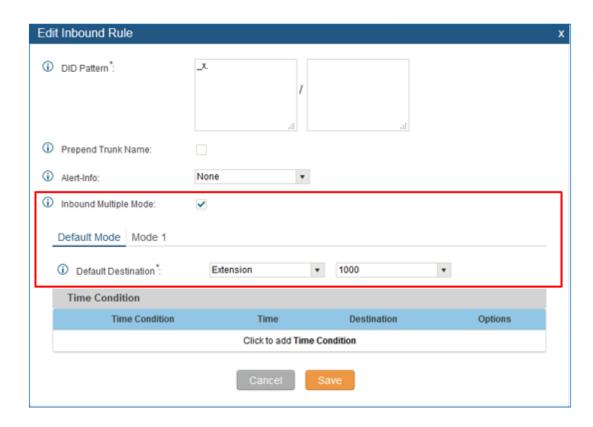


Figure 120: Inbound Route - Multiple Mode

When Multiple Mode is enabled for the inbound route, the user can configure a "Default Destination" and a "Mode 1" destination for this route. By default, the call coming into this inbound route will be routed to the default destination.

SIP end devices that have registered on the UCM6200 can dial feature code *62 to switch to inbound route "Mode 1" and dial feature code *61 to switch back to "Default Destination". Switching between different mode can be easily done without web UI login.

For example, the customer service hotline destination has to be set to a different IVR after 7PM. The user can dial *62 to switch to "Mode 1" with that IVR set as the destination before off work.

FAX Intelligent Route

The UCM6200 can automatically detect Fax and phone signal coming from the FXO port, and then forward Fax or phone signal to the right destination. For example, when a regular phone call is coming, the UCM6200 will be able to detect the phone signal and forward it through the correct inbound route to the destination; if Fax signal is coming, the UCM6200 will be able to forward it to the FXS extension where the Fax machine is connected.





FAX with Two Media

The UCM6200 supports Fax re-invite with multiple codec negotiation. If a Fax re-invite contains both T.38 and PCMA/PCMU codec, UCM6200 will choose T.38 codec over PCMA/PCMU.

Blacklist Configurations

In the UCM6200, Blacklist is supported for all inbound routes. Users could enable the Blacklist feature and manage the Blacklist by clicking on "Blacklist".

- Select the checkbox for "Blacklist Enable" to turn on Blacklist feature for all inbound routes. Blacklist is disabled by default.
- Enter a number in "Add Blacklist Number" field and then click \oplus to add to the list. Anonymous can also be added as a Blacklist Number.
- ullet To remove a number from the Blacklist, select the number in "Blacklist list" and click on $\overline{\ }$.

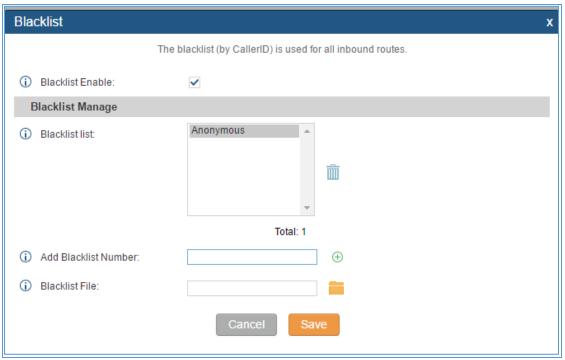


Figure 121: Blacklist Configuration Parameters

• To add blacklist number in batch, click on to upload blacklist file in csv format. The supported csv format is as below.





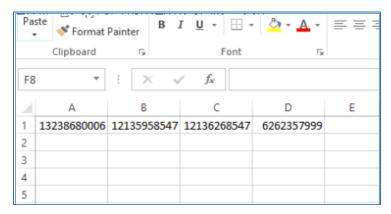


Figure 122: Blacklist csv File

⚠ Note:

Users could also add a number to the Blacklist or remove a number from the Blacklist by dialing the feature code for "Blacklist Add' (default: *40) and "Blacklist Remove" (default: *41) from an extension. The feature code can be configured under Web GUI->PBX->Internal Options->Feature Codes.





CONFERENCE BRIDGE

The UCM6200 supports conference bridge allowing multiple bridges used at the same time:

- UCM6202/6204 supports up to 3 conference bridges allowing up to 25 simultaneous PSTN or IP participants.
- UCM6208 supports up to 6 conference bridges allowing up to 32 simultaneous PSTN or IP participants.

The conference bridge configurations can be accessed under Web GUI->PBX->Call Features->Conference. In this page, users could create, edit, view, invite, manage the participants and delete conference bridges. The conference bridge status and conference call recordings (if recording is enabled) will be displayed in this web page as well.

Conference Bridge Configurations

- Click on "Create New Conference Room" to add a new conference bridge.
- Click on to edit the conference bridge.
- Click on to delete the conference bridge.

Table 62: Conference Bridge Configuration Parameters

Extension	Configure the conference number for the users to dial into the conference.
	When configured, the users who would like to join the conference call must enter this password before accessing the conference bridge.
Password	 Note: If "Public Mode" is enabled, the password is not required to join the conference bridge thus this field is invalid. The password has to be at least 4 characters.
Admin Password	Configure the password to join the conference bridge as administrator. Conference administrator can manage the conference call via IVR (if "Enable Caller Menu" is enabled) as well as invite other parties to join the conference by dialing "0" (permission required from the invited party) or "1" (permission not required from the invited party) during the conference call.
	 Note: If "Public Mode" is enabled, the password is not required to join the conference bridge thus this field is invalid. The password has to be at least 4 characters.





Enable Caller Menu	If enabled, conference participant could press the * key to access the conference bridge menu. The default setting is "No".
Record Conference	If enabled, the calls in this conference bridge will be recorded automatically in a .wav format file. All the recording files will be displayed and can be downloaded in the conference web page. The default setting is "No".
Quiet Mode	If enabled, if there are users joining or leaving the conference, voice prompt or notification tone won't be played. The default setting is "No". Note: "Quiet Mode" and "Announce Callers" cannot be enabled at the same time.
Wait For Admin	If enabled, the participants will not hear each other until the conference administrator joins the conference. The default setting is "No". Note: If "Quiet Mode" is enabled, the voice prompt for "Wait For Admin" will not be announced.
Enable User Invite	If enabled, users could press 0 to invite other users (with the users' permission) or press 1 to invite other users (without the user's permission) to join the conference. The default setting is "No". Note: Conference administrator can always invite other users without enabling this option.
Announce Callers	If enabled, the caller will be announced to all conference participants when there the caller joins the conference. The default setting is "No". Note: "Quiet Mode" and "Announce Callers" cannot be enabled at the same time.
Public Mode	If enabled, no authentication will be required when joining the conference call. The default setting is "Yes".
Play Hold Music	If enabled, the UCM6200 will play Hold music when there is only one user in the conference. The default setting is "No".
Music On Hold	Select the music on hold class to be played in conference call. Music On Hold class can be set up under web UI->PBX->Internal Options->Music On Hold.
Skip Authentication When Inviting User via Trunk from Web GUI	If enabled, the invitation from Web GUI for a conference bridge with password will skip the authentication for the invited users. The default setting is "No".

Conference Settings contains the following options:

Table 63: Conference Settings

Enable Talk detection	If enabled, the AMI will send the corresponding event when a user
	starts or ends talking.





DSP Talking Threshold	The time in milliseconds of sound above what the dsp has established as base line silence for a user before a user is considered to be talking. This value affects several operations and should not be changed unless the impact on call quality is fully understood, the default value is 128.
DSP Silence Threshold	The time in milliseconds of sound falling within the what the dsp has established as base line silence before a user is considered to be silent. This value affects several operations and should not be changed unless the impact on call quality is fully understood, the default value is 2500.

Users can check the talking Caller IDs in conference control page (UCM WebUI-> Call Features-> Conference). The image will move up and down when the user is talking.

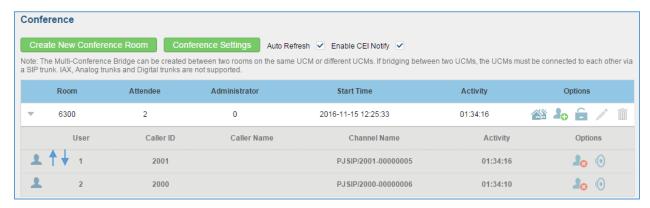


Figure 123: Conference

Join A Conference Call

Users could dial the conference bridge extension to join the conference. If password is required, enter the password to join the conference as a normal user, or enter the admin password to join the conference as administrator.

Invite Other Parties to Join Conference

When using the UCM6200 conference bridge, there are two ways to invite other parties to join the conference.

• Invite from Web GUI.





For each conference bridge in UCM6200 Web GUI->PBX->Call Features->Conference, there is an icon for option "Invite a participant". Click on it and enter the number of the party you would like to invite. Then click on "Add". A call will be sent to this number to join it into the conference.

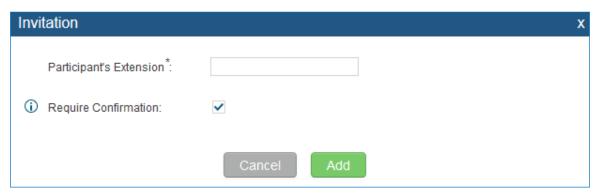


Figure 124: Conference Invitation From Web GUI

Invite by dialing 0 or 1 during conference call.

A conference participant can invite other parties to the conference by dialing from the phone during the conference call. Please make sure option "Enable User Invite" is turned on for the conference bridge first. Enter 0 or 1 during the conference call. Follow the voice prompt to input the number of the party you would like to invite. A call will be sent to this number to join it into the conference.

0: If 0 is entered to invite other party, once the invited party picks up the invitation call, a permission will be asked to "accept" or "reject" the invitation before joining the conference.

1: If 1 is entered to invite other party, no permission will be required from the invited party.

⚠ Note:

Conference administrator can always invite other parties from the phone during the call by entering 0 or 1. To join a conference bridge as administrator, enter the admin password when joining the conference. A conference bridge can have multiple administrators.

During The Conference

During the conference call, users can manage the conference from web GUI or IVR.

Manage the conference call from Web GUI.





Log in UCM6200 web GUI during the conference call, the participants in each conference bridge will be listed.

- 1. Click on 🔩 to kick a participant from the conference.
- 2. Click on to mute the participant.
- 3. Click on to lock this conference bridge so that other users cannot join it anymore.
- 4. Click on $\stackrel{1}{=}$ to invite other users into the conference bridge.
- Manage the conference call from IVR.

If "Enable Caller Menu" is enabled, conference participant can input * to enter the IVR menu for the conference. Please see options listed in the table below.

Table 64: Conference Caller IVR Menu

	Conference Administrator IVR Menu	
1	Mute/unmute yourself.	
2	Lock/unlock the conference bridge.	
3	Kick the last joined user from the conference.	
4	Decrease the volume of the conference call.	
5	Decrease your volume.	
6	Increase the volume of the conference call.	
7	Increase your volume.	
8	 More options. 1: List all users currently in the conference call. 2: Kick all non-Administrator participants from the conference call. 3: Mute/Unmute all non-Administrator participants from the conference call. 4: Record the conference call. 8: Exit the caller menu and return to the conference. 	
	Conference User IVR Menu	
1	Mute/unmute yourself.	
4	Decrease the volume of the conference call.	
5	Decrease your volume.	
6	Increase the volume of the conference call.	
7	Increase your volume.	
8	Exit the caller menu and return to the conference.	







When there is participant in the conference, the conference bridge configuration cannot be modified.

Record Conference

The UCM6200 allows users to record the conference call and retrieve the recording from web GUI->PBX->Call Features->Conference.

To record the conference call, when the conference bridge is in idle, enable "Record Conference" from the conference bridge configuration dialog. Save the setting and apply the change. When the conference call starts, the call will be automatically recorded in .wav format.

The recording files will be listed as below once available. Users could click on $\stackrel{\checkmark}{=}$ to download the recording or

click on to delete the recording. Users could also delete all recording files by clicking on "Delete All Recording Files", or delete multiple recording files at once by clicking on "Delete Selected Recording Files" after selecting the recording files.



Figure 125: Conference Recording





CONFERENCE SCHEDULE

Conference Schedule Configuration

Conference Schedule can be found under UCM6200 web **UI->PBX->Call Features->Conference Schedule**. Users can create, edit, view and delete a Conference Schedule.

- Click on "Create New Conference Schedule" to add a new Conference Schedule.
- Click on the scheduled conference to edit or delete the event.

After the user configures UCM6200 with Google Service Settings **[Google Service Settings Support]** and enables Google Calendar for Conference Schedule, the conference schedule on the UCM6200 can be synchronized with Google Calendar for authorized Google account.

Table 65: Conference Schedule Parameters

Schedule Options		
Conference Topic	Configure the name of the scheduled conference. Letters, digits, $\underline{\ }$ and - are allowed.	
Conference Room	Select a conference room for this scheduled conference.	
Kick Time(m)	Set kick time before conference starts. When kick time is reached, a warning prompt will be played for all attendees in the conference room. After 5 minutes, this conference room will be cleared and locked for the scheduled conference to begin. Note: Kick Time cannot be less than 6 minutes in order to clear the conference room.	
Description	The description of scheduled conference.	
Repeat	Repeat interval of scheduled conference. By default it's set to single event.	
Schedule Time	Configure the beginning date and duration of scheduled conference. Note: Please pay attention to avoid time conflict on schedules in the same conference room.	
Enable Google Calendar	Select this option to sync scheduled conference with Google Calendar. Note: Google Service Setting OAuth2.0 must be configured on the UCM6200. Please refer to section [Google Service Settings Support].	
Conference Administrator	Select the administrator of scheduled conference from selected extensions. Note: "Public Mode" must be disabled from Conference Room Options tab.	
Local Extension	Select available extensions from the list to attend scheduled conference.	
Remote Extension	Select available extensions from the remote peer PBX.	





	Note: "LDAP Sync" must be enabled on the UCM6200 in order to view remote extensions here.	
Special Extension	Add extensions that are not in the list (both local and remote list). If the user wishes to add the special extension, please match the pattern on the outbound route.	
Remote Conference	Invite a remote conference.	
Conference Room Opti	ions	
Password	Configure conference room password. Please note that if "Public Mode" is enabled, this option is automatically disabled.	
Admin Password	Configure the password to join as conference administrator. Please note that if "Public Mode" is enabled, this option is automatically disabled.	
Enable Caller Menu	If this option is enabled, conference participants will be able to access conference bridge menu by pressing the * key.	
Record Conference	If this option is enabled, conference call will be recorded in .wav format. The recorded file can be found from Conference page.	
Quiet Mode	If this option is enabled, the notification tone or voice prompt for joining or leaving the conference won't be played. Note: Option "Quiet Mode" and option "Announce Caller" cannot be enabled at the same time.	
Wait For Admin	If this option is enabled, the participants in the conference won't be able to hear each other until conference administrator joins the conference. Note: If "Quiet Mode" is enabled, voice prompt for this option won't be played.	
Enable User Invite	If this option is enabled, the user can: Press '0' to invite others to join the conference with invited party's permission Press '1' to invite without invited party's permission Press '2' to create a multi-conference bridge to another conference room Press '3' to drop all current multi-conference bridges Note: Conference Administrator is always allowed to access this menu.	
Announce Callers	If this option is enabled, when a participant joins the conference room, participant's name will be announced to all members in the conference room. Note: Option "Quiet Mode" and option "Announce Caller" cannot be enabled at the same time.	
Public Mode	If this option is enabled, no authentication is required for entering the conference room. Note: Please be aware of the potential security risks when turning on this option.	
Play Hold Music	If this option is enabled, UCM6200 will play Hold Music while there is only one participant in the conference room or the conference is not yet started.	
Skip Authentication	If this option is enabled, the invitation from Web GUI via a trunk with password	





When Inviting Users	won't require authentication.
via Trunk from Web	Note: Please be aware of the potential security risks when turning on this option.
GUI	

Cleaner Options

Cleaner Options	
Enable Conference Schedules Cleaner	If this option is enabled, conference schedules will be automatically cleaned as configured.
Conference Schedules Clean Time	Enter the clean time (in hours). The valid range is from 0 to 23.
Clean Interval	Enter the clean interval (in days). The valid range is from 1 to 30.

Show/hide Conference Schedule Table

Enable this option will allow web UI to display scheduled conference in Conference Schedule Table. Please see figure below.

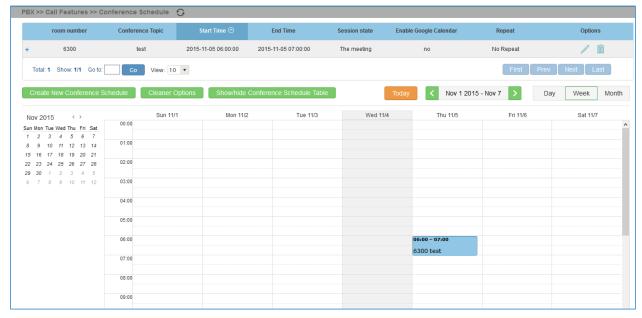


Figure 126: Conference Schedule

Once the conference room is scheduled, at the kick time, all users will be removed from conference room and no extension is allowed to join the conference room anymore. At the scheduled conference time, UCM6200 will send INVITE to the extensions that have been selected for conference.





⚠ Note:

- Please make sure that outbound route is properly configured for remote extensions to join the conference.
- Once Kick Time is reached, Conference Schedule is locked and cannot be modified.





IVR

Configure IVR

IVR configurations can be accessed under the UCM6200 Web GUI->PBX->Call Features->IVR. Users could create, edit, view and delete an IVR.

- Click on "Create New IVR" to add a new IVR.
- Click on

 to edit the IVR configuration.
- Click on to delete the IVR.

Table 66: IVR Configuration Parameters

Basic Settings			
Name	Configure the name of the IVR. Letters, digits, _ and - are allowed.		
Extension	Enter the extension number for users to access the IVR.		
DID Destination	This option shows up only when "By DID" is selected. This controls the destination that can be reached by the external caller via the inbound route. The DID destination are: • Extension • Conference • Call Queue • Ring Group • Paging/Intercom Groups • Voicemail Groups • Fax Extension • Dial by Name • All		
Dial Trunk	If enabled, all callers to the IVR is allowed to use trunk. The permission must be configured for the users to use the trunk first. The default setting is "No".		
Permission	Assign permission level for outbound calls if "Dial Trunk" is enabled. The available permissions are "Internal", "Local", "National" and "International" from the lowest level to the highest level. The default setting is "Internal". If the user tries to dial outbound calls after dialing into the IVR, the UCM6200 will compared the IVR's permission level with the outbound route's privilege level. If the IVR's permission level is higher than (or equal to) the outbound route's privilege level, the call will be allowed to go through.		
Replace Caller ID	If enabled, the UCM will replace the caller display name with the IVR name the caller know whether the call is incoming from a direct extension or an IVR.		
Alert Info	When present in an INVITE request, the alert-Info header field specifies and		





	alternative ring tone to the UAS.		
Welcome Prompt	Select an audio file to play as the welcome prompt for the IVR. Click on "Prompt" to add additional audio file under web GUI->Internal Options->IVR Prompt.		
Digit Timeout	Configure the timeout between digit entries. After the user enters a digit, the user needs to enter the next digit within the timeout. If no digit is detected within the timeout, the UCM6200 will consider the entries complete. The default timeout is 3 seconds.		
Response Timeout	After playing the prompts in the IVR, the UCM6200 will wait for the DTMF entry within the timeout (in seconds). If no DTMF entry is detected within the timeout, a timeout prompt will be played. The default setting is 10 seconds.		
Response Timeout Prompt	Select the prompt message to be played when timeout occurs.		
Invalid Prompt	Select the prompt message to be played when an invalid extension is pressed.		
Response Timeout Repeat Loops	Configure the number of times to repeat the prompt if no DTMF input is detected. When the loop ends, it will go to the timeout destination if configured, or hang up. The default setting is 3.		
Invalid Repeat Loops	Configure the number of times to repeat the prompt if the DTMF input is invalid. When the loop ends, it will go to the invalid destination if configured, or hang up. The default setting is 3.		
Language	Select the voice prompt language to be used for this IVR. The default setting is "Default" which is the selected voice prompt language under web GUI->PBX->Internal Options->Language. The dropdown list shows all the current available voice prompt languages on the UCM6200. To add more languages in the list, please download voice prompt package by selecting "Check Prompt List" under web GUI->PBX->Internal Options->Language.		

Key Pressing Events

Key Press Event:	Select the event for each key pressing for 0-9, *, Timeout and Invalid. The event
Press 0	options are:
Press 1	Extension
Press 2	Voicemail
Press 3	Conference Rooms
Press 4	Voicemail Group
Press 5	• IVR
Press 6	Ring Group
Press 7	• Queues
Press 8	Page Group
Press 9	• Fax
Press *	Custom Prompt
Timeout	Hangup





Invalid	•	DISA
	•	Dial by Name
	•	External Number
	•	Callback

Black/White List in IVR

In some scenarios, the IPPBX administrator needs to restrict the extensions that can be reached from IVR. For example, the company CEO and directors prefer only receiving calls transferred by the secretary, some special extensions are used on IP surveillance end points which shouldn't be reached from external calls via IVR for privacy reason. UCM has now added blacklist and whitelist in IVR settings for users to manage this.

To use this feature, log in UCM web UI and navigate to PBX->Call Features->IVR->Create/Edit IVR: IVR Black/White List.

- If the user selects "Blacklist Enable" and adds extension in the list, the extensions in the list will not be allowed to be reached via IVR.
- If the user selects "Whitelist Enable" and adds extension in the list, only the extensions in the list can be allowed to be reached via IVR.

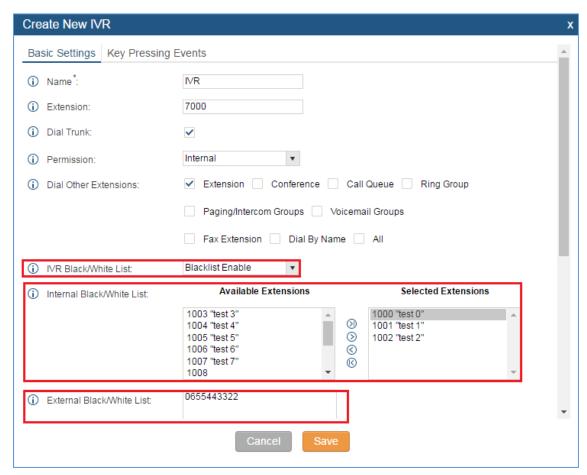


Figure 127: Black/White List





Create Custom Prompt

To record new IVR prompt or upload IVR prompt to be used in IVR, click on "Prompt" next to the "Welcome Prompt" option and the users will be redirected to Custom Prompt page. Or users could go to Web GUI->PBX->Internal Options->Custom Prompt page directly.

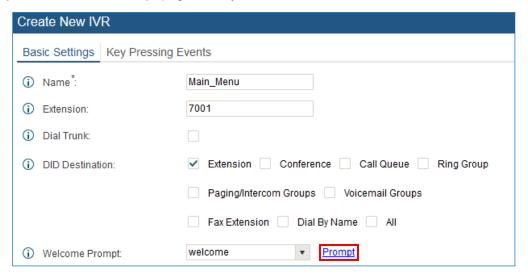


Figure 128: Click on Prompt to Create IVR Prompt

Once the IVR prompt file is successfully added to the UCM6200, it will be added into the prompt list options for users to select in different IVR scenarios.





LANGUAGE SETTINGS FOR VOICE PROMPT

The UCM6200 supports multiple languages in web GUI as well as system voice prompt. Currently, there are 16 languages supported in system voice prompt: *English (United States), Arabic, Chinese, Dutch, English (United Kingdom), French, German, Greek, Hebrew, Italian, Polish, Portuguese, Russian, Spanish, Swedish and Turkish.*

English (United States) and Chinese voice prompts are built in with the UCM6200 already. The other languages provided by Grandstream can be downloaded and installed from the UCM6200 web GUI directly. Additionally, users could customize their own voice prompts, package them and upload to the UCM6200.

Language settings for voice prompt can be accessed under Web GUI->PBX->Internal Options->Language.

Download and Install Voice Prompt Package

To download and install voice prompt package in different languages from UCM6200 web GUI, click on "Check Prompt List" button.

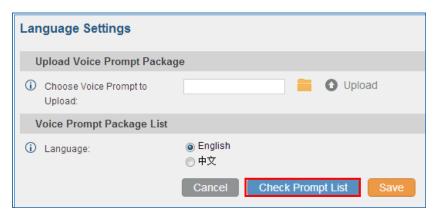


Figure 129: Language Settings for Voice Prompt

A new dialog window of voice prompt package list will be displayed. Users can see the version number (latest version available V.S. current installed version), package size and options to upgrade or download the language.





Voice Prompt Package List	Version (Remote / Local)	Size	Options
British English	1.0/-	3.7M	±
Deutsch	1.1/-	3.5M	±
English	1.0/1.0	5.1M	1
Español	1.1/-	3.7M	±
Ελληνικά	1.0/-	3.6M	±
Français	1.0/-	3.5M	±
Italiano	1.0/-	3.4M	±
Nederlands	1.0/-	3.0M	±
Polski	1.0/-	4.2M	±
Português	1.1/-	3.7M	±
Ру́сский	1.1/-	3.2M	±
Svenska	1.0/-	3.9M	±
Türkçe	1.0/-	3.1M	±
עברית	1.0/-	3.4M	±
العربية	1.1/-	4.3M	<u>+</u>

Figure 130: Voice Prompt Package List

Click on to download the language to the UCM6200. The installation will be automatically started once the downloading is finished.

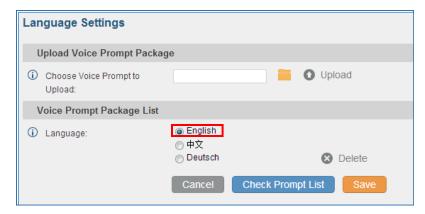


Figure 131: New Voice Prompt Language Added

A new language option will be displayed after successfully installed. Users then could select it to apply in the UCM6200 system voice prompt or delete it from the UCM6200.





Customize Specific Prompt

On the UCM6200, if the user needs to replace some specific customized prompt, the user can upload a single specific customized prompt from web **UI->PBX->Internal Options->Language** instead of the entire language pack.

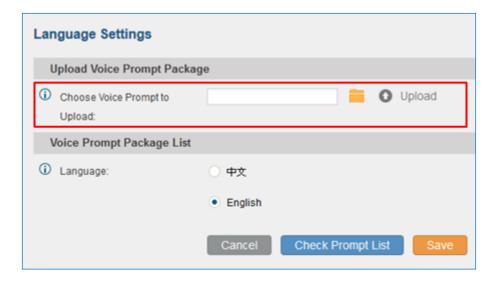


Figure 132: Upload Single Voice Prompt for Entire Language Pack





VOICEMAIL

Configure Voicemail

If the voicemail is enabled for UCM6200 extensions, the configurations of the voicemail can be globally set up and managed under Web GUI->PBX->Call Features->Voicemail.

Table 67: Voicemail Settings

	-			
Max Greeting	Configure the maximum number of seconds for the voicemail greeting. The default setting is 60 seconds.			
Dial '0' For Operator	If enabled, the caller can press 0 to exit the voicemail application and connect to the configured operator's extension.			
Operator Extension	Select the operator extension, which will be dialed when users press 0 to exit voicemail application. The operator extension can also be used in IVR.			
Max Messages Per Folder	Configure the maximum number of messages per folder in users' voicemail. The valid range 10 to 1000. The default setting is 50.			
Max Message Time	Select the maximum duration of the voicemail message. The message will not be recorded if the duration exceeds the max message time. The default setting is 15 minutes. The available options are: 1 minute 2 minutes 5 minutes 15 minutes 16 Minutes 17 Minutes 18 Minutes 19 Minutes 10 Minutes 10 Minutes 11 Minutes 12 Minutes 13 Minutes 14 Minutes 15 Minutes 15 Minutes 16 Minutes 17 Minutes 18 Minutes 18 Minutes 19 Minutes 10 Minutes 10 Minutes 10 Minutes 10 Minutes 10 Minutes 11 Minutes 12 Minutes 13 Minutes 14 Minutes 15 Minutes 15 Minutes 16 Minutes 17 Minutes 18 Minutes 18 Minutes 18 Minutes 19 Minutes 19 Minutes 10 Minutes 11 Minutes 11 Minutes 12 Minutes 13 Minutes 14 Minutes 15 Minutes 15 Minutes 16 Minutes 17 Minutes 18 Min			
Min Effective Message Time	 Unlimited Configure the minimum duration (in seconds) of a voicemail message. Messages will be automatically deleted if the duration is shorter than the Min Message Time. The default setting is 3 seconds. The available options are: No minimum 1 second 2 seconds 3 seconds 4 seconds 5 seconds Note: Silence and noise duration are not counted in message time. 			
Announce Message Caller-ID	If enabled, the caller ID of the user who has left the message will be announced at the beginning of the voicemail message. The default setting is "No".			





Announce Message	If enabled, the message duration will be announced at the beginning of the		
Duration	voicemail message. The default setting is "No".		
Play Envelope	If enabled, a brief introduction (received time, received from, and etc) of each message will be played when accessed from the voicemail application. The default setting is "Yes".		
Play from Last	If enabled, UCM will play from the voice message left most recently; if disabled, UCM will play from the earliest left voice message		
Allow User Review	If enabled, users can review the message following the IVR before sending the message out. The default setting is "No".		

Access Voicemail

If the voicemail is enabled for UCM6200 extensions, the users can dial the voicemail access feature code (by default *98 or *97) to access the extension's voicemail. The users will be prompt to enter the voicemail password and then can enter digits from the phone keypad to navigate in the IVR menu for different options.

Table 68: Voicemail IVR Menu

Main Menu	Sub Menu 1	Sub Menu 2
		1 - Send a reply
		2 - Call the person who sent this message
	3 - Advanced options	3 - Hear the message envelop
		4 - Leave a message
		* - Return to the main menu
1 - New messages	5 - Repeat the current message	
1 - New messages	7 - Delete this message	
	8 - Forward the message to another user	
	9 – Save	
	* - Help	
	# - Exit	
	0 - New messages	
2 - Change folders	1 - Old messages	
	2 - Work messages	
	3 - Family messages	
	4 - Friend messages	
	# - Cancel	





3 - Advanced	1 - Send a reply	
	2 - Call the person who sent this message	
options	3 - Hear the message envelop	
	4 - Leave a message	
	* - Return to the main menu	
	4 December of the black	1 - Accept this recording
	1 - Record your unavailable message	2 - Listen to it
	message	3 - Re-record your message
	2 - Record your busy message	1 - Accept this recording
		2 - Listen to it
		3 - Re-record your message
0 - Mailbox options	3 - Record your name	1 - Accept this recording
0 - Mailbox Options		2 - Listen to it
		3 - Re-record your message
	4 - Record temporary greeting	1 - Accept this recording
		2 - Listen to it
		3 - Re-record your message
	5 - Change your password	
	* - Return to the main menu	

Voicemail Email Settings

The UCM6200 can be configured to send the voicemail as attachment to Email. Click on "Voicemail Email Settings" button to configure the Email attributes and content.

Table 69: Voicemail Email Settings

Attach Recordings to E-Mail	If enabled, voicemails will be sent to user's Email address. The default setting is "Yes".	
Keep Recordings	If enabled, voicemail will be stored in the UCM6200 after the email is sent. The default setting is "Yes".	
	Fill in the "Subject:" and "Message:" content, to be used in the Email when sending to the user.	
Template for	The template variables are:	
Voicemail Emails	 \t: TAB \${VM_NAME}: Recipient's first name and last name \${VM_DUR}: The duration of the voicemail message 	





- \${VM MAILBOX}: The recipient's extension
- \${VM_CALLERID}: The caller ID of the person who has left the message
- \${VM_MSGNUM}: The number of messages in the mailbox
- \${VM_DATE}: The date and time when the message is left

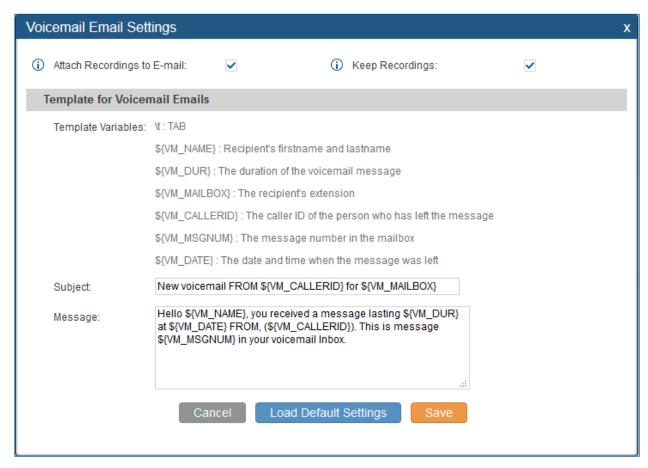


Figure 133: Voicemail Email Settings

Click on "Load Default Settings" button to view the default template as an example.

Configure Voicemail Group

The UCM6200 supports voicemail group and all the extensions added in the group will receive the voicemail to the group extension. The voicemail group can be configured under Web GUI->PBX->Call Features->Voicemail Group. Click on "Create New Voicemail Group" to configure the group.





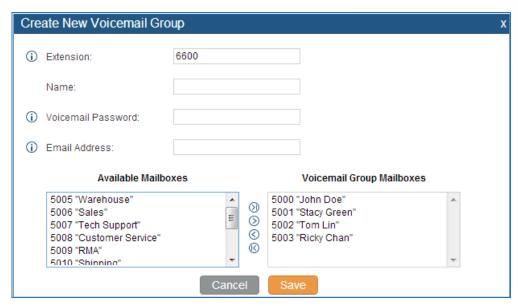


Figure 134: Voicemail Group

Table 70: Voicemail Group Settings

Extension	Enter the Voicemail Group Extension. The voicemail messages left to this extension will be forwarded to all the voicemail group members.
Name	Configure the Name to identify the voicemail group. Letters, digits, _ and - are allowed.
Voicemail Password	Configure the voicemail password for the users to check voicemail messages.
Email Address	Configure the Email address for the voicemail group extension.
Voicemail Group Mailboxes	Select available mailboxes from the left list and add them to the right list. The extensions need to have voicemail enabled to be listed in available mailboxes list.





RING GROUP

The UCM6200 supports ring group feature with different ring strategies applied to the ring group members. This section describes the ring group configuration on the UCM6200.

Configure Ring Group

Ring group settings can be accessed via Web GUI->PBX->Call Features->Ring Group.



Figure 135: Ring Group

- Click on "Create New Ring Group" to add ring group.
- Click on to edit the ring group. The following table shows the ring group configuration parameters.
- Click on to delete the ring group.

Table 71: Ring Group Parameters

Ring Group Name	Configure ring group name to identify the ring group. Letters, digits, $\underline{\ }$ and $-$ are allowed.
Extension	Configure the ring group extension.
Ring Group Members	Select available users from the left side to the ring group member list on the right side. Click on $\bigotimes \bigotimes \bigotimes$ to arrange the order.
Selected LDAP Numbers	Select available remote users from the left side to the ring group member list on the right side. Click on $\bigotimes \bigotimes \bigotimes$ to arrange the order. Note: LDAP Sync must be enabled first.
Ring Strategy	 Ring simultaneously. Ring all the members at the same time when there is incoming call to the ring group extension. If any of the member answers the call, it will stop ringing. Ring in order. Ring the members with the order configured in ring group list. If the first member doesn't answer the call, it will stop ringing the first member and start ringing the second member.





Music On Hold	Select the "Music On Hold" Class of this Ring Group, "Music On Hold" can be managed from the "Music On Hold" panel on the left.
Custom Prompt	This option is to set a custom prompt for a ring group to announce to caller. Click on 'Prompt', it will direct to the page PBX->Internal Options->Custom Prompt , where users could record new prompt or upload prompt files.
Ring Timeout on Each Member	Configure the number of seconds to ring each member. If set to 0, it will keep ringing. The default setting is 30 seconds. Note: The actual ring timeout might be overridden by users if the phone has ring timeout settings as well.
Auto Record	If enabled, calls on this ring group will be automatically recorded. The default setting is No. The recording files can be accessed from web GUI->CDR->Recording Files.
Replace Caller ID	If enabled, the UCM will replace the caller display name with the Ring Group name the caller know whether the call is incoming from a direct extension or a Ring Group.
Enable Destination	If enabled, users could select extension, voicemail, ring group, IVR, call queue, voicemail group as the destination if the call to the ring group has no answer. Secret and Email address are required if voicemail is selected as the destination.
Secret	Configure the password to access the ring group extension's voicemail. Note: The password has to be at least 4 characters.
Email Address	Configure the Email address of the ring group extension's voicemail. If "Attach Recordings to E-mail" is enabled from Web GUI->PBX->Voicemail->Voicemail Email Settings, the voicemail can be sent to the ring group's Email address as attachment.





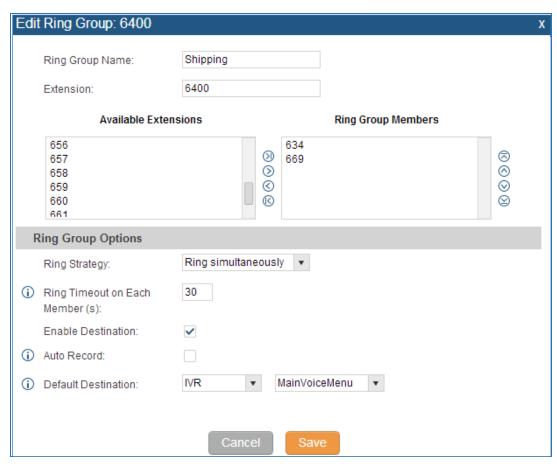


Figure 136: Ring Group Configuration

Remote Extension in Ring Group

Remote extensions from the peer trunk of a remote UCM6200 can be included in the ring group with local extension. An example of Ring Group with peer extensions is presented in the following:

 Creating SIP Peer Trunk between both UCM6200_A and UCM6200_B. SIP Trunk can be found under web UI-> PBX-> Basic/Call Routes-> VolP Trunks. Also, please configure their Inbound/Outbound routes accordingly.

Options

2. Click edit button in the menu allow UCM6200_A update remote LDAP server automatically from peer UCM6200_B. In addition, Sync LDAP Password must match for UCM6200_A and UCM6200_B in order to sync LDAP contact automatically. Port number can be anything between 0~65535, and use the outbound rule created in step 1 for the LDAP Outbound Rule option.





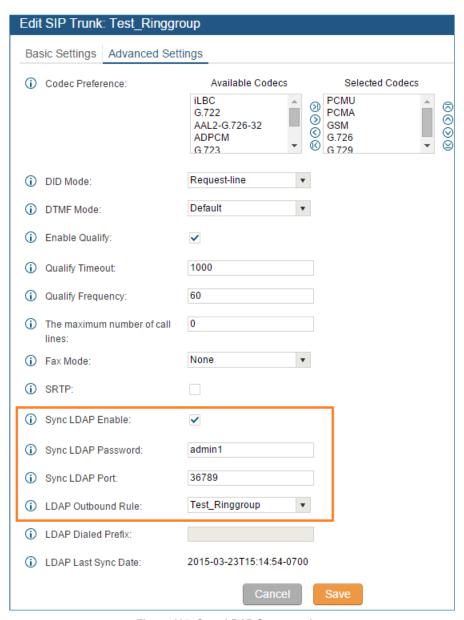


Figure 137: Sync LDAP Server option

In case if LDAP server doesn't sync automatically, user can manually sync LDAP server. Under VolP Trunks
page, click sync button shown in the following figure to manually sync LDAP contacts from peer UCM6200.



Figure 138: Manually Sync LDAP Server





- Under Ring Groups setting page, click
 UI-> PBX-> Call Features-> Ring Groups.

 Create New Ring Group
 Ring Groups can be found under web
- If LDAP server is synced correctly, Available LDAP Numbers box will display available remote extensions
 that can be included in the current ring group. Please also make sure the extensions in the peer UCM6200
 can be included into that UCM6200's LDAP contact.

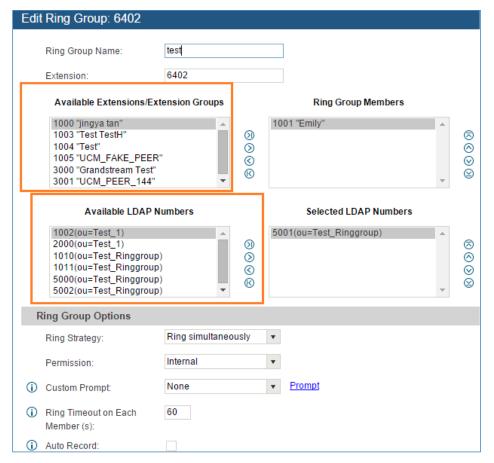


Figure 139: Ring Group Remote Extension





PAGING AND INTERCOM GROUP

Paging and Intercom Group can be used to make an announcement over the speaker on a group of phones. Targeted phones will answer immediately using speaker. The UCM6200 paging and intercom can be used via feature code to a single extension or a paging/intercom group. This section describes the configuration of paging/intercom group under Web GUI->PBX->Call Features->Paging/Intercom.

Configure Paging/Intercom Group

Click on "Create New Paging/Intercom Group" to add paging/intercom group.

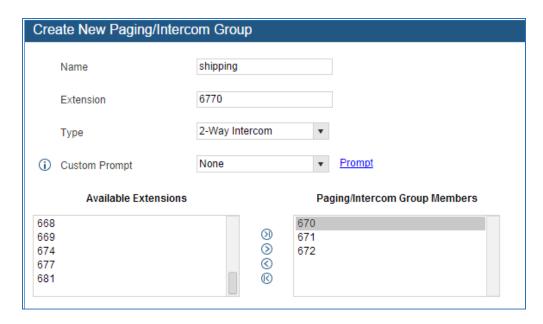


Figure 140: Paging/Intercom Group

Table 72: Paging/Intercom Group Configuration Parameters

Name	Configure paging/intercom group name.
Extension	Configure the paging/intercom group extension.
Туре	Select "2-way Intercom" or "1-way Page".
Custom Prompt	This option is to set a custom prompt for a paging/intercom group to announce to caller. Click on 'Prompt', it will direct to the page PBX->Internal Options->Custom Prompt , where users could record new prompt or upload prompt files.
Page/Intercom Group Members	Select available users from the left side to the paging/intercom group member list on the right.





- Click on

 to edit the paging/intercom group.
- Click on to delete the paging/intercom group.
- Click on "Paging/Intercom Group Settings" to edit Alert-Info Header. This header will be included in the SIP INVITE message sent to the callee in paging/intercom call.



Figure 141: Page/Intercom Group Settings

• The UCM6200 has pre-configured paging/intercom feature code. By default, the Paging Prefix is *81 and the Intercom Prefix is *80. To edit page/intercom feature code, click on "Feature Codes" in the "Paging/Intercom Group Settings" dialog. Or users could go to Web GUI->PBX->Internal Options->Feature Codes directly.





CALL QUEUE

The UCM6200 supports call queue by using static agents or dynamic agents. Call Queue system can accept more calls than the available agents. Incoming calls will be held until next representative is available in the system. This section describes the configuration of call queue under Web GUI->PBX->Call Features->Call Queue.

Configure Call Queue

Call queue settings can be accessed via Web GUI->PBX->Call Features->Call Queue.

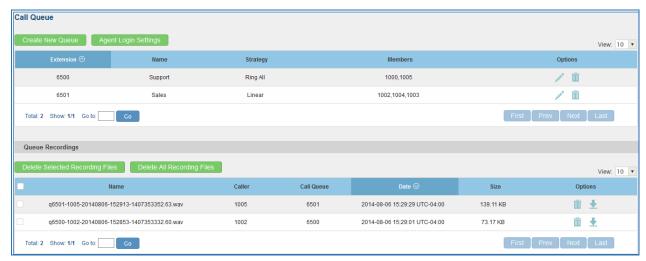


Figure 142: Call Queue

UCM6200 supports custom prompt feature in call queue. This custom prompt will active after the caller waits for a period of time in the Queue. Then caller could choose to leave a message/ transfer to default extension or keep waiting in the queue.

To configure this feature, please go to UCM web UI-> PBX-> Call Features-> Call Queue-> Create New Queue/Edit Queue-> Queue Options-> set Enable Destination to Enter Destination with Voice Prompt. Users could configure the wait time with Voice Prompt Cycle.

- Click on "Create New Queue" to add call queue.
- Click on

 to edit the call queue. The call queue configuration parameters are listed in the table below.

Table 73: Call Queue Configuration Parameters

Extension	Configure the call queue extension.
Name	Configure the call queue name to identify the call queue.





	Colort the atratagy for the call guara
	Select the strategy for the call queue.
	 Ring All Ring all available Agents simultaneously until one answers.
	Linear Ring agents in the specified order.
	Ring the agent who has been called the least recently.
Strategy	Fewest Calls
	Ring the agent with the fewest completed calls.
	Random
	Ring a random agent.
	Round Robin
	Ring the agents in Round Robin scheduling with memory.
	The default setting is "Ring All".
	Select the Music On Hold class for the call queue.
Music On Hold	Note:
	Music On Hold classes can be managed from Web GUI-> PBX->Internal Options->Music On Hold.
	Configure whether the callers will be disconnected from the queue or not if the
	queue has no agent anymore. The default setting is "Strict".
	• Yes
	Callers will be disconnected from the queue if all agents are paused or invalid.
Leave When Empty	• No
	Never disconnect the callers from the queue when the queue is empty.
	and the second s
	• Strict
	Strict Callers will be disconnected from the queue if all agents are paused, invalid
	Strict Callers will be disconnected from the queue if all agents are paused, invalid or unavailable.
	Strict Callers will be disconnected from the queue if all agents are paused, invalid
	Strict Callers will be disconnected from the queue if all agents are paused, invalid or unavailable. Configure whether the callers can dial into a call queue if the queue has no agent. The default setting is "No".
	 Strict Callers will be disconnected from the queue if all agents are paused, invalid or unavailable. Configure whether the callers can dial into a call queue if the queue has no agent.
Dial in Empty Queue	 Strict Callers will be disconnected from the queue if all agents are paused, invalid or unavailable. Configure whether the callers can dial into a call queue if the queue has no agent. The default setting is "No". Yes
Dial in Empty Queue	 Strict Callers will be disconnected from the queue if all agents are paused, invalid or unavailable. Configure whether the callers can dial into a call queue if the queue has no agent. The default setting is "No". Yes Callers can always dial into a call queue.
Dial in Empty Queue	 Strict Callers will be disconnected from the queue if all agents are paused, invalid or unavailable. Configure whether the callers can dial into a call queue if the queue has no agent. The default setting is "No". Yes Callers can always dial into a call queue. No
Dial in Empty Queue	 Strict Callers will be disconnected from the queue if all agents are paused, invalid or unavailable. Configure whether the callers can dial into a call queue if the queue has no agent. The default setting is "No". Yes Callers can always dial into a call queue. No Callers cannot dial into a queue if all agents are paused or invalid.





Dynamic Login Password	If enabled, the configured PIN number is required for dynamic agent to log in. The default setting is disabled.
Replace Caller ID	If enabled, the UCM will replace the caller display name with the Call Queue name the caller know whether the call is incoming from a direct extension or a Call Queue.
Ring Time Out	Configure the number of seconds an agent will ring before the call goes to the next agent. The default setting is 15 seconds.
Wrapup Time	Configure the number of seconds before a new call can ring the queue after the last call on the agent is completed. If set to 0, there will be no delay between calls to the queue. The default setting is 15 seconds.
Retry Time	Configure the number of seconds to wait before ringing the next agent.
Max Queue Length	Configure the maximum number of calls to be queued at once. This number does not include calls that have been connected with agents. It only includes calls not connected yet. The default setting is 0, which means unlimited. When the maximum value is reached, the caller will be treated with busy tone followed by the next calling rule after attempting to enter the queue.
Report Hold Time	If enabled, the UCM6200 will report (to the agent) the duration of time of the call before the caller is connected to the agent. The default setting is "No".
Wait Time	If enabled, users will be disconnected after the configured number of seconds. The default setting is "No". Note: It is recommended to configure "Wait Time" longer than the "Wrapup Time".
Auto Record	If enabled, the calls on the call queue will be automatically recorded. The recording files can be accessed in Queue Recordings under web GUI->PBX->Call Features->Call Queue.
Enable Destination	If enabled, the incoming call for the call queue will be routed to the destination configured in the next field if none of the agents answers the call after ringing for a time of "Ring Timeout".
Queue Timeout	Configure the global timeout (in seconds) of call queue. It must be bigger than the value of ring timeout. The call in the queue will be transferred to the failover destination directly if this time is exceeded.
Failover Destination	Configure the call destination for the call to be routed to if no agent in this call queue answers the call.
Alert-Info	Configure the call destination for the call to be routed to if no agent in this call queue answers the call.
Enable Feature Codes	Enable feature codes option for call queue. For example, *83 is used for "Agent Pause"
Agents	Select the available users to be the static agents in the call queue. Choose from the available users on the left to the static agents list on the right. Click on \bigcirc \bigcirc \bigcirc \bigcirc to arrange the order.





- Click on to delete the call queue.
- Click on "Agent Login Settings" to configure Agent Login Extension Postfix and Agent Logout Extension Postfix. Once configured, users could log in the call queue as dynamic agent.



Figure 143: Agent Login Settings

For example, if the call queue extension is 6500, Agent Login Extension Postfix is * and Agent Logout Extension Postfix is **, users could dial 6500* to login to the call queue as dynamic agent and dial 6500** to logout from the call queue. Dynamic agent doesn't need to be listed as static agent and can log in/log out at any time.

- Call queue feature code "Agent Pause" and "Agent Unpause" can be configured under Web GUI->PBX->Internal Options->Feature Codes. The default feature code is *83 for "Agent Pause" and *84 for "Agent Unpause".
- Queue recordings are shown on the Call Queue page. Click on to download the recording file in .wav format; click on to delete the recording file. To delete multiple recording files by one click, select several recording files to be deleted and click on "Delete Selected Recording Files" or click on "Delete All Recording Files" to delete all recording files.





EXTENSION GROUPS

The UCM6200 extension group feature allows users to assign and categorize extensions in different groups to better manage the configurations on the UCM6200. For example, when configuring "Enable Filter on Source Caller ID", users could select a group instead of each person's extension to assign. This feature simplifies the configuration process and helps manage and categorize the extensions for business environment.

Configure Extension Groups

Extension group can be configured via Web GUI->PBX->Call Features->Extension Groups.

- Click on "Create New Extension Group" to create a new extension group.
- Click on to edit the extension group.
 Select extensions from the list on the left side to the right side.

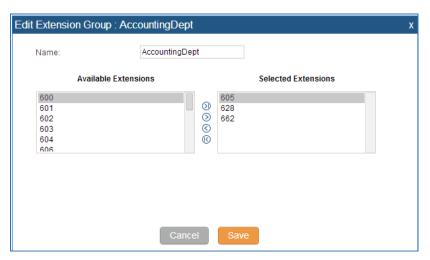


Figure 144: Edit Extension Group

• Click on to delete the extension group.

Using Extension Groups

Here is an example where the extension group can be used. Go to Web GUI->PBX->Basic/Call Routes->Outbound Routes and select "Enable Filter on Source Caller ID". Both single extensions and extension groups will show up for users to select.





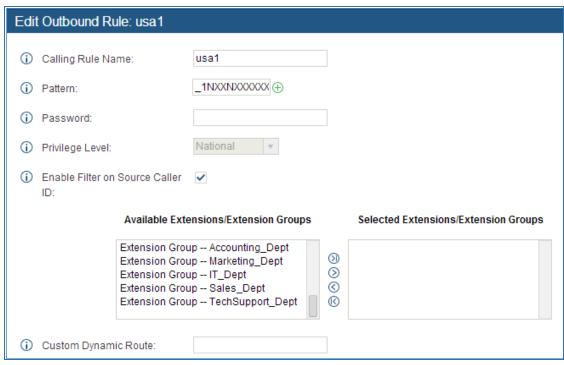


Figure 145: Select Extension Group in Outbound Route





PICKUP GROUPS

The UCM6200 supports pickup group feature which allows users to pick up incoming calls for other extensions if they are in the same pickup group, by dialing "Pickup Extension" feature code (by default *8).

Configure Pickup Groups

Pickup groups can be configured via Web GUI->PBX->Call Features->Pickup Groups.

- Click on "Create New Pickup Group" to create a new pickup group.
- Click on to edit the pickup group.
 Select extensions from the list on the left side to the right side.

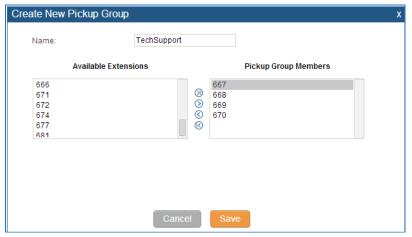


Figure 146: Edit Pickup Group

• Click on to delete the pickup group.

Configure Pickup Feature Code

When picking up the call for the pickup group member, the user only needs to dial the pickup feature code. It's not necessary to add the extension number after the pickup feature code. The pickup feature code is configurable under Web GUI->PBX->Internal Options->Feature Codes.

The default pickup feature code is *8.





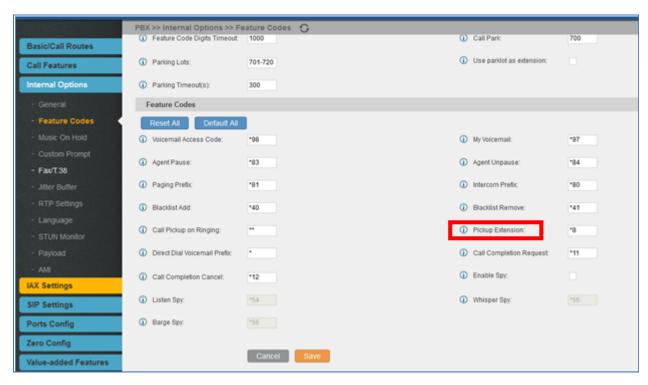


Figure 147: Edit Pickup Feature Code





MUSIC ON HOLD

Music On Hold settings can be accessed via Web GUI->PBX->Internal Options->Music On Hold. In this page, users could configure music on hold class and upload music files. The "default" Music On Hold class already has 5 audio files defined for users to use.

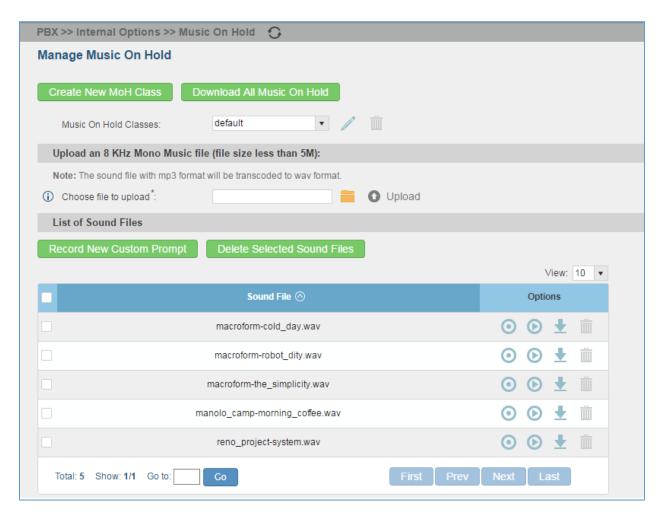


Figure 148: Music On Hold Default Class

- Click on "Create New MOH Class" to add a new Music On Hold class.
- Click on to configure the MOH class sort method to be "Alpha" or "Random" for the sound files.
- Click on next to the selected Music On Hold class to delete this Music On Hold class.
- Click on to select music file from local PC and click on to start uploading. Users can upload:
 - > Single files with 8KHz Mono Music file, or





- ➤ Music on hold files in a compressed package with .tar, .tar.gz and .tgz as the suffix. The file name can only be letters, digits or special characters -_
- the size for the uploaded file should be less than 30M, the compressed file will be applied to the entire MoH.
- Users could also download all the music on hold files from UCM. In the Music On Hold page, click on

Download All Music On Hold and the file will be downloaded to your local PC.

- Click on next to the sound file to delete it from the selected Music On Hold Class.
- Select the sound files and click on Delete Selected Sound Files to delete all selected music on hold files.

Note: the size for the uploaded file should be less than 30M, the compressed file will be applied to the entire MoH.

The UCM6200 allows Users to select the Music on Hold file from WebGUI to play it. The UCM6200 will initiate a call to the selected extension and play this Music on Hold file once the call is answered.

Steps to play the music on hold file:

- 1. Click on the button for the Music on Hold file.
- 2. In the prompted window, select the extension to playback and click



Figure 149: Play Custom Prompt

- 3. The selected extension will ring.
- 4. Answer the call to listen to the music playback.

Users could also record their own Music on hold to override an existing custom prompt, this can be done by following those steps:

1. Click on .





2. A prompt of confirmation will pop up, as shown below.

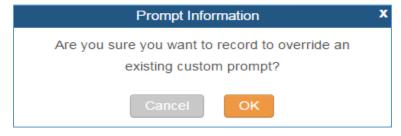


Figure 150: Information Prompt

- 3. Click OK
- 4. In the prompted window, select the extension to playback and click Play.



Figure 151: Record Custom Prompt

- 5. Answer the call and start to record your new music on hold.
- 6. Hangup the call and refresh Music On Hold page then you can listen to the new recorded file.



Once the MOH file is deleted, there are two ways to recover the music files.

- Users could download the MOH file from this link: http://downloads.asterisk.org/pub/telephony/sounds/releases/asterisk-moh-opsound-wav-2.03.tar.gz
 After downloading and unzip the pack, users could then upload the music files to UCM.
- Factory reset could also recover the MOH file on the UCM.





FAX/T.38

The UCM6200 supports T.30/T.38 Fax and Fax Pass-through. It can convert the received Fax to PDF format and send it to the configured Email address. Fax/T.38 settings can be accessed via Web GUI->PBX->Internal Options->FAX/T.38. The list of received Fax files will be displayed in the same web page for users to view, retrieve and delete.

Configure Fax/T.38

- Click on "Create New Fax Extension". In the popped-up window, fill the extension, name and Email address
 to send the received Fax to.
- Click on "Fax Settings" to configure the Fax parameters.

Table 74: FAX/T.38 Settings

Enable Error Correction Mode	Configure to enable Error Correction Mode (ECM) for the Fax. The default setting is "Yes".
Maximum Transfer Rate	Configure the maximum transfer rate during the Fax rate negotiation. The possible values are 2400, 4800, 7200, 9600, 12000 and 14400. The default setting is 14400.
Minimum Transfer Rate	Configure the minimum transfer rate during the Fax rate negotiation. The possible values are 2400, 4800, 7200, 9600, 12000 and 14000. The default setting is 2400.
Max Concurrent Sending Fax	Configure the concurrent fax that can be sent by UCM6200. Two mode "Only" and "More" are supported. • Only Under this mode, the UCM6200 allows only single user to send fax at a time. • More Under this mode, the UCM6200 supports multiple concurrent fax sending by the users. By default, this option is set to "only".
Fax Queue Length	Configure the maximum length of Fax Queue from 6 to 10. The default setting is 6.
Default Email Address	Configure the Email address to send the received Fax to if user's Email address cannot be found. Note: The extension's Email address or the Fax's default Email address needs to be configured in order to receive Fax from Email. If neither of them is configured, Fax will not be received from Email.
Template Variables	Fill in the "Subject:" and "Message:" content, to be used in the Email when sending the Fax to the users.





The template variables are:

- \${CALLERIDNUM} : Caller ID Number
- \${CALLERIDNAME} : Caller ID Name
- \${RECEIVEEXTEN} : The extension to receive the Fax
- \${FAXPAGES} : Number of pages in the Fax
- \${VM_DATE} : The date and time when the Fax is received
- Click on to edit the Fax extension.
- Click on to delete the Fax extension.

Sample Configuration to Receive Fax from PSTN Line

The following instructions describe how to use the UCM6200 to receive Fax from PSTN line on the Fax machine connected to the UCM6200 FXS port.

- 1. Connect Fax machine to the UCM6200 FXS port.
- 2. Connect PSTN line to the UCM6200 FXO port.
- 3. Go to web GUI->PBX->Analog Trunks page.
- 4. Create or edit the analog trunk for Fax as below.

Fax Mode: Make sure "Fax Mode" option is set to "None".





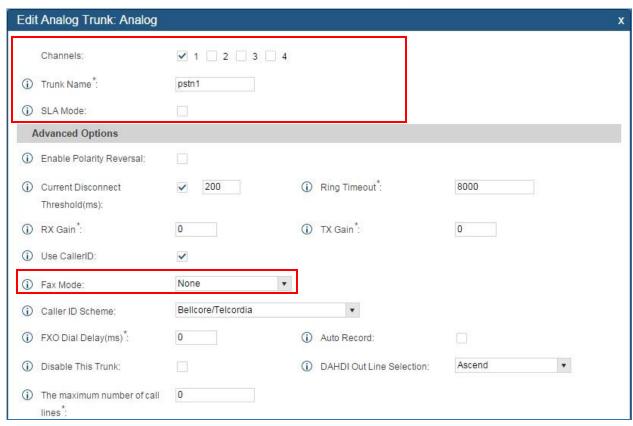


Figure 152: Configure Analog Trunk without Fax Detection

- 5. Go to UCM6200 web GUI->PBX->Basic/Call Routes->Extensions page.
- 6. Create or edit the extension for FXS port.
 - Analog Station: Select FXS port to be assigned to the extension. By default, it's set to "None".
 - Once selected, analog related settings for this extension will show up in "Analog Settings" section.

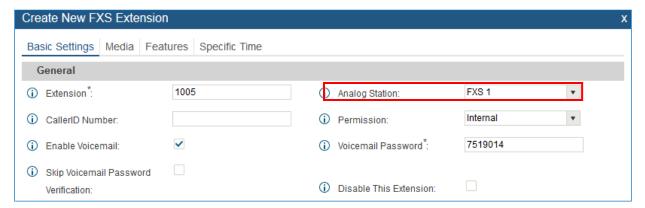


Figure 153: Configure Extension for Fax Machine: FXS Extension





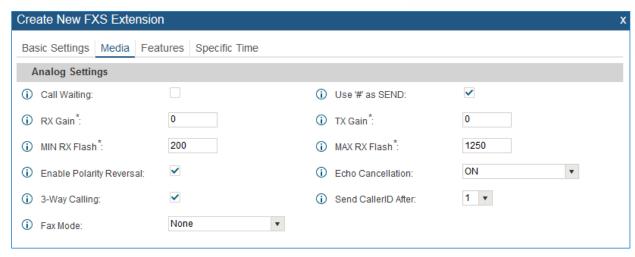


Figure 154: Configure Extension for Fax Machine: Analog Settings

- 7. Go to web GUI->PBX->Basic/Call Routes->Inbound Routes page.
- 8. Create an inbound route to use the Fax analog trunk. Select the created extension for Fax machine in step 4 as the default destination.

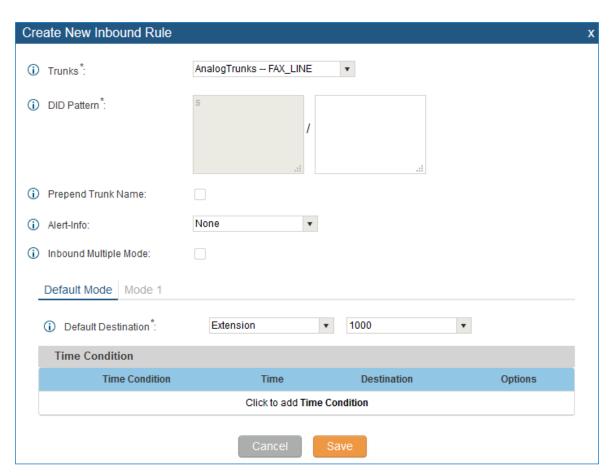


Figure 155: Configure Inbound Rule for Fax





Now the Fax configuration is done. When there is an incoming Fax calling to the PSTN number for the FXO port, it will send the Fax to the Fax machine.

Sample Configuration for Fax-To-Email

The following instructions describe a sample configuration on how to use Fax-to-Email feature on the UCM6200.

- 1. Connect PSTN line to the UCM6200 FXO port.
- 2. Go to UCM6200 web GUI->Internal Options->Fax/T.38 page. Create a new Fax extension.

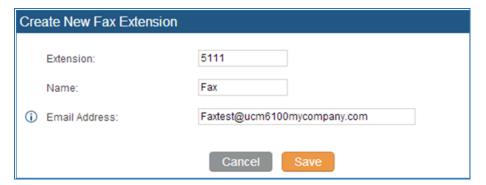


Figure 156: Create Fax Extension

- 3. Go to UCM6200 web GUI->Basic/Call Routes->Analog Trunks page. Create a new analog trunk. Please make sure "Fax Detection" is set to "No".
- 4. Go to UCM6200 web GUI->Basic/Call Routes->Inbound Routes page. Create a new inbound route and set the default destination to the Fax extension.





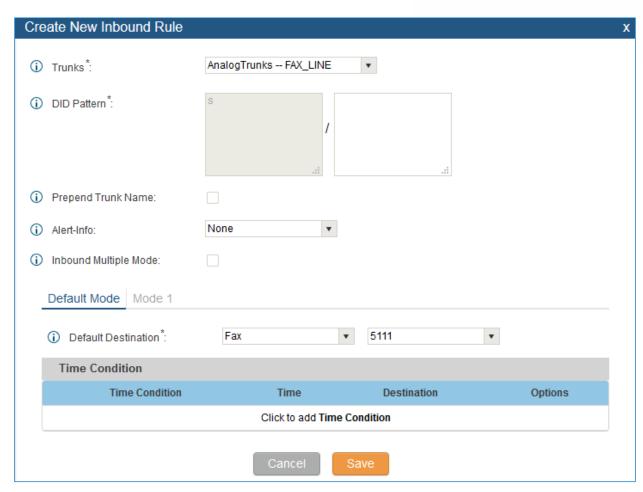


Figure 157: Inbound Route to Fax Extension

5. Once successfully configured, the incoming Fax from external Fax machine to the PSTN line number will be converted to PDF file and sent to the Email address **Faxtest@ucm6200mycompany.com** as attachment.





ASTERISK MANAGER INTERFACE (RESTRICTED ACCESS)

The UCM6200 supports Asterisk Manager Interface (AMI) with restricted access. AMI allows a client program to connect to an Asterisk instance commands or read events over a TCP/IP stream. It's particularly useful when the system admin tries to track the state of a telephony client inside Asterisk.

User could configure AMI parameters on UCM6200 web GUI->PBX->Internal Options->AMI. For details on

how to use AMI on UCM6200,	please refer to the following AMI	I guide:	

http://www.grandstream.com/sites/default/files/Resources/UCM series AMI guide.pdf

Warning:

Please do not enable AMI on the UCM6200 if it is placed on a public or untrusted network unless you have taken steps to protect the device from unauthorized access. It is crucial to understand that AMI access can allow AMI user to originate calls and the data exchanged via AMI is often very sensitive and private for your UCM6200 system. Please be cautious when enabling AMI access on the UCM6200 and restrict the permission granted to the AMI user. By using AMI on UCM6200 you agree you understand and acknowledge the risks associated with this.





BUSY CAMP-ON

The UCM6200 supports busy camp-on/call completion feature that allows the PBX to camp on a called party and inform the caller as soon as the called party becomes available given the previous attempted call has failed.

The configuration and instructions on how to use busy camp-on/call completion feature can be found in the following guide:

http://www.grandstream.com/sites/default/files/Resources/ucm6xxx busy camp on guide.pdf





FOLLOW ME

Follow Me is a feature on the UCM6200 that allows users to direct calls to other phone numbers and have them ring all at once or one after the other. Calls can be directed to users' home phone, office phone, mobile and etc. The calls will get to the user no matter where they are. Follow Me option can be found under web **GUI-> PBX-> Call Features->Follow Me.**

To configure follow me:

Click on "Create New Follow Me" and then select an extension to be configured with Follow Me.



Figure 158: Create Follow Me

Click on "Next" to continue editing Follow Me configuration.

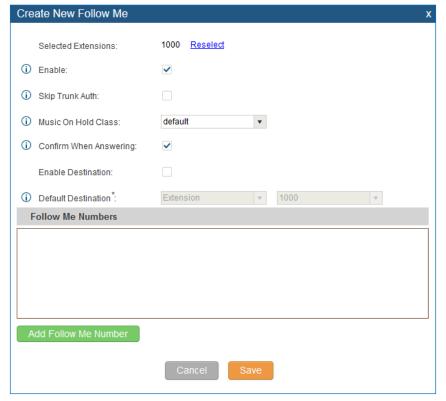


Figure 159: Edit Follow Me





- Click on "Add Follow Me Number" to add local extensions or external numbers to be called after ringing the extension selected in the first step.
- Once created, it will be displayed on the follow me web page list. Click on
 to edit the Follow Me configuration. Click on to delete the Follow Me.

The following table shows the Follow Me configuration parameters.

Table 75: Follow Me Settings

Enable	Configure to enable or disable Follow Me for this user.
Skip Trunk Auth	If external number is added in the Follow Me, please make sure this option is enabled or the "Skip Trunk Auth" option of the extension is enabled, otherwise the external Follow Me number cannot be reached.
Music On Hold Class	Configure the Music On Hold class that the caller would hear while tracking the user.
Confirm When Answering	By default, it is enabled and user will be asked to press 1 to accept the call or to press 2 to reject the call after answering a Follow Me call. If it is disabled, the Follow Me call will be established once after the user answers it.
Enable Destination	When enabled, the call will be routed to the default destination if no one in the Follow Me extensions answers the call.
Default Destination	Configure the destination if no one in the Follow Me extensions answers the call. The available options are: Extension Voicemail Queues Ring Group Voicemail Group IVR External Number
Follow Me Numbers	The added numbers are listed here. Click on \bigcirc \bigcirc to arrange the order. Click on \bigcirc to delete the number. Click on \bigcirc to add new numbers.
New Follow Me Number	Add a new Follow Me number which could be a 'Local Extension' or 'External Number'. The selected dial plan should have permissions to dial the defined external number.
Dialing Order	Select the order in which the Follow Me destinations will be dialed to reach the user: ring all at once or ring one after the other.

• Click on "Follow Me Options" to enable or disable the options listed in the following table.





Table 76: Follow Me Options

Playback Incoming Status Message	If enabled, the PBX will playback the incoming status message before starting the Follow Me steps.
Record the Caller's Name	If enabled, the PBX will record the caller's name from the phone so it can be announced to the callee in each step.
Playback Unreachable Status Message	If enabled, the PBX will playback the unreachable status message to the caller if the callee cannot be reached.





SPEED DIAL

The UCM6200 supports One-Key Dial that allows users to call a certain destination by pressing one digit 0 to 9 on the keypad. This creates a system-wide speed dial access for all the extensions on the UCM6200.

To enable One-Key Dial, on the UCM6200 web GUI, go to page PBX->Call Features->One-Key Dial.



Figure 160: Configure Speed Dial

User should first click on Create New Speed Dial. Then decide a one digit or two digits used for Speed Dial and select a dial destination from "Default Destination". The supported destinations include extension, voicemail, conference room, voicemail group, IVR, ring group, call queue, page group, fax, DISA, Dial by Name and external number.



Figure 161: Speed Dial Destinations





DISA

In many situations the user will find the need to access his own IP PBX resources but he is not physically near one of his extensions. However, he does have access to his own cell phone. In this case we can use what is commonly known as DISA (Direct Inward System Access). Under this scenario the user will be able to call from the outside, whether it's using his cell phone, pay phone, regular PSTN, etc. After calling into UCM6200, the user can then dial out via the SIP trunk or PSTN trunk connected to UCM6200 as it is an internal extension.

The UCM6200 supports DISA to be used in IVR or inbound route. Before using it, create new DISA under web GUI->Call Features->DISA.

- Click on "Create New IVR" to add a new DISA.
- Click on

 to edit the DISA configuration.
- Click on to delete the DISA.



Figure 162: Create New DISA

Table 77: DISA Settings

Name	Configure DISA name to identify the DISA.
Password	Configure the password (digit only) required for the user to enter before using DISA to dial out.
	Note: The password has to be at least 4 digits.
Permission	Configure the permission level for DISA. The available permissions are "Internal", "Local", "National" and "International" from the lowest level to the highest level.





	The default setting is "Internal". If the user tries to dial outbound calls after dialing into the DISA, the UCM6200 will compared the DISA's permission level with the outbound route's privilege level. If the DISA's permission level is higher than (or equal to) the outbound route's privilege level, the call will be allowed to go through.
Response Timeout	Configure the maximum amount of time the UCM6200 will wait before hanging up if the user dials an incomplete or invalid number. The default setting is 10 seconds.
Digit Timeout	Configure the maximum amount of time permitted between digits when the user is typing the extension. The default setting is 5 seconds.
Allow Hangup	If enabled, during an active call, users can enter the UCM6200 hangup feature code (by default it's *0) to disconnect the call or hang up directly. A new dial tone will be heard shortly for the user to make a new call. The default setting is "No".

Once successfully created, users can configure the inbound route destination as "DISA" or IVR key event as "DISA". When dialing into DISA, users will be prompted with password first. After entering the correct password, a second dial tone will be heard for the users to dial out.





CALLBACK FEATURE

Callback is mainly designed for users who often use their mobile phones to make long distance or international calls which may have high service charges. The callback feature provides an economic solution for reduce the cost from this.

The callback feature works as follows:

- 1. Configure a new callback on the UCM6200.
- 2. On the UCM6200, configure destination of the inbound route for analog trunk to callback.
- 3. Save and apply the settings.
- 4. The user calls the PSTN number of the UCM6200 using the mobile phone, which goes to callback destination as specified in the inbound route.
- 5. Once the user hears the ringback tone from the mobile phone, hang up the call on the mobile phone.
- 6. The UCM6200 will call back the user.
- 7. The user answers the call.
- 8. The call will be sent to DISA or IVR which directs the user to dial the destination number.
- 9. The user will be connected to the destination number.

In this way, the calls are placed and connected through trunks on the UCM6200 instead of to the mobile phone directly. Therefore, the user will not be charged on mobile phone services for long distance or international calls.

To configure callback on the UCM6200, go to web GUI->PBX->Call Features->Callback page and click on

Create New Callback . Configuration parameters are listed in the following table.

Table 78: Callback Configuration Parameters

Name	Configure a name to identify the Callback.
CallerID Pattern	Configure the pattern of the callers allowed to use this callback. The caller who places the inbound call needs to have the callerID match this pattern so that the caller can get callback after hanging up the call. Note: If leaving as blank, all numbers are allowed to use this callback.
Outbound Prepend	Configure the prepend digits to be added at before dialing the outside number. The number with prepended digits will be used to match the outbound route. '-' is the connection character which will be ignored.
Delay Before Callback	Configure the number of seconds to be delayed before calling back the user.
Destination	Configure the destination which the callback will direct the caller to. Two destinations are available:





- IVR
- DISA

The caller can then enter the desired number to dial out via UCM6200 trunk.





BLF AND EVENT LIST

BLF

The UCM6200 supports BLF monitoring for extensions, ring group, call queue, conference room and parking lot. For example, on the user's phone, configure the parking lot number 701 as the BLF monitored number. When there is a parked call on 701, the LED for this BLF key will light up in red, meaning a call is parked against this parking lot. Pressing this BLF key can pick up the call from this parking lot.

⚠ Note:

On the Grandstream GXP series phones, the MPK supports "Call Park" mode, which can be used to park the call by configuring the MPK number as call park feature code (e.g., 700). MPK "Call Park" mode can also be used to monitor and pickup parked call if the MPK number is configured as parking lot (e.g., 701).

Event List

Besides BLF, users can also configure the phones to monitor event list. In this way, both local extensions on the same UCM6200 and remote extensions on the VOIP trunk can be monitored. The event list setting is under web GUI->Call Features->Event List.

- Click on "Create New Event List" to add a new event list.
- Sort selected extensions manually in the Eventlist
- Click on

 to edit the event list configuration.
- Click on to delete the event list.

Table 79: Event List Settings

URI	Configure the name of this event list (for example, office_event_list). Please note the URI name cannot be the same as the extension name on the UCM6200. The valid characters are letters, digits, _ and
Local Extensions	Select the available extensions/Extension Groups listed on the local UCM6200 to be monitored in the event list.
Remote Extensions	If LDAP sync is enabled between the UCM6200 and the peer UCM6200, the remote extensions will be listed under "Available Extensions". If not, manually enter the remote extensions under "Special Extensions" field.





Special Extensions

Manually enter the remote extensions in the peer/register trunk to be monitored in the event list.

Valid format: 5000,5001,9000

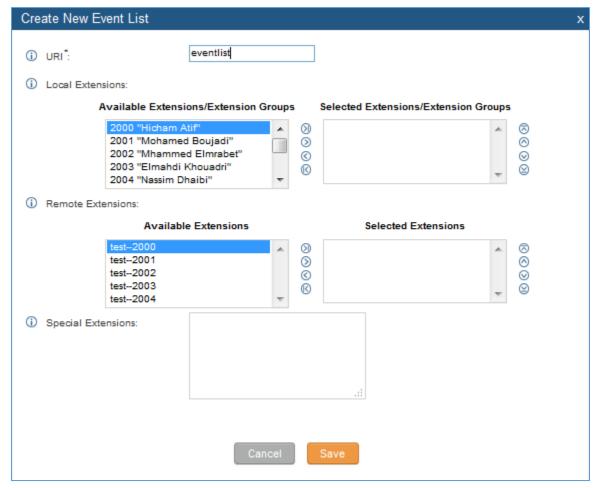


Figure 163: Create New Event List

Remote extension monitoring works on the UCM6200 via event list BLF, among Peer SIP trunks or Register SIP trunks (register to each other). Therefore, please properly configure SIP trunks on the UCM6200 first before using remote BLF feature. Please note the SIP end points need support event list BLF in order to monitor remote extensions.

When an event list is created on the UCM6200 and remote extensions are added to the list, the UCM6200 will send out SIP SUBSCIRBE to the remote UCM6200 to obtain the remote extension status. When the SIP end points register and subscribe to the local UCM6200 event list, it can obtain the remote extension status from this event list. Once successfully configured, the event list page will show the status of total extension and subscribers for each event list. Users can also select the event URI to check the monitored extension's status and the subscribers' details.





⚠ Note:

- To configure LDAP sync, please go to UCM6200 web GUI->PBX->Basic/Call Routes->VolP Trunk. You will see "Sync LDAP Enable" option. Once enabled, please configure password information for the remote peer UCM6200 to connect to the local UCM6200. Additional information such as port number, LDAP outbound rule, LDAP Dialed Prefix will also be required. Both the local UCM6200 and remote UCM6200 need enable LDAP sync option with the same password for successful connection and synchronization.
- Currently LDAP sync feature only works between two UCM6200s.
- (Theoretically) Remote BLF monitoring will work when the remote PBX being monitored is non-UCM6200 PBX. However, it might not work the other way around depending on whether the non-UCM6200 PBX supports event list BLF or remote monitoring feature.





DIAL BY NAME

Dial by Name is a feature on the PBX that allows caller to search a person by first or last name via his/her phone's keypad. The administrator can define the Dial by Name directory including the desired extensions in the directory and the searching type by "first name" or "last name". After dialing in, the PBX IVR/Auto Attendant will guide the caller to spell the digits to find the person in the Dial by Name directory. This feature allows customers/clients to use the guided automatic system to get in touch with the enterprise employees without having to know the extension number, which brings convenience and improves business image for the enterprise.

Dial by Name Configuration

The administrators can create the dial by name group under web GUI->PBX->Call Features->Dial By Name.

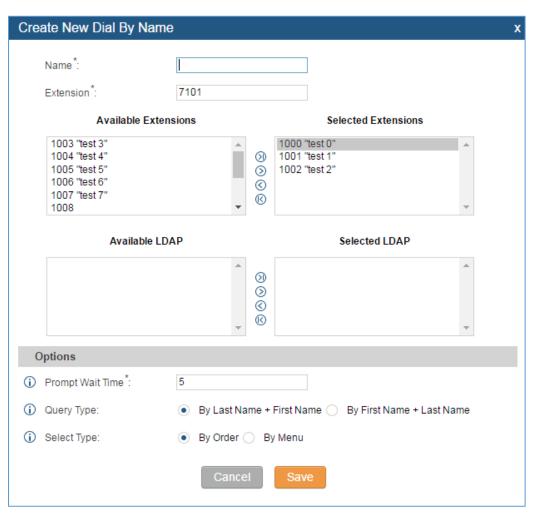


Figure 164: Create Dial by Name Group





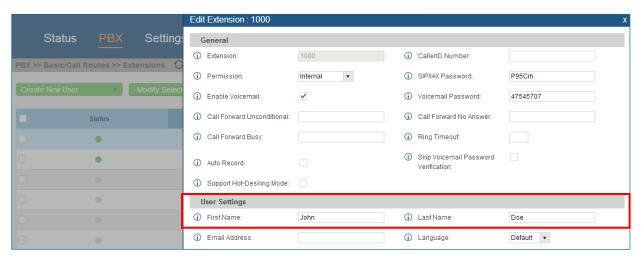


Figure 165: Configure Extension First Name and Last Name

1. Name

Enter a Name to identify the Dial by Name group.

2. Extension

Configure the direct dial extension for the Dial By Name group.

3. Available Extensions/Selected Extensions

Select available extensions from the left side to the right side as the directory for the Dial By Name group. Only the selected extensions here can be reached by the Dial By Name IVR when dialing into this group. The extensions here must have a valid first name and last name configured under web GUI->PBX->Basic/Call Routes->Extensions in order to be searchable in Dial By Name directory through IVR. By specifying the extensions here, the administrators can make sure unscreened calls will not reach the company employee if he/she does not want to receive them directly.

4. Prompt Wait Time

Configure "Prompt Wait Time" for Dial By Name feature. During Dial By Name call, the caller will need to input the first letters of First/Last name before this wait time is reached. Otherwise, timeout will occur and the call might hang up. The timeout range is between 3 and 60 seconds.

5. Query Type

Specify the query type. This defines how the caller will need to enter to search the directory.

By First Name: enter the first 3 digits of the first name to search the directory.

By Last Name: enter the first 3 digits of the last name to search the directory.

By Full Name: enter the first 3 digits of the first name or last name to search the directory.





6. Select Type

Specify the select type on the searching result. The IVR will confirm the name/number for the party the caller would like to reach before dialing out.

<u>By Order</u>: After the caller enters the digits, the IVR will announce the first matching party's name and number. The caller can confirm and dial out if it's the destination party, or press * to listen to the next matching result if it's not the desired party to call.

By Menu: After the caller enters the digits, the IVR will announce 8 matching results. The caller can press number 1 to 8 to select and call, or press 9 for results in next page.

The Dial by Name group can be used as the destination for inbound route and key pressing event for IVR. The group name defined here will show up in the destination list when configuring IVR and inbound route. If Dial by Name is set as a key pressing event for IVR, user could use '*' to exit from Dial by Name, then re-enter IVR and start a new event. The following example shows how to use this option.

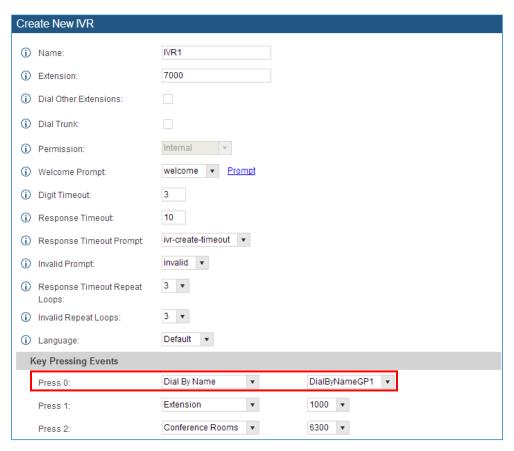


Figure 166: Dial By Name Group In IVR Key Pressing Events





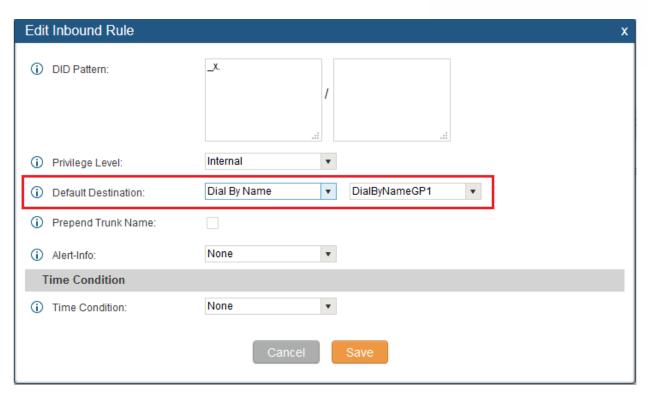


Figure 167: Dial By Name Group In Inbound Rule





WAKEUP SERVICE

The WakeUp service can be used to schedule a reminder or wake up calls to any valid destination. This service is available on the UCM6200 as a separated module.

There are three ways to set up Wakeup Service:

- Using admin login
- Using user portal
- Using feature code

WakeUp Service using admin login

- Login to the UCM as admin.
- WakeUp service can be found under "PBX -> Call Features -> Wakeup Service", click on

 Create New Wakeup Service

 to create a new wakeup service. The following window will popup.

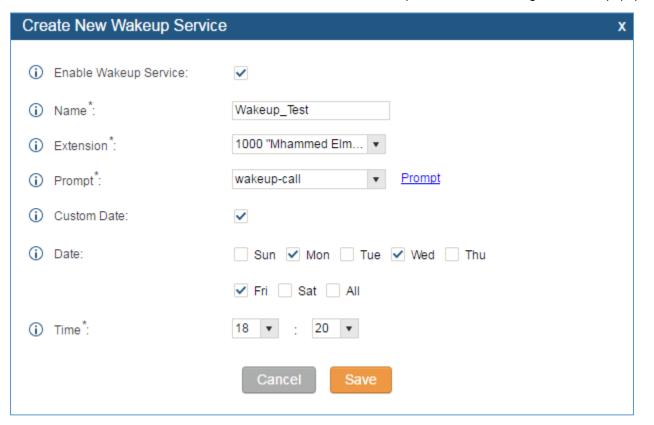


Figure 168: Create New Wakeup Service

- Click Save and Apply Changes to apply the changes.

Table 80: Wakeup Service

Enable Wakeup Service	Enable Wakeup service.
Name	Enter a name to identify the wakeup service.





Extension	Select the extension to call.
Prompt	Select the prompt to play for that extension.
Custom Date	If disabled, users can select a specific date and time. If enabled users can select multiple days of the week to perform the wakeup.
Date	Select the date or dates when to performs the wakeup call.
Time	Select the time when to play the wakeup call.

WakeUp service from User portal

- Login to the user portal on the UCM6200.
- WakeUp service can be found under "Value-added Features -> Wakeup Service", click on

 Create New Wakeup Service

 to create a new wakeup service.
- Configures the Name, Prompt, Date and Time for the user to make the wakeup to.
- Click Save and Apply Changes to apply the changes.

WakeUp service using feature code

- Login to the UCM as admin.
- Enable "Wakeup Service" from the WebGUI under "PBX -> Internal Options -> Feature Codes".



- Click Save and Apply Changes to apply the changes.

Dial "*36" which is the feature code by default to access to the UCM wakeup service in order to add, update, activate or deactivate UCM wakeup service.





ACTIVE CALLS AND MONITOR

The active calls on the UCM6200 are displayed in web UI->**Status**->**Active Calls** page. Users can monitor the status, hang up the call as well as barge in the active calls in real time manner.

Active Calls Status

To view the status of active calls, navigate to web GUI->**Status->Active Calls**. The following figure shows extension 1000 is calling 1001. 1001 is ringing.

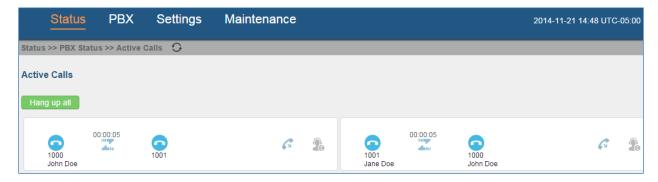


Figure 169: Status->PBX Status->Active Calls - Ringing

The following figure shows the call between 1000 and 1001 is established.

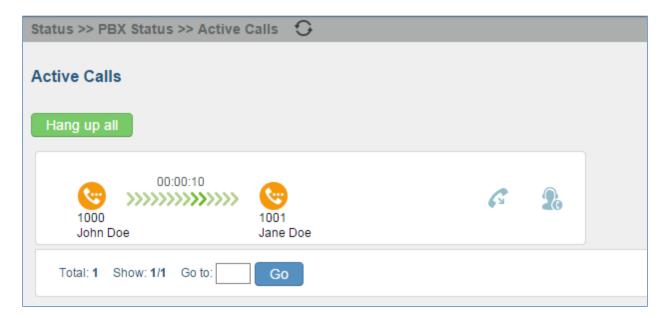


Figure 170: Status->PBX Status->Active Calls - Call Established





In active call web page, click on \bigcirc to refresh the active call status.

Hang Up Active Calls

To hang up an active call, click on icon in the active call dialog. Users can also click on hang up all active calls.

Call Monitor

During an active call, click on icon and the monitor dialog will pop up.



Figure 171: Configure to Monitor an Active Call

In the "Monitor" dialog, configure the following to monitor an active call:

- 1. Enter an available extension for "Monitor's Extension" which will be used to monitor the active call.
- 2. "Monitored Extension" must be one of the parties in the active call to be monitored.
- 3. Select spy mode. There are three options in "Spy Mode".

Listen

In "Listen" mode, the extension monitoring the call can hear both parties in the active call but the audio of the user on this extension will not be heard by either party in the monitored active call.

Whisper

In "Whisper" mode, the extension monitoring the call can hear both parties in the active call. The user on this extension can only talk to the selected monitored extension and he/she will not be heard by the other party in the active call. This can be usually used to supervise calls.

Barge

In "Barge" mode, the extension monitoring the call can talk to both parties in the active call. The call will be established similar to three-way conference.





- 4. Enable or disable "Require Confirmation" option. If enabled, the confirmation of the invited monitor's extension is required before the active call can be monitored. This option can be used to avoid adding participant who has auto-answer configured or call forwarded to voicemail.
- 5. Click on "Add". An INVITE will be sent to the monitor's extension. The monitor can answer the call and start monitoring. If "Require Confirmation" is enabled, the user will be asked to confirm to monitor the call.

Another way to monitor active calls is to dial the corresponding feature codes from an extension. Please refer to [Table 81: UCM6200 Feature Codes] and [Enable Spy] section for instructions.





CALL FEATURES

The UCM6200 supports call recording, transfer, call forward, call park and other call features via feature code. This section lists all the feature codes in the UCM6200 and describes how to use the call features.

Feature Codes

Table 81: UCM6200 Feature Codes

Feature Maps	
Blind Transfer	 Default code: #1. Enter the code during active call. After hearing "Transfer", you will hear dial tone. Enter the number to transfer to. Then the user will be disconnected and transfer is completed. Options Disable Allow Caller: Enable the feature code on caller side only. Allow Both: Enable the feature code on both caller and callee.
Attended Transfer	 Default code: *2. Enter the code during active call. After hearing "Transfer", you will hear the dial tone. Enter the number to transfer to and the user will be connected to this number. Hang up the call to complete the attended transfer. Options Disable Allow Caller: Enable the feature code on caller side only. Allow Both: Enable the feature code on both caller and callee.
Seamless Transfer	Seamless Transfer allows user to perform blind transfer using UCM feature code without having music on hold presented during the transfer process, it minimizes the interruption during transfer, making the process smooth and simple. During an active call use the feature code (*44 which is the default) followed by the number you want to transfer to in order to perform the active seamless transfer.





Disconnect	 Default code: *0. Enter the code during active call. It will disconnect the call. Options Disable Allow Caller: Enable the feature code on caller side only. Allow Both: Enable the feature code on both caller and callee.
Call Park	 Default code: #72. Enter the code during active call to park the call. Options Disable Allow Caller: Enable the feature code on caller side only. Allow Both: Enable the feature code on both caller and callee.
Audio Mix Record	 Default code: *3. Enter the code followed by # or SEND to start recording the audio call and the UCM6200 will mix the streams natively on the fly as the call is in progress. Options Disable Allow Caller: Enable the feature code on caller side only. Allow Both: Enable the feature code on both caller and callee.
DND/Call Forward	
Do Not Disturb (DND) Activate	Default code: *77.
Do Not Disturb (DND) Deactivate	Default code: *78.
Call Forward Busy Activate	 Default Code: *90. Enter the code and follow the voice prompt. Or enter the code followed by the extension to forward the call.
Call Forward Busy Deactivate	Default Code: *91.
Call Forward No Answer Activate	 Default Code: *92. Enter the code and follow the voice prompt. Or enter the code followed by the extension to forward the call.





Call Forward No Answer Deactivate	Default Code: *93.
Call Forward Unconditional Activate	 Default Code: *72. Enter the code and follow the voice prompt. Or enter the code followed by the extension to forward the call.
Call Forward Unconditional Deactivate	Default Code: *73.
Feature Misc	
Feature Code Digits Timeout	 Default Setting: 1000. Configure the maximum interval (in milliseconds) between the digits input to activate the feature code.
Call Park	 Default Extension: 700. During an active call, initiate blind transfer and then enter this code to park the call.
Parked Lots	 Default Extension: 701-720. These are the extensions where the calls will be parked, i.e., parking lots that the parked calls can be retrieved.
Use Parklot as Extension	• If checked, the parking lot number can be used as extension. The user can transfer the call to the parking lot number to park the call. Please note this parking lot number range might conflict with extension range.
Parking Timeout (s)	 Default setting: 300. This is the timeout allowed for a call to be parked. After the timeout, if the call is not picked up, the extension who parks the call will be called back.
Feature Codes	
Voicemail Access Code	 Default Code: *98. Enter *98 and follow the voice prompt. Or dial *98 followed by the extension and # to access the entered extension's voicemail box.
My Voicemail	 Default Code: *97. Press *97 to access the voicemail box.
Agent Pause	Default Code: *83.Pause the agent in all call queues.





Agent Unpause	 Default Code: *84. Unpause the agent in all call queues.
Paging Prefix	 Default Code: *81. To page an extension, enter the code followed by the extension number.
Intercom Prefix	 Default Code: *80. To intercom an extension, enter the code followed by the extension number.
Blacklist Add	 Default Code: *40. To add a number to blacklist for inbound route, dial *40 and follow the voice prompt to enter the number.
Blacklist Remove	 Default Code: *41. To remove a number from current blacklist for inbound route, dial *41 and follow the voice prompt to remove the number.
Call Pickup on Ringing	 Default Code: **. To pick up a call for any extension xxxx, enter the code followed by the extension number xxxx.
Pickup Incall	To perform pickup incall, enter pickup incall code, and then enter pickup number. If the extension dialed from is present in the seamless transfer privilege control list, you can pickup incall successfully
Pickup Extension	 Default Code: *8. This code is for the pickup group which can be assigned for each extension on the extension configuration page. If there is an incoming call to an extension, the other extensions within the same pickup group can dial *8 directly to pick up the call.
Direct Dial Voicemail Prefix	 Default Code: * This code is for the user to directly dial or transfer to an extension's voicemail. For example, directly dial *5000 will have to call go into the extension 5000's voicemail. If the user would like to transfer the call to the extension 5000's voicemail, enter *5000 as the transfer target number.





Direct Dial Mobile Phone Prefix	If you have the permission to call mobile phone number, use this prefix plus the extension number can dial the mobile phone number of this extension directly.
Call Completion Request	 Default Code: *11 This code is for the user who wants to use Call Completion to complete a call.
Call Completion Cancel	 Default Code: *12 This code is for the user who wants to cancel Call Completion request.
Enable Spy	Check this box to enable spy feature codes.
Listen Spy	This is the feature code to listen in on a call to monitor performance. Monitor's line will be muted, and neither party will hear from the monitor's extension. The default setting is *54.
Whisper Spy	This is the feature code to speak to one side of the call (for example, whisper to employees to help them handle a call). Only one side will be able to hear from the monitor's extension. The default setting is *55.
Barge Spy	This is the feature code to join in on the call to assist both parties. The default setting is *56.
Enable Inbound Multiple Mode	If enabled, user can switch between different inbound route modes with feature code. By default, this option is disabled.
Inbound Default Mode	This feature code is used to switch inbound route mode to default mode. The default setting is *61.
Inbound Mode 1	This feature code is used to switch inbound route mode to mode 1. The default setting is *62.

The UCM6200 also allows user to one click enable / disable specific feature code. As shown below:

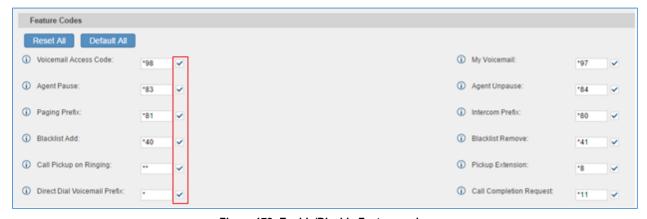


Figure 172: Enable/Disable Feature codes





Call Recording

The UCM6200 allows users to record audio during the call. If "Auto Record" is turned on for an extension, ring group, call queue or trunk, the call will be automatically recorded when there is established call with it. Otherwise, please follow the instructions below to manually record the call.

- 1. Make sure the feature code for "Audio Mix Record" is configured and enabled.
- 2. After establishing the call, enter the "Audio Mix Record" feature code (by default it's *3) followed by # or SEND to start recording.
- 3. To stop the recording, enter the "Audio Mix Record" feature code (by default it's *3) followed by # or SEND again. Or the recording will be stopped once the call hangs up.
- The recording file can be retrieved under Web GUI->Status->CDR. Click on to play the recording or click on to download the recording file.



Figure 173: Download Recording File from CDR Page

The above recorded call's recording files are also listed under the UCM6200 web GUI->CDR->Recording Files.



Figure 174: Download Recording File from Recording Files Page

Call Park

The UCM6200 provides call park and call pickup features via feature code.

Park A Call

There are two feature codes that can be used to park the call.

Feature Maps->Call Park (Default code #72)

During an active call, press #72 and the call will be parked. Parking lot number (default range 701 to 720) will be announced after parking the call.





Feature Misc->Call Park (Default code 700) During an active call, initiate blind transfer (default code #1) and then dial 700 to park the call. Parking lot number (default range 701 to 720) will be announced after parking the call.

Retrieve The Parked Call

To retrieve the parked call, simply dial the parking lot number and the call will be established. If a parked call is not retrieved after the timeout, the original extension who parks the call will be called back.

Enable Spy

If "Enable Spy" option is enabled, feature codes for Listen Spy, Whisper Spy and Barge Spy are available for users to dial from any extension to perform the corresponding actions.

Assume a call is on-going between extension A and extension B, user could dial the feature code from extension C to listen on their call (*54 by default), whisper to one side (*55 by default), or barge into the call (*56 by default). Then the user will be asked to enter the number to call, which should be either side of the active call, extension A or B in this example.



(!\ Caution:

"Enable Spy" allows any user to listen to any call by feature codes. This may result in the leakage of user privacy.





INTERNAL OPTIONS

This section describes internal options that haven't been mentioned in previous sections yet. The settings in this section can be applied globally to the UCM6200, including general configurations, jitter buffer, RTP settings, ports config and STUN monitor. The options can be accessed via Web GUI->PBX->Internal Options-> General.

Internal Options/General

Table 82: Internal Options/General

General Preferences	
Global OutBound CID	Configure the global CallerID used for all outbound calls when no other CallerID is defined with higher priority. If no CallerID is defined for extension or trunk, the global outbound CID will be used as CallerID.
Global OutBound CID Name	Configure the global CallerID Name used for all outbound calls. If configured, all outbound calls will have the CallerID Name set to this name. If not, the extension's CallerID Name will be used.
Ring Timeout	Configure the number of seconds to ring an extension before the call goes to the user's voicemail box. The default setting is 60. Note: This is the global value used for each extension if "Ring Timeout" field is left empty on the extension configuration page.
Call Duration Limit	Configure the maximum duration of call-blocking.
Record Prompt	If enabled, users will hear voice prompt before recording is started or stopped. For example, before recording, the UCM6200 will play voice prompt "The call will be recorded". The default setting is "No".
Extension Preferences	
Enforce Strong Passwords	If enabled, strong password will be enforced for the password created on the UCM6200. The default setting is enabled. Strong Password Rules: 1. Password for voicemail, voicemail group, outbound route, DISA, call queue and conference requires non-repetitive and non-sequential digits, with a minimum length of 4 digits. Repetitive digits pattern (such as 0000, 1111, 1234, 2345, and etc), or common digits pattern (such as 111222, 321321 and etc) are not allowed to be configured as password.





	 2. Password for extension registration, web GUI admin login, LDAP and LDAP sync requires alphanumeric characters containing at least two categories of the following, with a minimum length of 4 characters. Numeric digits Lowercase alphabet characters Uppercase alphabet characters Special characters
Enable Random Password	If enabled, random password will be generated when the extension is created. The default setting is "Yes". It is recommended to enable it for security purpose.
Enable Auto Email To User	If enabled, UCM6200 will send Email notification to user automatically after editing extension settings or adding a new extension.
Disable Extension Range	If set to "Yes", users could disable the extension range preconfigured/configured on the UCM6200. The default setting is "No". Note: It is recommended to keep the system assignment to avoid inappropriate usage and unnecessary issues.
Extension Ranges	 User Extensions: 1000-6299 User Extensions is referring to the extensions created under web UI->PBX->Basic/Call Routes->Extensions page. Pick Extensions: 4000-4999 This refers to the extensions that can be manually picked from end device when being provisioned by the UCM6200. There are two related options in zero config page->Auto Provision Settings, "Pick Extension Segment" and "Enable Pick Extension". If "Enable Pick Extension" under zero config settings is selected, the extension list defined in "Pick Extension Segment" will be sent out to the device after receiving the device's request. This "Pick Extension Segment" should be a subset of the "Pick Extensions" range here. This feature is for the GXP series phones that support selecting extension to be provisioned via phone's LCD. Auto Provision Extensions: 5000-6299 This sets the range for "Zero Config Extension Segment" which is the extensions can be assigned on the UCM6200 to provision the end device. Conference Extensions: 6300-6399 Ring Group Extensions: 6400-6499





Queue Extensions: 6500-6599

• Voicemail Group Extensions: 6600-6699

• IVR Extensions: 7000-7100

Dial By Name Extensions: 7101-7199

Fax Extensions: 7200-8200

Internal Options/Custom Prompt

Record New Custom Prompt

In the UCM6200 web UI->PBX->Internal Options->Custom Prompt page, click on "Record New Custom Prompt" and follow the steps below to record new IVR prompt.

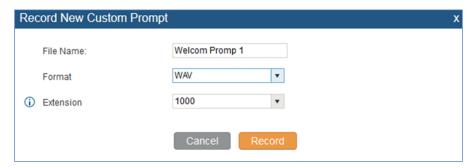


Figure 175: Record New Custom Prompt

- Specify the IVR file name.
- Select the format (GSM or WAV) for the IVR prompt file to be recorded.
- Select the extension to receive the call from the UCM6200 to record the IVR prompt.
- Click the "Record" button. A request will be sent to the UCM6200. The UCM6200 will then call the extension for recording the IVR prompt from the phone.
- Pick up the call from the extension and start the recording following the voice prompt.
- The recorded file will be listed in the IVR Prompt web page. Users could select to re-record, play or delete the recording.





Upload Custom Prompt

If the user has a pre-recorded IVR prompt file, click on "Upload Custom Prompt" in Web GUI->PBX->Internal Options->Custom Prompt page to upload the file to the UCM6200. The following are required for the IVR prompt file to be successfully uploaded and used by the UCM6200:

- PCM encoded.
- 16 bits.
- 8000Hz mono.
- In .mp3 or .wav format; or raw/ulaw/alaw/gsm file with .ulaw or .alaw suffix.
- File size under 5M.

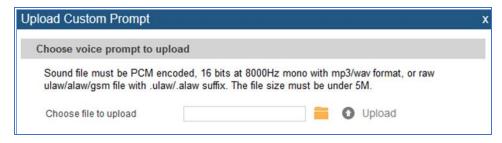


Figure 176: Upload Custom Prompt

Click on to select audio file from local PC and click on to start uploading. Once uploaded, the file will appear in the Custom Prompt web page.

Download All Custom Prompt

On the UCM62XX, the users can download all custom prompts from UCM web UI to local PC. To download all custom prompt, log in UCM web UI and navigate to **PBX->Internal Options->Custom Prompt** and click on

Download All Custom Prompt

The following window will pop up in order to set a name for the downloaded file.



Figure 177: Download All Custom Prompt

Note: The downloaded file will have a .tar extension.





Internal Options/Jitter Buffer

Table 83: Internal Options/Jitter Buffer

SIP Jitter Buffer	
Enable Jitter Buffer	Select to enable jitter buffer on the sending side of the SIP channel. The default setting is "No".
Jitter Buffer Size	Configure the time (in ms) to buffer. This is the jitter buffer size used in "Fixed" jitter buffer, or used as the initial time for "adaptive" jitter buffer. The default setting is 100.
Max Jitter Buffer	Configure the maximum time (in ms) to buffer for "Adaptive" jitter buffer implementation, or used as the jitter buffer size for "Fixed" jitter buffer implementation. The default setting is 200.
Implementation	Configure the jitter buffer implementation on the sending side of a SIP channel. The default setting is "Fixed". • Fixed The size is always equal to the value of "Max Jitter Buffer". • Adaptive The size is adjusted automatically and the maximum value equals to the value of "Max Jitter Buffer".

Internal Options/RTP Settings

Table 84: Internal Options/RTP Settings

RTP Start	Configure the RTP port starting number. The default setting is 10000.
RTP End	Configure the RTP port ending address. The default setting is 20000.
Strict RTP	Configure to enable or disable strict RTP protection. If enabled, RTP packets that do not come from the source of the RTP stream will be dropped. The default setting is "Disable".
RTP Checksums	Configure to enable or disable RTP Checksums on RTP traffic. The default setting is "Disable".





ICE Support	Configure whether to support ICE. The default setting is enabled. ICE is the integrated use of STUN and TURN structure to provide reliable VoIP or video calls and media transmission, via a SIP request/ response model or multiple candidate endpoints exchanging IP addresses and ports, such as private addresses and TURN server address.
STUN Server	Configure STUN server address. STUN protocol is a Client/Server and also a Request/Response protocol. It's used to check the connectivity between the two terminals, such as maintaining a NAT binding entries keep-alive agreement. The default STUN Server is stun.ipvideotalk.com. Valid format: [(hostname IP-address) [':' port] The default port number is 3478 if not specified.

Internal Options/Payload

The UCM6200 payload type for audio codecs and video codes can be configured here.

Table 85: Internal Options/Payload

AAL2-G.726	Configure payload type for ADPCM (G.726, 32kbps, AAL2 codeword packing). The default setting is 112.
DTMF	Configured payload type for DTMF. The default setting is 101.
G.721 Compatible	Configure to enable/disable G.721 compatible. The default setting is Yes.
G.726	Configure the payload type for G.726 if "G.721 Compatible" is disabled. The default setting is 111.
iLBC	Configure the payload type for iLBC. The default setting is 97.
H.264	Configure the payload type for H.264. The default setting is 99.
H.263P	Configure the payload type for H.263+. The default setting is 100 103.
VP8	Configure the payload type for VP8. The default settings is 108.

Internal Options/PIN Groups

The UCM6200 supports pin group. Once this feature is configured, users can apply pin group to specific outbound routes. When placing a call on pin protected outbound routes, caller will be asked to input the group pin number, this feature can be found on the webGUI under "PBX->Internal Options->PIN Groups".





Table 86: Internal Options/PIN Group

Name	Specify the name of the group
Record In CDR	Specify whether to enable/disable record in CDR
PIN Number	Specify the code that will asked once dialing via a trunk
PIN Name	Specify the name of the PIN

Once user click on Create New PIN Group the following figure pop's up for configuring the new Pin.

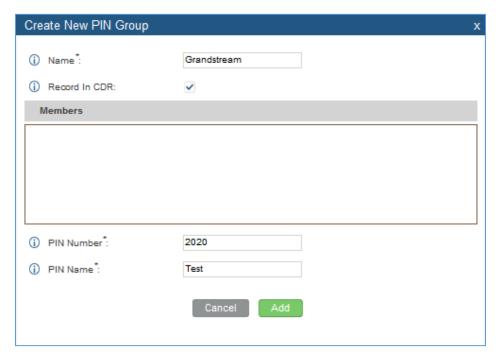


Figure 178: Create New PIN Group

Once PIN Groups and members Created it should look like:

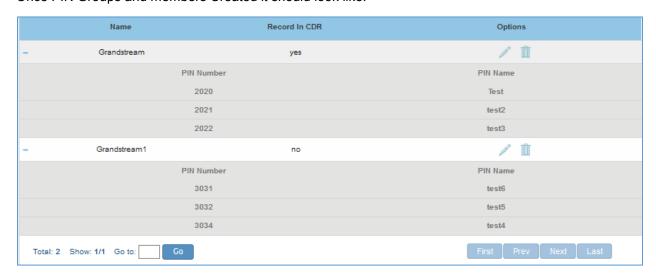


Figure 179: PIN members





Please note, if pin group is enabled on outbound route level, password, privilege level and enable filter on source caller ID will be disabled.

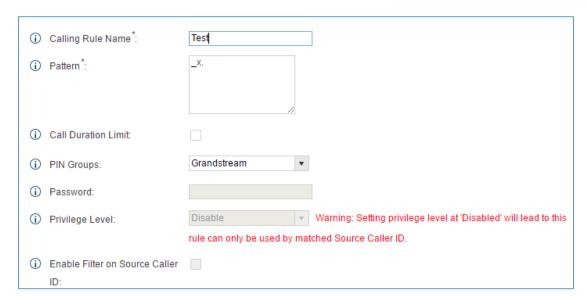


Figure 180: Outbound PIN

If pin group CDR is enabled, the call with pin group information will be displayed as part of CDR under Account Code field.



Figure 181: CDR Record





IAX SETTINGS

The UCM6200 IAX global settings can be accessed via Web GUI->PBX->IAX Settings.

IAX Settings/General

Table 87: IAX Settings/General

Bind Port	Configure the port number that the IAX2 will be allowed to listen to. The default setting is 4569.
Bind Address	Configure the address that the IAX2 will be forced to bind to. The default setting is 0.0.0.0, which means all addresses.
IAX1 Compatibility	Select to configure IAX1 compatibility. The default setting is "No".
No Checksums	If selected, UDP checksums will be disabled and no checksums will be calculated/checked on systems supporting this feature. The default setting is "No".
Delay Reject	If enabled, the IAX2 will delay the rejection of calls to avoid DOS. The default setting is "No".
ADSI	Select to enable ADSI phone compatibility. The default setting is "No".
Music On Hold Interpret	Specify which Music On Hold class this channel would like to listen to when being put on hold. This music class is only effective if this channel has no music class configured and the bridged channel putting the call on hold has no "Music On Hold Suggest" setting.
Music On Hold Suggest	Specify which Music On Hold class to suggest to the bridged channel when putting the call on hold.
Bandwidth	Configure the bandwidth for IAX settings. The default setting is "Low".

IAX Settings/Registration

Table 88: IAX Settings/Registration

IAX Registration Options	
Min Reg Expire	Configure the minimum period (in seconds) of registration. The default setting is 60.
Max Reg Expire	Configure the maximum period (in seconds) of registration. The default setting is 3600.
IAX Thread Count	Configure the number of IAX helper threads. The default setting is 10.
IAX Max Thread Count	Configure the maximum number of IAX threads allowed. The default setting is 100.





If set to "yes", the connection will be terminated if ACK for the NEW message is not received within 2000ms. Users could also specify number (in milliseconds) in addition to "yes" and "no". The default setting is "yes".
If enabled, authentication traffic in debugging will not show. The default setting is "No".
 Configure codec negotiation priority. The default setting is "Reqonly". Caller Consider the callers preferred order ahead of the host's. Host Consider the host's preferred order ahead of the caller's. Disabled Disabled Disable the consideration of codec preference all together. Reqonly This is almost the same as "Disabled", except when the requested format is not available. The call will only be accepted if the requested format is available.
Configure ToS bit for preferred IP routing.
Configure the frequency of trunk frames (in milliseconds). The default setting is 20.
If enabled, time stamps will be attached to trunk frames. The default setting is "No".

IAX Settings/Static Defense

Table 89: IAX Settings/Static Defense

Call Token Optional	Enter a single IP address (e.g., 11.11.11.11) or a range of IP addresses (11.11.11.11/22.22.22.22) for which call token validation is not required.
Max Call Numbers	Configure the maximum number of calls allowed for a single IP address.
Max Unvalidated Call Numbers	Configure the maximum number of unvalidated calls for all IP addresses.
Call Number Limits	Configure to limit the number of calls for a give IP address of IP range.
IP or IP Range	Enter the IP address (11.11.11.11) or a range of IP addresses (11.11.11.11/22.22.22.22) to be considered for call number limits.





SIP SETTINGS

The UCM6200 SIP global settings can be accessed via Web GUI->PBX->SIP Settings.

SIP Settings/General

Table 90: SIP Settings/General

Realm For Digest	Configure the host name or domain name for the UCM6200. Realms MUST be
Authentication	globally unique according to RFC3261. The default setting is Grandstream.
Bind UDP Port	Configure the UDP port used for SIP. The default setting is 5060.
Bind IP Address	Configure the IP address to bind to. The default setting is 0.0.0.0, which means binding to all addresses.
Allow Guest Calls	If enabled, the UCM6200 allows unauthorized INVITE coming into the PBX and the call can be made. The default setting is "No". Warning:
	Please be aware of the potential security risk when enabling "Allow Guest Calls" as this will allow any user with the UCM6200 address to dial into the UCM6200.
Allow Transfer	If set to "No", all transfers initiated by the endpoint in the UCM6200 will be disabled (unless enabled in peers or users). The default setting is "Yes".
MWI From	When sending MWI NOTIFY requests, this value will be used in the "From:" header as the "name" field. If no "From User" is configured, the "user" field of the URI in the "From:" header will be filled with this value.

SIP Settings/MISC

Table 91: SIP Settings/Misc

Outbound SIP Registrations	
Register Timeout	Configure the register retry timeout (in seconds). The default setting is 20.
Register Attempts	Configure the number of registration attempts before the UCM6200 gives up. The default setting is 0, which means the UCM6200 will keep trying until the server side accepts the registration request.
Video	
Max Bit Rate (kb/s)	Configure the maximum bit rate (in kb/s) for video calls. The default setting is 384.
Support SIP Video	Select to enable video support in SIP calls. The default setting is "Yes".
Reject Non-Matching INVITE	If enabled, when rejecting an incoming INVITE or REGISTER request, the UCM6200 will always reject with "401 Unauthorized" instead of notifying the requester whether there is a matching user or peer for the request. This reduces the ability of an attacker to scan for valid SIP usernames. The default setting is "No".





SIP Settings/Session Timer

Table 92: SIP Settings/Session Timer

Session Timers	Select the session timer mode. The default setting is "Accept". The options are: Originate Always request and run session timer. Accept Run session timer only when requested by other UA. Refuse Do not run session timer.
Session Expire	Configure the maximum session refresh interval (in seconds). The default setting is 1800.
Min SE	Configure the minimum session refresh interval (in seconds). The default setting is 90.
Session Refresher	Select the session refresher to be UAC or UAS. The default setting is UAC.

SIP Settings/TCP and TLS

Table 93: SIP Settings/TCP and TLS

TCP Enable	Configure to allow incoming TCP connections with the UCM6200. The default setting is "No".
TCP Bind Address	Configure the IP address for TCP server to bind to. 0.0.0.0 means binding to all interfaces. The port number is optional. If not specified, 5060 will be used.
TLS Enable	Configure to allow incoming TLS connections with the UCM6200. The default setting is "No".
TLS Bind Address	Configure the IP address for TLS server to bind to. 0.0.0.0 means binding to all interfaces. The port number is optional. If not specified, 5061 will be used. Note: The IP address must match the common name (hostname) in the certificate. Please do not bind a TLS socket to multiple IP addresses. For details on how to construct a certificate for SIP, please refer to the following document: http://tools.ietf.org/html/draft-ietf-sip-domain-certs
TLS Client Protocol	Select the TLS protocol for outbound client connections. The default setting is TLSv1.
TLS Do Not Verify	If enabled, the TLS server's certificate won't be verified when acting as a client. The default setting is "Yes".





TLS Self-Signed CA	This is the CA certificate if the TLS server being connected to requires self-signed certificate, including server's public key. This file will be renamed as "TLS.ca" automatically. Note: The size of the uploaded ca file must be under 2MB.
TLS Cert	This is the Certificate file (*.pem format only) used for TLS connections. It contains private key for client and signed certificate for the server. This file will be renamed as "TLS.pem" automatically. Note: The size of the uploaded certificate file must be under 2MB.
TLS CA Cert	This file must be named with the CA subject name hash value. It contains CA's (Certificate Authority) public key, which is used to verify the accessed servers. Note: The size of the uploaded CA certificate file must be under 2MB.
TLS CA List	Display a list of files under the CA Cert directory.

SIP Settings/NAT

Table 94: SIP Settings/NAT

External Host	Configure a static IP address and port (optional) used in outbound SIP messages if the UCM6200 is behind NAT. If it is a host name, it will only be looked up once.
Use IP address in SDP	If enabled, the SDP connection will use the IP address resolved from the external host.
External TCP Port	Configure the externally mapped TCP port when the UCM6200 is behind a static NAT or PAT.
External TLS Port	Configures the externally mapped TLS port when UCM6200 is behind a static NAT or PAT.
Local Network Address	Specify a list of network addresses that are considered inside of the NAT network. Multiple entries are allowed. If not configured, the external IP address will not be set correctly. A sample configuration could be as follows: 192.168.0.0/16

SIP Settings/TOS

Table 95: SIP Settings/ToS

ToS For SIP	Configure the Type of Service for SIP packets. The default setting is None.
ToS For RTP Audio	Configure the Type of Service for RTP audio packets. The default setting is None.
ToS For RTP Video	Configure the Type of Service for RTP video packets. The default setting is None.





Default Incoming/Outgoing Registration Time	Configure the default duration (in seconds) of incoming/outgoing registration. The default setting is 120.	
Max Registration/Subscript ion Time	Configure the maximum duration (in seconds) of incoming registration and subscription allowed by the UCM6200. The default setting is 3600.	
Min Registration/Subscript ion Time	Configure the minimum duration (in seconds) of incoming registration and subscription allowed by the UCM6200. The default setting is 60.	
Enable Relaxed DTMF	Select to enable relaxed DTMF handling. The default setting is "No".	
DTMF Mode	Select DTMF mode to send DTMF. The default setting is RFC2833. If "Info" is selected, SIP INFO message will be used. If "Inband" is selected, 64-kbit codec PCMU and PCMA are required. When "Auto" is selected, "RFC2833" will be used if offered, otherwise "Inband" will be used. The default setting is "RFC2833".	
RTP Timeout	During an active call, if there is no RTP activity within the timeout (in seconds), the call will be terminated. The default setting is no timeout. Note: This setting doesn't apply to calls on hold.	
RTP Hold Timeout	When the call is on hold, if there is no RTP activity within the timeout (in seconds), the call will be terminated. This value of RTP Hold Timeout should be larger than RTP Timeout. The default setting is no timeout.	
RTP Keep-alive	This feature can be used to avoid abnormal call drop when the remote provider requires RTP traffic during proceeding. For example, when the call goes into voicemail and there is no RTP traffic sent out from UCM, configuring this option can avoid voicemail drop. When configured, RTP keep-alive packet will be sent to remote party at the configured interval. If set to 0, RTP keep-alive is disabled.	
100rel	Configure the 100rel setting on UCM6200. The default setting is "Yes".	
Trust Remote Party ID	Configure whether the Remote-Party-ID should be trusted. The default setting is "No".	
Send Remote Party ID	Configure whether the Remote-Party-ID should be sent or not. The default setting is "No".	
Generate In-Band Ringing	 Configure whether the UCM6200 should generate inband ringing or not. The default setting is "Never". Yes: The UCM6200 will send 180 Ringing followed by 183 Session Progress and in-band audio. No: The UCM6200 will send 180 Ringing if 183 Session Progress has not been sent yet. If audio path is established already with 183 then send in-band ringing. 	





	 Never: Whenever ringing occurs, the UCM6200 will send 180 Ringing as long as 200OK has not been set yet. Inband ringing will not be generated even the end point device is not working properly.
Server User Agent	Configure the user agent string for the UCM6200.
Send Compact SIP Headers	If enabled, compact SIP headers will be sent. The default setting is "No".





PORTS CONFIG

The analog hardware (FXS port and FXO port) on the UCM6200 will be listed in this page. Click on / to edit signaling preference for FXS port or configure ACIM settings for FXO port.

Select "Loop Start" or "Kewl Start" for each FXS port. And then click on "Update" to save the change.



Figure 182: FXS Ports Signaling Preference

For FXO port, users could manually enter the ACIM settings by selecting the value from dropdown list for each port. Or users could click on "Detect" and choose the detection algorithm, two algorithm exists (ERL, Pr) for the UCM6200 to automatically detect the ACIM value. The detecting value will be automatically filled into the settings.


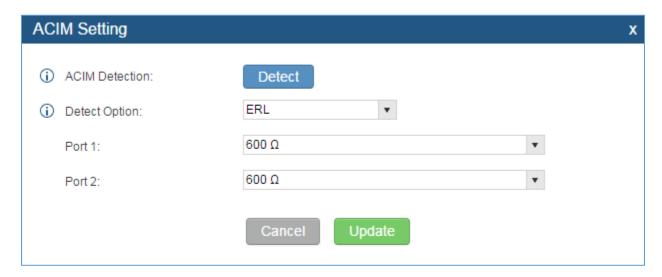


Figure 183: FXO Ports ACIM Settings

Table 96: Internal Options/Ports Config





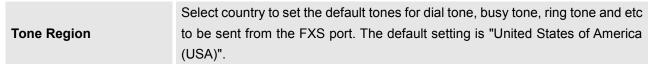

Advanced Settings	
FXO Opermode	Select country to set the On Hook Speed, Ringer Impedance, Ringer Threshold, Current Limiting, TIP/RING voltage adjustment, Minimum Operational Loop Current, and AC Impedance as predefined for your country's analog line characteristics. The default setting is "United States of America (USA)".
FXS Opermode	Select country to set the On Hook Speed, Ringer Impedance, Ringer Threshold, Current Limiting, TIP/RING voltage adjustment, Minimum Operational Loop Current, and AC Impedance as predefined for your country's analog line characteristics. The default setting is "United States of America (USA)".
FXS TISS Override	Configure to enable or disable override Two-Wire Impedance Synthesis (TISS). The default setting is No. If enabled, users can select the impedance value for Two-Wire Impedance Synthesis (TISS) override. The default setting is 600Ω .
PCMA Override	Select the codec to be used for analog lines. North American users should choose PCMU. All other countries, unless already known, should be assumed to be PCMA. The default setting is PCMU. Note: This option requires system reboot to take effect.
Boost Ringer	Configure whether normal ringing voltage (40V) or maximum ringing voltage (89V) for analog phones attached to the FXS port is required. The default setting is "Normal".
Fast Ringer	Configure to increase the ringing speed to 25HZ. This option can be used with "Low Power" option. The default setting is "Normal".
Low Power	Configure the peak voltage up to 50V during "Fast Ringer" operation. This option is used with "Fast Ringer". The default setting is "Normal".
Ring Detect	If set to "Full Wave", false ring detection will be prevented for lines where Caller ID is sent before the first ring and proceeded by a polarity reversal, as in UK. The default setting is "Standard".
FXS MWI Mode	Configure the type of Message Waiting Indicator on FXS lines. The default setting is "FSK". • FSK: Frequency Shift Key Indicator • NEON: Light Neon Bulb Indicator.





VALUE-ADDED FEATURES

FAX Sending

The UCM6200 supports sending Fax via web UI access. This feature can be found on web UI->PBX->Value-added Features->Fax Sending page. In order to send fax, pre-setup for analog trunk and outbound route is required. Please refer to [Analog Trunks], [VOIP Trunks] and [Outbound Routes] sections for configuring analog trunk and outbound route.

After making sure analog trunk or VoIP Trunk is setup properly and UCM6200 can reach out to PSTN numbers via the trunk, on Fax Sending page, enter the fax number and upload the file to be faxed. Then click on "Send" to start. The progress of sending fax will be displayed in web UI. Users can also view the sending history is in the same web page.



Figure 184: Fax Sending in Web UI

Announcements Center

The UCM6200 supports Announcements Center feature which allows users to pre-record and store voice message into UCM6200 with a specified code. The users can also create group with specified extensions. When the code and the group number are dialed together in the combination of **code + group number**, the specified voice message is sent to all group members and only extensions in the group will hear the voice message.





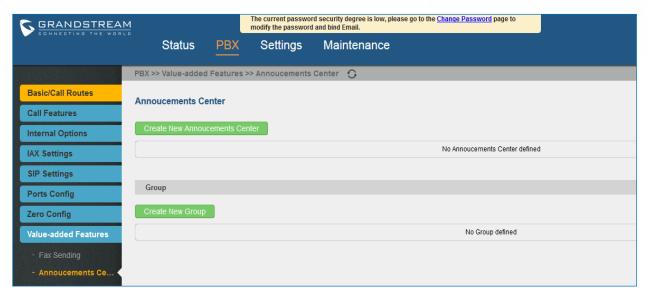


Figure 185: Announcements Center

Announcements Center Settings

Table 97: Announcements Center Settings

Name	Configure a name for the newly created Announcements Center to identify this announcement center.
Code	Enter a code number for the custom prompt. This code will be used in combination with the group number. For example, if the code is 55, and group number is 666. The user can dial 55666 to send prompt 55 to all members in group 666. Note: The combination number must not conflict with any number in the system such as extension number or conference number.
Custom Prompt	This option is to set a custom prompt as an announcement to notify group members. The file can be uploaded from page 'Custom Prompt'. Click 'Prompt' to add additional record.
Ring Timeout	Configure the ring timeout for the group members. The default value is 30 seconds.





Group Settings

Table 98: Group Settings

Name	Configure a name for the newly created group to identify the group.
	Configure the group number. The group number is used in combination with the code. For example, if group number is 666, and code is 55. The user can dial 55666 to send prompt 55 to all members in group 666.
Number	Note:
	The combination number must not conflict with any number in the system such as extension number or conference number.

Announcements Center feature can be found under **web UI->PBX->Value-added Features-> Announcements**Center. The following example demonstrates the usage of this feature.

- 2. Give a name to the newly created group.
- 3. Create a group number which is used with code to send voice message.
- 4. Select the extensions to be included in the group, who will receive the voice message.

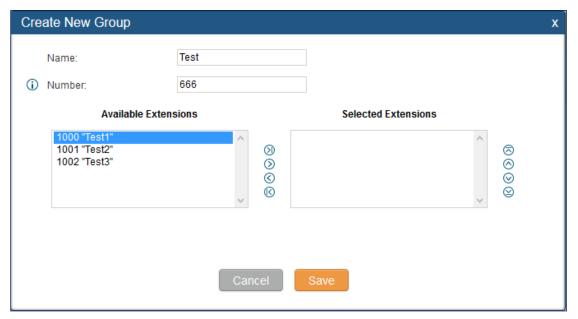


Figure 186: Announcements Center Group Configuration

In this example, group "Test" has number 666. Extension 1000, 1001 and 1002 are in this group.

5. Click Create New Annoucements Center to create a new Announcement Center.





- 6. Give a name to the newly created Announcement Center.
- 7. Specify the code which will be used with group number to send the voice message to.
- 8. Select the message that will be used by the code from the Custom Prompt drop down menu. To create a new Prompt, please click "Prompt" link and follow the instructions in that page.

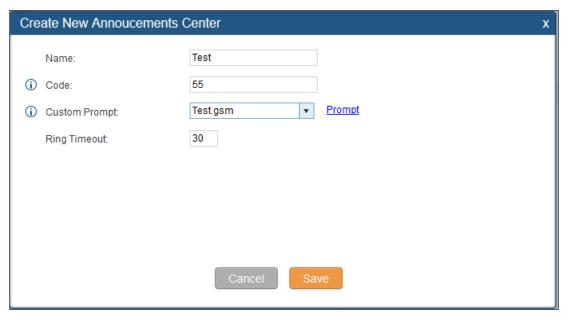


Figure 187: Announcements Center Code Configuration

Code and Group number are used together to direct specified message to the target group. All extensions in the group will receive the message. For example, we can send code 55 to group 666 by dialing 55666 from any extension registered to the UCM6200. All the members in group 666 which are extension 1000, 1001 and 1002 will receive this voice message after they pick up the call.

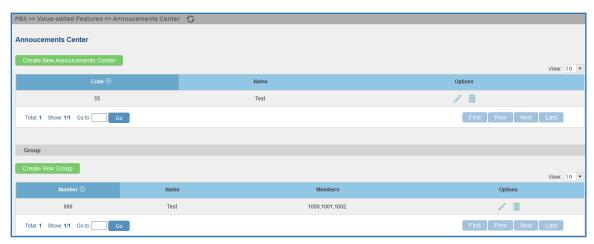


Figure 188: Announcements Center Example





PMS

UCM6200 series support Hotel Property Management System PMS, including check-in/check-out services, wakeup calls, room status, Do Not Disturb which provide an ease of management for hotel applications. This feature can be found on web UI->PBX->PMS.

Note: The PMS integration on UCM was made with HMobile/Mitel for now; more PMS software might be supported in future releases.

PMS system supports the following features:

Table 99: PMS Supported Features

Feature	Mitel	HMobile
Check-In	✓	✓
Check-out	✓	✓
Wake-up Call	✓	✓
Name Change	✓	X
Update	X	✓
Set Credit	✓	X
Set Station Restriction	✓	X
Room Status	X	✓
Room Move	X	✓
Do Not Disturb	X	✓
Mini Bar	X	✓
MSG	X	✓

In order to use all PMS features please activate the feature code associated under "PBX->Internal Options->Feature Codes"

- Enable PMS
- Update PMS Room Status
- PMS Wake Up Service Activate
- PMS Wake Up Service Deactivate

Basic Settings

On the UCM WebGUI under "PBX->PMS->Basic Settings" set the connection information for the HMobile platform.





Table 100: PMS Basic Settings

Field	Description
PMS Module	Users can select the desired PMS module from the drop-down list. Hmobile. Mitel.
Wake Up Prompt	Prompt used when answering the wakeup calls it can be customized from "PBX>Internal Options>Custom Propmpt
PMS URL	Enter the PMS system URL
UCM Port	Enter the Port used by the PMS system
Username	Enter the Username to connect to the PMS system
Password	Enter the password to connect to the PMS system

Room Status

User can create Rooms by clicking on Create New Room, the following Figure will be displayed then.

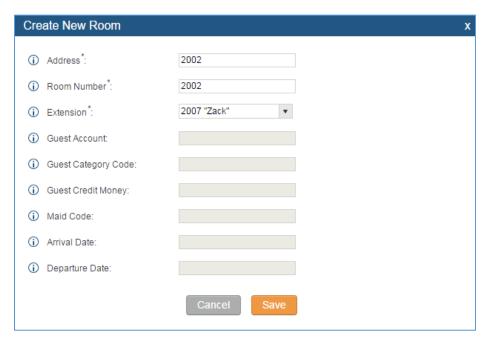


Figure 189: Create New Room

Click "Save" to create the new room, the fields above can be configured from the HMobile platform, once set the following screen will be shown:





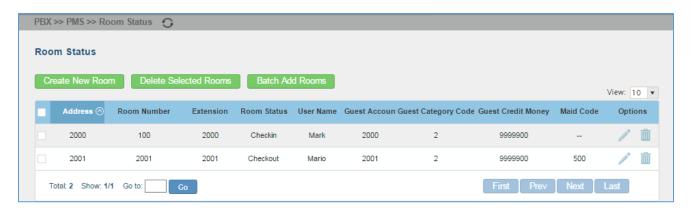


Figure 190: Room Status

User can Create a Batch of rooms as well by clicking on Batch Add Rooms, the following window will pop up:



Figure 191: Add batch rooms

Wake Up Service

In order to create a New Wake up service, user can click on pop up:





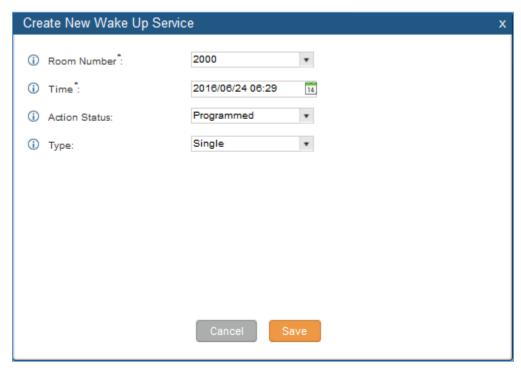


Figure 192: Create New Wake Up Service

Table 101: PMS Wake up Service

Field	Description
Room Number	Select the room number where to call
Time	Set the time of the wakeup call
Action Status	Show the status of the call:
	 Programmed: the call is scheduled for the time set
	Cancelled: the call is canceled
	Executed: the wakeup call is made
Туре	Single: The call will be made once on the specific time.
	Daily: The call will be repeated every day on the specific time

Once the call is made on the time specified, the following figure show the status of the wakeup call.



Figure 193: Wakeup Call executed

This call has been executed but has been rejected, that why we can see the "Busy" status.





Mini Bar

In order to create a new mini bar, click on

Create New Mini Bar

under UCM webGUI -> PBX -> PMS ->

Mini Bar, the following window will pop up:

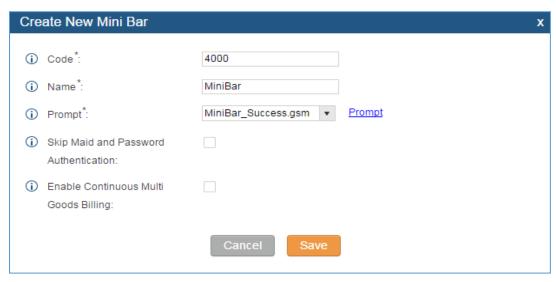


Figure 194: Create New Mini Bar

Table 102: Create New Mini Bar

Code	Enter a non-existing extension number to be dialed when using the mini bar feature.
Name	Enter a name for the mini bar.
Prompt	Select the Prompt to play once connected to the mini bar.
Skip Maid and Password Authentication	If enabled, the default maid code will be 0000, no authentication is required. (Enter 0000 followed by # to access the consumer goods)
Enable Continuous Multi Goods Billing	If enabled, please separate the goods' codes by*.

In order to create a new maid, click on **Bar**, the following window will popup.

Create New Maid

under UCM webGUI -> PBX -> PMS -> Mini





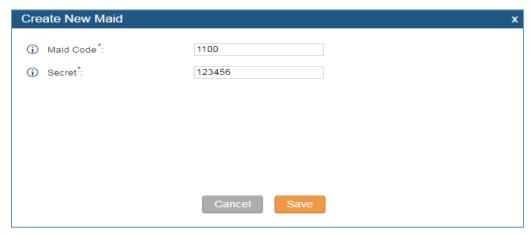


Figure 195: Create New Maid

Table 103: Create New Maid

Maid Code	Enter the Code to use when the maid want to use the Mini Bar.
Secret	Enter the password associated with the maid.

In order to create a new consumer goods, click on

Create New Consumer Goods

under UCM webGUI -

> PBX -> PMS -> Mini Bar, the following window will popup.



Figure 196: Create New Consumer Goods

Code	Enter the Goods Code.
Name	Enter the Name of the Goods
Success Prompt	Select the success prompt when typing the code of the goods by the maid.
Failure Prompt	Select the failure prompt.





The Minibar page looks like the following:

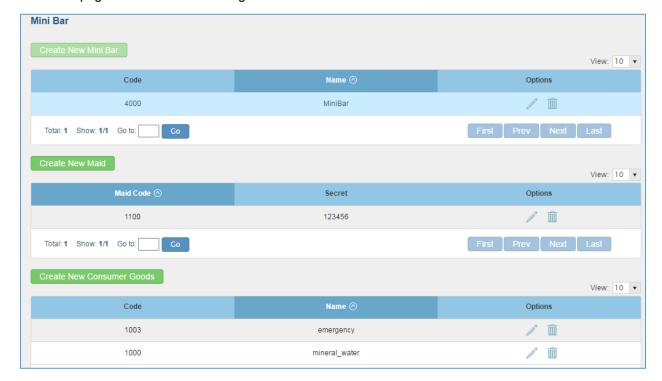


Figure 197: Mini Bar





CRM

Customer relationship management (CRM) is a term that refers to practices, strategies and technologies that companies use to manage and analyze customer interactions and data throughout the customer lifecycle, with the goal of improving business relationships with customers.

The UCM6200 support two CRM API, SugarCRM and Salesforce CRM, which allows users to look for contact information in the Contacts, Leads and / or Accounts tables, shows the contact record in CRM page, and saves the call information in the contact's history.

SugarCRM

Configuration page of the SugarCRM can be accessed via admin login, on the UCM webGUI under "PBX -> CRM -> Basic Settings".

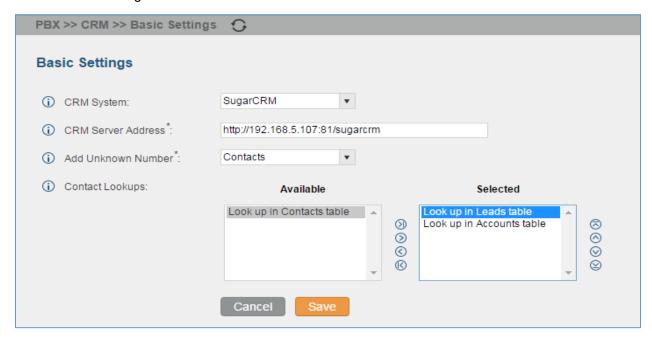


Figure 198: SugarCRM Basic Settings

Select "SugarCRM" from the CRM System Dropdown in order to use SugarCRM.

Table 104: SugarCRM Settings

CRM System	Select a CRM system from the Drop down, two CRM systems are available: Salesforce and SugarCRM.
CRM Server Address	Enter the IP address of the CRM server.
Add Unknown Number	Add the new number to this module if it can't be found in the selected module.
Contact Lookups	Select from the "Available" list of lookups and press to select where the UCM can perform the lookups on the CRM tables, Leads, Accounts, and Contacts.





Once settings on admin access are configured:

- Click on Save and Apply Changes
- Logout from admin access.
- Login to the UCM as user and navigate under "User Portal -> Value-added Feature -> CRM User Settings".

Click on "Enable CRM" and enter the username/password associated with the CRM account then click on

Save and Apply Changes . The status will change from "Logged Out" to "Logged In".

User can start then using SugarCRM features.

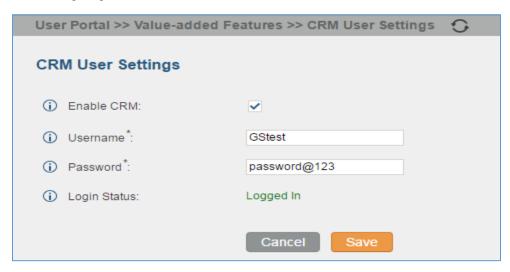


Figure 199: CRM User Settings

Salesforce CRM

Configuration page of the Salesforce CRM can be accessed via admin login, on the UCM webGUI under "PBX -> CRM -> Basic Settings".





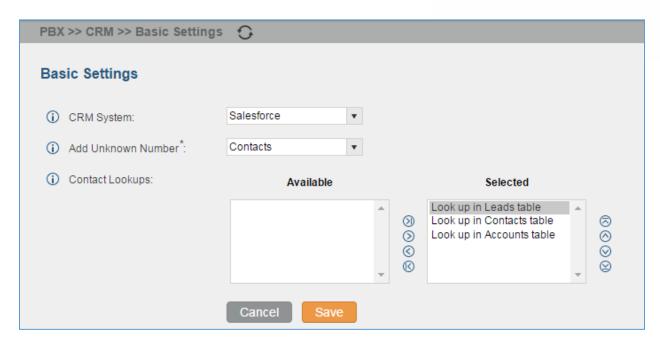


Figure 200: Salesforce Basic Settings

Select "Salesforce" from the CRM System Dropdown in order to use Salesforce CRM.

Table 105: Salesforce Settings

CRM System	Select a CRM system from the Drop down, two CRM systems are available: Salesforce and SugarCRM.
Add Unknown Number	Add the new number to this module if it can't be found in the selected module.
Contact Lookups	Select from the "Available" list of lookups and press oto select where the UCM can perform the lookups on the CRM tables, Leads, Accounts, and Contacts.

Once settings on admin access are configured:

- Click on Save and Apply Changes
- Logout from admin access.
- Login to the UCM as user and navigate under "User Portal -> Value-added Feature -> CRM User Settings".

Click on "Enable CRM" and enter the username, password and $Security\ Token$ associated with the CRM

account then click on Save and Apply Changes . The status will change from "Logged Out" to "Logged In".

User can start then using Salesforce CRM features.





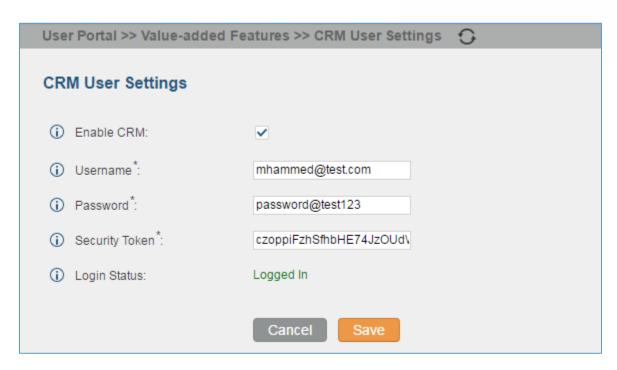


Figure 201: Salesforce User Settings

After calling the outbound number (0655443322). The CRM will automatically record the new number to Contacts





STATUS AND REPORTING

PBX Status

The UCM6200 monitors the status for Trunks, Extensions, Queues, Conference Rooms, Interfaces and Parking lot. It presents administrators the real-time status in different sections under web GUI->**Status**->**PBX Status**.

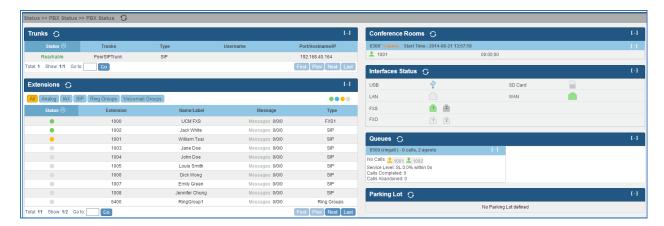


Figure 202: Status->PBX Status

Trunks

Users could see all the configured trunk status in this section.


 


Figure 203: Trunk Status

Table 106: Trunk Status





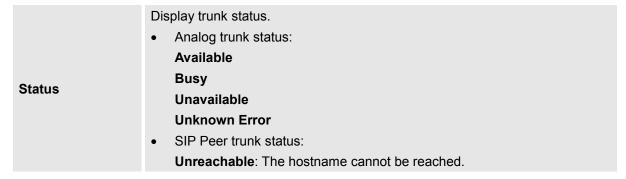

	 Unmonitored: QUALIFY feature is not turned on to be monitored. Reachable: The hostname can be reached. SIP Register trunk status: Registered Unrecognized Trunk
Trunks	Display trunk name
Туре	Display trunk Type: • Analog • SIP • IAX
Username	Display username for this trunk.
Port/Hostname/IP	Display Port for analog trunk, or Hostname/IP for VoIP (SIP/IAX) trunk.

Other operations are also available in trunk status section:

- Click on "Trunks", the web page will redirect to trunk configuration page which can also be accessed via web GUI->PBX->Basic/Call Routes->Analog Trunks.
- Click on to refresh the trunk status.
- Click on [+] to expand the status detail table.
- Click on [] to hide the status detail table.

Extensions

Extensions in this section will be automatically sorted based on their status: idle, ringing, talking or unavailable, and display them accordingly on the web UI status section.



Figure 204: Extension Status





Table 107: Extension Status

Status	Display extension number (including feature code). The color indicator has the following definitions. Green: Free Blue: Ringing Yellow: In Use Grey: Unavailable
Extension	Display the extension number.
Name/Label	First name and last name of the extension.
Message	Display message status for the extension. Example: 2/4/1 Description: There are 2 urgent messages, 4 messages in total and 1 message that has been already read.
Туре	Displays extension type. SIP User IAX User Analog User Ring Groups Voicemail Groups

Other operations are also available in extension status section:

- Click on "Extensions", the web page will redirect to extension configuration page which can also be accessed via web GUI->PBX->Basic/Call Routes->Extensions.
- Click on to refresh the extension status.
- Click on one of the tabs

 All Analog IAX SIP Ring Groups Voicemail Groups to display the corresponding extensions accordingly.
- Click on [+] to expand the status detail table.
- Click on [] to hide the status detail table.

Queues

Users could see all the configured call queue status in this section. The following figure shows the call queue 6500 being in used.



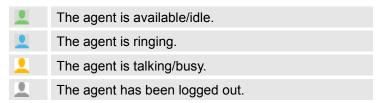




Figure 205: Queue Status

The current call status (caller ID, duration), agent status, service level, calls summary (completed/abandoned) are shown for the call queue. The agent status is defined as below.

Table 108: Agent Status



On the UCM6200, **Service Level** is defined as the percentage of high-quality calls over all calls in the call queue, where high-quality call means calls answered within 10 seconds.

Other operations are also available in queue status section:

- Click on "Queues", the web page will redirect to call queue configuration page which can also be accessed via web GUI->PBX->Call Features->Call Queue.
- Click on to refresh the call queue status.
- Click on [+] to expand the call queue detail.
- Click on [] to hide the call queue detail.

Conference Rooms

Users could see all the conference room status in this section. It shows all the configured conference rooms, current users, call duration for each user and conference call.



Figure 206: Conference Room Status





Other operations are also available in conference room status section:

- Click on "Conference Rooms", the web page will redirect to conference room configuration page which can also be accessed via web GUI->PBX->Call Features->Conference.
- Click on to refresh the conference room status.
- Click on [+] to expand the conference room details.
- Click on [] to hide the conference room details.

Interfaces Status

This section displays interface/port connection status on the UCM6200. The following example shows the interface status for UCM6204 with USB, WAN port, FXS1, FXS2 and FXO1 connected.




Figure 207: UCM6204 Interfaces Status

Table 109: Interface Status Indicators







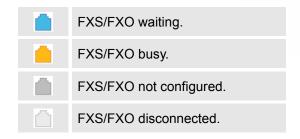

Other operations are also available in interface status section:

- Click on "Interfaces Status", the web page will redirect to ports configuration page which can also be accessed via web GUI->PBX->Internal Options->Ports Config.
- Click on O to refresh the interface status.
- Click on [+] to expand the interface details.
- Click on [] to hide the interface details.

Parking Lot

The UCM6200 supports call park using feature code. When there is call being parked, this section will display the parking lot status.

 


Figure 208: Parking Lot Status

Table 110: Parking Lot Status

Caller ID	Display the caller ID who parks the call.
Channel	Display channel for the call park.
Extension	Display the parking lot number where the call is parked/retrieved.
Timeout	Display timeout (in seconds) for the parked call. The status page will
Timeout	dynamically update this timer from 120 seconds (default) to 0. When the timer reaches 0, the caller who parks the call will be called back.

Other operations are also available in parking lot status section:

- Click on "Parking Lot", the web page will redirect to feature codes page which can also be accessed via web GUI->PBX->Internal Options->Feature Codes.
- Click on to refresh the parking lot status.





- Click on [+] to expand the parking lot details.
- Click on [] to hide the parking details.

System Status

The UCM6200 system status can be accessed via Web GUI->Status->System Status, which displays the following system information.

- General
- Network
- Storage Usage
- Resource Usage

General

Under Web GUI->**Status->System Status->General**, users could check the hardware and software information for the UCM6200. Please see details in the following table.

Table 111: System Status->General

Status ->System Status -> General	
Model	Product model.
Part Number	Product part number.
System Time	Current system time. The current system time is also available on the upper right of each web page.
Up Time	System up time since the last reboot.
Boot	Boot version.
Core	Core version.
Base	Base version.
Program	Program version. This is the main software release version.
Recovery	Recovery version.

Network

Under Web GUI->Status->System Status->Network, users could check the network information for the UCM6200. Please see details in the following table.





Table 112: System Status->Network

Status -> System Status -> Network	
MAC Address	Global unique ID of device, in HEX format. The MAC address can be found on the label coming with original box and on the label located on the bottom of the device.
IP Address	IP address.
Gateway	Default gateway address.
Subnet Mask	Subnet mask address.
DNS Server	DNS Server address.

Storage Usage

Users could access the storage usage information from web UI->Status->System Status->Storage Usage. It shows the available and used space for Space Usage and Inode Usage.

Space Usage includes:

- Configuration partition
 This partition contains PBX system configuration files and service configuration files.
- Data partition
 Voicemail, recording files, IVR file, Music on Hold files and etc.
- USB disk
 USB disk will display if connected.
- SD Card
 SD Card will display if connected.

Inode Usage includes:

- Configuration partition
- Data partition

Note: Inode is the pointer used for file reference in the system. The system usually has limited resources of pointers





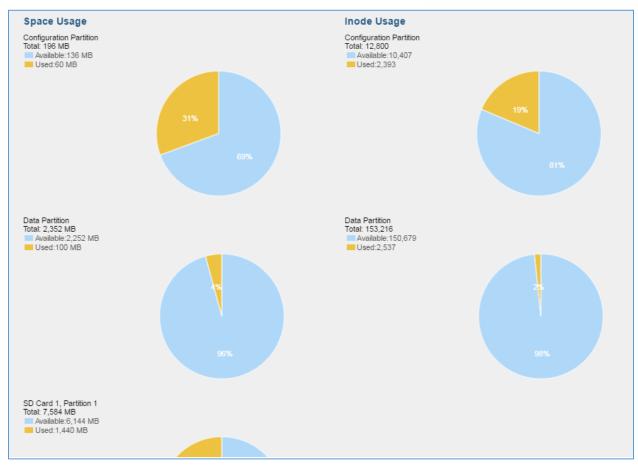


Figure 209: System Status->Storage Usage

Resource Usage

When configuring and managing the UCM6200, users could access resource usage information to estimate the current usage and allocate the resources accordingly. Under web UI->Status->System Status->Resource Usage, the current CPU usage and Memory usage are shown in the pie chart.

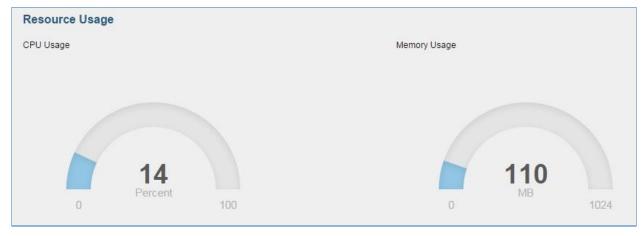


Figure 210: System Status->Resource Usage





System Events

The UCM6200 can monitor important system events, log the alerts and send Email notifications to the system administrator.

Alert Events List

The system alert events list can be found under Web GUI->Status->System Events->Alert Events List. The following event are currently supported on the UCM6200 which will have alert and/or Email generated if occurred:

Disk Usage

External Disk Usage

Modify Admin Password

Memory Usage

System Reboot

System Update

System Crash

Register SIP Failed

Register SIP Trunk Failed

Restore Config

User Login Success

User Login Failed

SIP Internal Call Failure

SIP Outgoing Call through Trunk Failure

Fail2ban Blocking

SIP Lost Registration

SIP Peer Trunk Status



Click on
to configure the parameters for each event. See examples below.

1. Disk Usage.

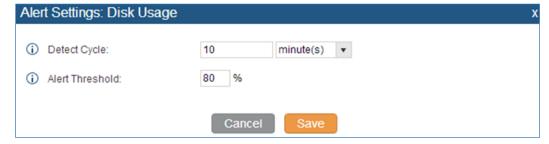


Figure 211: System Events->Alert Events Lists: Disk Usage





- **Detect Cycle**: The UCM6200 will perform the internal disk usage detection based on this cycle. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.
- Alert Threshold: If the detected value exceeds the threshold (in percentage), the UCM6200 system will send the alert.

2. External Disk Usage

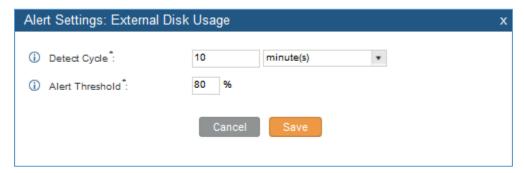


Figure 212: System Events->Alert Events Lists: External Disk Usage

- **Detect Cycle**: The UCM6200 will perform the External disk usage detection based on this cycle. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.
- Alert Threshold: If the detected value exceeds the threshold (in percentage), the UCM6200 system will send the alert.

3. Memory Usage

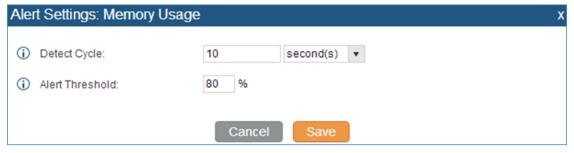


Figure 213: System Events->Alert Events Lists: Memory Usage

- **Detect Cycle**: The UCM6200 will perform the memory usage detection based on this cycle. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.
- Alert Threshold: If the detected value exceeds the threshold (in percentage), the UCM6200 system will send the alert.
- 4. System Reboot







Figure 214: System Events->Alert Events Lists: System Reboot

• **Detect Cycle**: The UCM6200 will check the system reboot based on this cycle. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.

5. System Crash



Figure 215: System Events->Alert Events Lists: System Crash

• **Detect Cycle**: The UCM will detect the event at each cycle based on the specified time. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.

Click on the switch on to turn on/off the alert and Email notification for the event. Users could also select the checkbox for each event and then click on button "Alert On", "Alert Off", "Email Notification On", "Email Notification Off" to control the alert and Email notification configuration.

Alert Log

Under Web GUI->**Status->System Events->Alert Log**, system messages from triggered system events are listed as alert logs. The following screenshot shows system crash alert logs.





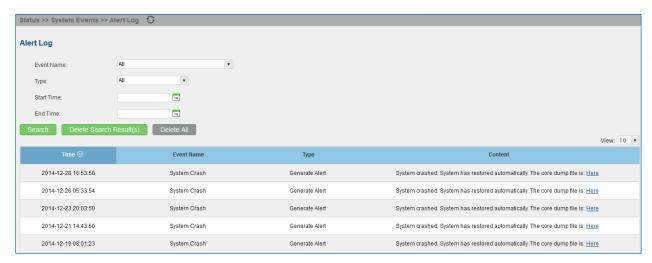


Figure 216: System Events->Alert Log

User could also filter alert logs by selecting a certain event category, type of alert log, and/or specifying a certain time period. The matching results will be displayed after clicking on Search. Alert logs are classified into two types by the system:

- 1. **Generate Alert:** Generated when alert events happen, for example, alert logs for disk usage exceeding the alert threshold
- Restore to Normal: Generated when alert events being cleared, for example, logs for disk usage dropping back below the alert threshold.

User could filter out alert logs of "Generate Alert" or "Restore to Normal" by specifying the type according to need. The following figure shows an example of filtering out alert logs of type of "Restore to Normal".

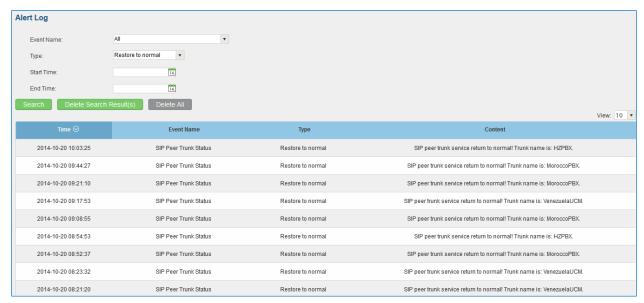


Figure 217: Filter for Alert Log





Alert Contact

Users could add administrator's Email address under Web GUI->Status->System Events->Alert Contact to send the alert notification to. Up to 10 Email addresses can be added.

CDR

CDR (Call Detail Record) is a data record generated by the PBX that contains attributes specific to a single instance of phone call handled by the PBX. It has several data fields to provide detailed description for the call, such as phone number of the calling party, phone number of the receiving party, start time, call duration, and etc.

On the UCM6200, the CDR can be accessed under web UI->Status->CDR->CDR. Users could filter the call report by specifying the date range and criteria, depending on how the users would like to include the logs to the report. Click on "Search" button to display the generated report.

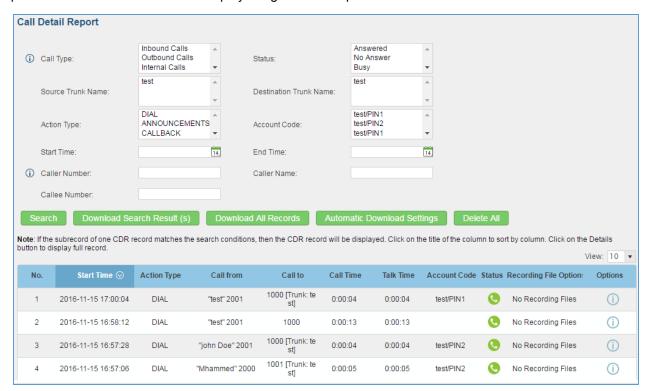


Figure 218: CDR Filter

Table 113: CDR Filter Criteria

Call Type

Groups the following:

- **Inbound calls**: Inbound calls are calls originated from a non-internal source (like a VoIP trunk) and sent to an internal extension.
- **Outbound calls**: Outbound calls are calls sent to a non-internal source (like a VoIP trunk) from an internal extension.





Status	 Internal calls: Internal calls are calls from one internal extension to another extension, which are not sent over a trunk. External calls: External calls are calls sent from one trunk to another trunk, which are not sent to any internal extension. Filter with the call status, the available statuses are the following: Answered No Answer Busy Failed
Source Trunk Name	Select source trunk(s) and the CDR of calls going through inbound the trunk(s) will be filtered out.
Destination Trunk Name	Select destination trunk(s) and the CDR of calls going outbound through the trunk(s) will be filtered out.
Action Type	Filter calls using the Action Type, the following actions are available: Dial Announcements Callback Call Forward Conference Disa Fax Follow Me VVR Page Parked Call Queue Ring Group Transfer VFax VM VMG Wakeup
Account Code	Select the account Code to filter with. If pin group CDR is enabled, the call with pin group information will be displayed as part of the CDR under Account Code Field.
Start Time	Specify the start time to filter the CDR report. Click on the calendar icon on the right and the calendar will show for users to select the exact date and time.
End Time	Specify the end time to filter the CDR report. Click on the calendar icon on the right and the calendar will show for users to select the exact date and time.
Caller Number	Enter the caller number to filter the CDR report. CDR with the matching caller number will be filtered out.





	User could specify a particular caller number or enter a pattern. '.' matches zero or more characters, only appears in the end. 'X' matches any digit from 0 to 9, case-insensitive, repeatable, only appears in the end.
	For example: 3XXX: It will filter out CDR that having caller number with leading digit 3 and of 4 digits' length. 3.: It will filter out CDR that having caller number with leading digit 3 and of any length.
Caller Name	Enter the caller name to filter the CDR report. CDR with the matching caller name will be filtered out.
Callee Number	Enter the callee number to filter the CDR report. CDR with the matching callee number will be filtered out.

The call report will display as the following figure shows.



Figure 219: Call Report

The CDR report has the following data fields:

Start Time

Format: 2016-09-03 00:06:16

Call Type

Example:

IVR

DIAL

WAKEUP

Call From

Example format:

"John Doe" 2000

Call To

Example format:

2002





Call Time

Format: 0:00:02

Talk Time

Format: 0:00:00

Account Code

Example format: Grandstream/Test

Status

Answered, Busy, No answer or Failed.

Users could perform the following operations on the call report.

· Sort by "Start Time"

• Click on the header of the column to sort the report by "Start Time". Clicking on "Start Time" again will reverse the order.

Download Searched Results

Click on "Download Search Result(s)" to export the records filtered out to a .csv file.

• Download All Records

Click on "Download All Records" to export all the records to a .csv file.

Delete All

On the bottom of the page, click on "Delete All" button to remove all the call report information.

Play/Download/Delete Recording File (per entry)

If the entry has audio recording file for the call, the three icons on the most right column will be activated for users to select. In the following picture, the second entry has audio recording file for the call.

Click on Delay the recording file; click on to download the recording file in .wav format; click on

to delete the recording file (the call record entry will not be deleted).

 


Figure 220: Call Report Entry with Audio Recording File





Automatic Download CDR Records

User could configure the UCM6200 to automatically download the CDR records and send the records to multiple Email recipients in a specific hour. Click on "Automatic Download Settings", and configure the parameters in the dialog below.

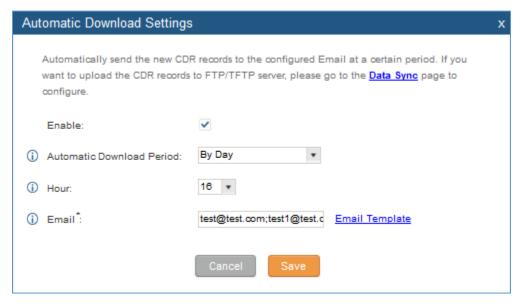


Figure 221: Automatic Download Settings

To receive CDR record automatically from Email, check "Enable" and select a time period "By Day" "By Week" or "By Month", select Hour of the day as well for the automatic download period. Make sure you have entered an Email or multiple email addresses where to receive the CDR records.

CDR Improvement

Starting from UCM6200 firmware 1.0.10.x, transferred call will no longer be displayed as a separate call entry in CDR. It will display within call record in the same entry. CDR new features can be found under **web UI-> Status->CDR->CDR**. The user can click on the option icon for a specific call log entry to view details about this entry, such as premier caller and transferred call information.





 


Figure 222: CDR Report



Figure 223: Detailed CDR Information

Downloaded CDR File

The downloaded CDR (.csv file) has different format from the web UI CDR. Here are some descriptions.

• Caller number, Callee number

"Caller number": the caller ID.
"Callee number": the callee ID.

If the "Source Channel" contains "DAHDI", this means the call is from FXO/PSTN line.

 


Figure 224: Downloaded CDR File Sample

Context

There are different context values that might show up in the downloaded CDR file. The actual value can vary case by case. Here are some sample values and their descriptions.

from-internal: internal extension makes outbound calls.

ext-did-XXXXX: inbound calls. It starts with "ext-did", and "XXXXX" content varies case by case, which also relate to the order when the trunk is created.

ext-local: internal calls between local extensions.

Source Channel, Dest Channel

Sample 1:

caller number	callee number	context	calerid	source channel	dest channel	disposition
2007	31100	from-internal	"" <2007>	PJSIP/2007-0000014	DAHDI/1-1	ANSWERED

Figure 225: Downloaded CDR File Sample - Source Channel and Dest Channel 1





DAHDI means it is an analog call, FXO or FXS.

For UCM6202, DAHDI/(1-2) are FXO ports, and DAHDI(3-4) are FXS ports.

For UCM6204, DAHDI/(1-4) are FXO ports, and DAHDI(5-6) are FXS ports.

For UCM6208, DAHDI/(1-8) are FXO ports, and DAHDI(9-10) are FXS ports.

Sample 2:

caller number	callee number	context	calerid	source channel	dest channel	lastapp
2009	1100	from-internal	"John Doe" <2009>	PJSIP/2009-00000015	PJSIP/trunk_1-00000016	Dial

Figure 226: Downloaded CDR File Sample - Source Channel and Dest Channel 2

"SIP" means it's a SIP call. There are three possible format:

- (a) **PJSIP/NUM-XXXXXX**, where NUM is the local SIP extension number. The last XXXXX is a random string and can be ignored.
- (c) **PJSIP/trunk_X/NUM,** where trunk_X is the internal trunk name, and NUM is the number to dial out through the trunk.
- (c) **PJSIP/trunk_X-XXXXXX**, where trunk_X is the internal trunk name and it is an inbound call from this trunk. The last XXXXX is a random string and can be ignored.

There are some other possible values, but these values are almost the application name which are used by the dialplan.

IAX2/NUM-XXXXXXX: it means this is an IAX call.

Local/@from-internal-XXXXX: it is used internally to do some special feature procedure. We can simply ignore it.

Hangup: the call is hung up from the dialplan. This indicates there are some errors or it has run into abnormal cases.

Playback: play some prompts to you, such as 183 response or run into an IVR.

ReadExten: collect numbers from user. It may occur when you input PIN codes or run into DISA

Statistics

CDR Statistics is an additional feature on the UCM6200 which provides users a visual overview of the call report across the time frame. Users can filter with different criteria to generate the statistics chart.

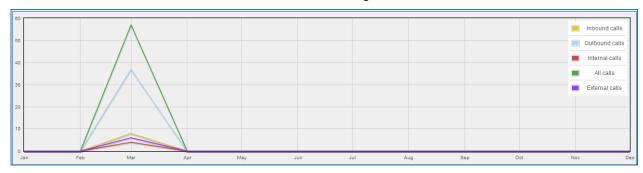


Figure 227: CDR Statistics





Table 114: CDR Statistics Filter Criteria

Trunk Type	Select one of the following trunk type.AllSIP Calls
	PSTN Calls
Call Type	Select one or more in the following checkboxes. Inbound calls Outbound calls Internal calls External calls All calls
Time Range	 By month (of the selected year). By week (of the selected year). By day (of the specified month for the year). By hour (of the specified date). By range. For example, 2016-01 To 2016-03.

Recording Files

This page lists all the recording files recorded by "Auto Record" per extension/ring group/call queue/trunk, or via feature code "Audio Mix Record". If external storage device is plugged in, for example, SD card or USB drive, the files are stored on the external storage. Otherwise, internal storage will be used on the UCM6200.



Figure 228: CDR->Recording Files

- Click on "Delete Selected Recording Files" to delete the recording files.
- Click on "Delete All Recording Files" to delete all recording files.
- Click on to download the recording file in .wav format.
- Click on to delete the recording file.
- To sort the recording file, click on the title "Caller", "Callee" or "Call Time" for the corresponding column. Click on the title again can switch the sorting mode between ascending order or descending order.





API Configuration

The UCM6200 supports third party billing interface API for external billing software to access CDR and call recordings on the PBX. The API uses HTTPS to request the CDR data and call recording data matching given parameters as configured on the third-party application.

Before accessing the API, the administrators need enable API and configure the access/authentication information on the UCM6200 first. The API configuration parameters are listed in the table below.

Table 115: API Configuration Files

Enable	Enable/Disable API. The default setting is disabled.
TLS Bind Address	Configure the IP address for TLS server to bind to. "0.0.0.0" means binding to all interfaces. The port number is optional and the default port number is 8443. The IP address must match the common name (host name) in the certificate so that the TLS socket won't bind to multiple IP addresses. The default setting is 0.0.0.0:8443.
TLS Private Key	Upload TLS private key. The size of the key file must be under 2MB. This file will be renamed as 'private.pem' automatically.
TLS Cert	Upload TLS cert. The size of the certificate must be under 2MB. This is the certificate file (*.pem format only) for TLS connection. This file will be renamed as "certificate.pem" automatically. It contains private key for the client and signed certificate for the server.
Username	Configure the Username for API Authentication.
Password	Configure the Password for API Authentication.
Permitted	Specify a list of IP addresses permitted by API. This creates an AIP-specific access control list. Multiple entries are allowed. For example, "192.168.5.20/255.255.255.255" denies access from all IP addresses except 192.168.5.20. The default setting is blank, meaning all IPs will be denied. Users must set permitted IP address before connecting to the API.

For more details on CDR API (Access to Call Detail Records) and REC API (Access to Call Recording Files), please refer the document in the link here:

http://www.grandstream.com/sites/default/files/Resources/ucm61xx cdr rec api guide.pdf





UPGRADING AND MAINTENANCE

Upgrading

The UCM6200 can be upgraded to a new firmware version remotely or locally. This section describes how to upgrade your UCM6200 via network or local upload.

Upgrading Via Network

The UCM6200 can be upgraded via TFTP/HTTPS by configuring the URL/IP Address for the TFTP/HTTPS server and selecting a download method. Configure a valid URL for TFTP, HTTP or HTTPS; the server name can be FQDN or IP address.

Examples of valid URLs:

firmware.grandstream.com/BETA

The upgrading configuration can be accessed via Web GUI->Maintenance->Upgrade.

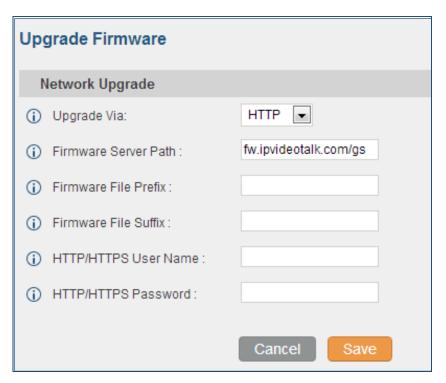


Figure 229: Network Upgrade





Table 116: Network Upgrade Configuration

Upgrade Via	Allow users to choose the firmware upgrade method: TFTP, HTTP or HTTPS.
Firmware Server Path	Define the server path for the firmware server.
Firmware File Prefix	If configured, only the firmware with the matching encrypted prefix will be downloaded and flashed into the UCM6200.
Firmware File Suffix	If configured, only the firmware with the matching encrypted postfix will be downloaded and flashed into the UCM6200.
HTTP/HTTPS User Name	The user name for the HTTP/HTTPS server.
HTTP/HTTPS Password	The password for the HTTP/HTTPS server.

Please follow the steps below to upgrade the firmware remotely.

- Enter the firmware server path under web UI->Maintenance->Upgrade.
- Click on "Save". Then reboot the device to start the upgrading process.
- Please be patient during the upgrading process. Once done, a reboot message will be displayed in the LCD.
- Manually reboot the UCM6200 when it's appropriate to avoid immediate service interruption. After it boots
 up, log in the web GUI to check the firmware version.

Upgrading Via Local Upload

If there is no HTTP/TFTP server, users could also upload the firmware to the UCM6200 directly via Web GUI. Please follow the steps below to upload firmware locally.

- Download the latest UCM6200 firmware file from the following link and save it in your PC. http://www.grandstream.com/support/firmware
- Log in the Web GUI as administrator in the PC.
- Go to Web GUI->Maintenance->Upgrade, upload the firmware file by clicking on and select the firmware file from your PC. The default firmware file name is ucm6200fw.bin



Figure 230: Local Upgrade

Click on to start upgrading.





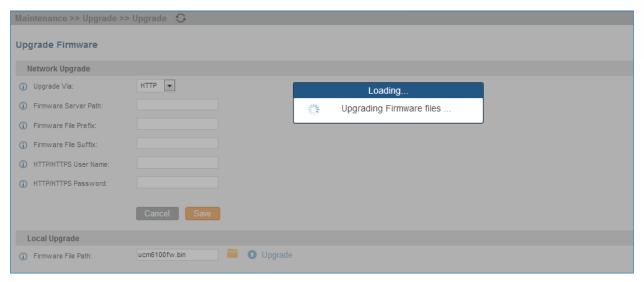


Figure 231: Upgrading Firmware Files

Wait until the upgrading process is successful and a window will be popped up in the Web GUI.

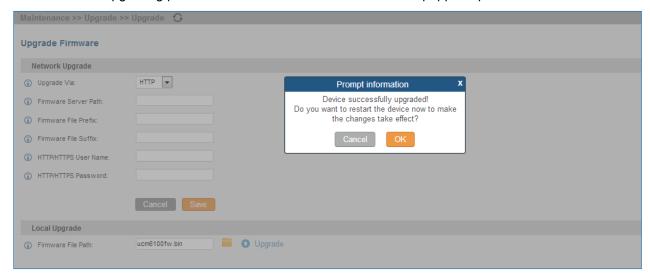


Figure 232: Reboot UCM6200

Click on "OK" to reboot the UCM6200 and check the firmware version after it boots up.



- Please do not interrupt or power cycle the UCM6200 during upgrading process.
- The firmware file name allows the use of the following special characters: "_@#*~&".





No Local Firmware Servers

Service providers should maintain their own firmware upgrade servers. For users who do not have TFTP/HTTP/HTTPS server, some free windows version TFTP servers are available for download from http://tftpd32.jounin.net

Please check our website at http://www.grandstream.com/support/firmware for latest firmware.

Instructions for local firmware upgrade via TFTP:

- 1. Unzip the firmware files and put all of them in the root directory of the TFTP server;
- 2. Connect the PC running the TFTP server and the UCM6200 to the same LAN segment;
- 3. Launch the TFTP server and go to the File menu->Configure->Security to change the TFTP server's default setting from "Receive Only" to "Transmit Only" for the firmware upgrade;
- 4. Start the TFTP server and configure the TFTP server in the UCM6200 web configuration interface;
- 5. Configure the Firmware Server Path to the IP address of the PC;
- 6. Update the changes and reboot the UCM6200.

End users can also choose to download a free HTTP server from http://httpd.apache.org/ or use Microsoft IIS web server.

Backup

The UCM6200 configuration can be backed up locally or via network. The backup file will be used to restore the configuration on UCM6200 when necessary.

Backup/Restore

Users could backup the UCM6200 configurations for restore purpose under Web GUI->Maintenance->Backup->Local Backup.

Click on Create New Backup to create a new backup file. Then the following dialog will show.





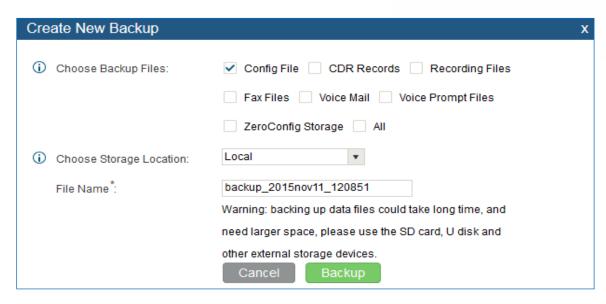


Figure 233: Create New Backup

- 1. Choose the type(s) of files to be included in the backup.
- 2. Choose where to store the backup file: USB Disk, SD Card or Local.
- 3. Name the backup file.
- 4. Click on "Backup" to start backup.

Once the backup is done, the list of the backups will be displayed with date and time in the web page. Users can

download $\stackrel{1}{=}$, restore $\stackrel{1}{=}$, or delete $\stackrel{1}{=}$ it from the UCM6200 internal storage or the external device.

Click on Upload Backup File to upload backup file from the local device to UCM6200. The uploaded backup file will also be displayed in the web page and can be used to restore the UCM6200.

It is also possible to load backup files from UCM6100 to UCM6200 and vice versa.

Please make sure the FXO port settings, total number of extensions and total number of conference rooms are compactable before restore to another UCM model. Otherwise it will prompt a warning and stop the restore process as shown below:

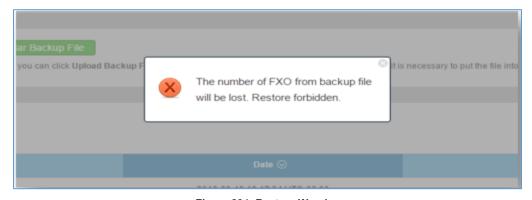


Figure 234: Restore Warning







Figure 235: Backup / Restore

Regular Backup File option allows UCM to perform automatically backup on the user specified time. Regular backup file can only be stored in USB / SD card / SFTP server. User is allowed to set backup time from 0-23 and how frequent the backup will be performed.

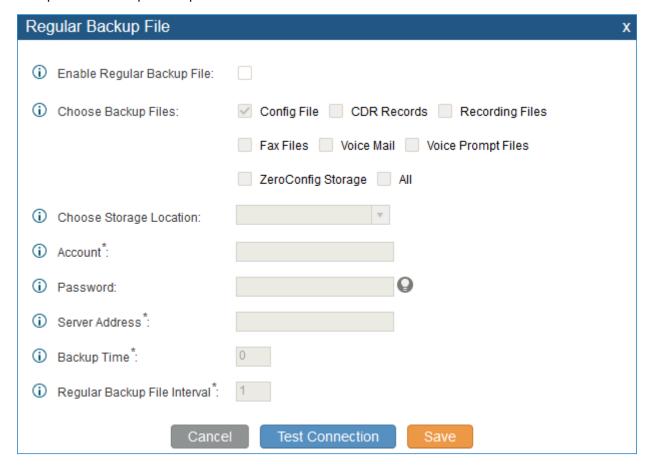


Figure 236: Local Backup





Data Sync

Besides local backup, users could backup the voice records/voice mails/CDR/FAX in a daily basis to a remote server via SFTP protocol automatically under Web GUI->Maintenance->Backup->Data Sync.

The client account supports special characters such as @ or ".". This change allows user to use email address as SFTP accounts. It allows users as well to specify the destination directory on SFTP server for backup file. If the directory doesn't exist on the destination, UCM6200 will create the directory automatically

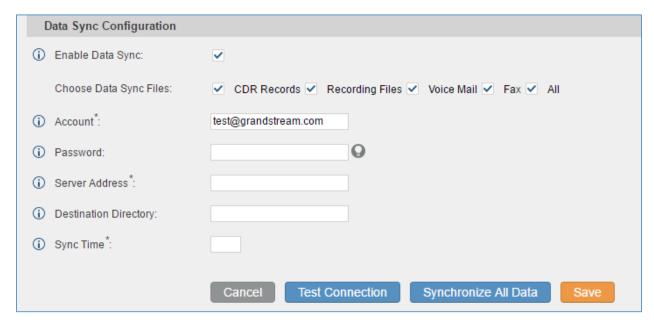


Figure 237: Data Sync

Table 117: Data Sync Configuration

Enable Data Sync	Enable the auto data sync function. The default setting is "No".
Account	Enter the Account name on the SFTP backup server.
Password	Enter the Password associate with the Account on the SFTP backup server.
Server Address	Enter the SFTP server address.
Destination Directory	Specify the directory in SFTP server to keep the backup file. Format: 'xxx/xxx/xxx', If this directory does not exist, UCM will create this directory automatically.
Sync Time	Enter 0-23 to specify the backup hour of the day.

Before saving the configuration, users could click on "Test Connection". The UCM6200 will then try connecting the server to make sure the server is up and accessible for the UCM6200. Save the changes and all the backup logs will be listed on the web page. After data sync is configured, users could also manually synchronize all data

by clicking on Synchronize All Data instead of waiting for the backup time interval to come.





Restore Configuration from Backup File

To restore the configuration on the UCM6200 from a backup file, users could go to Web GUI->Maintenance->Backup->Local Backup.

- A list of previous configuration backups is displayed on the web page. Users could click on of the desired backup file and it will be restored to the UCM6200.
- If users have other backup files on PC to restore on the UCM6200, click on "Upload Backup File" first and select it from local PC to upload on the UCM6200. Once the uploading is done, this backup file will be displayed in the list of previous configuration backups for restore purpose. Click on 🔃 to restore from the backup file.



Figure 238: Restore UCM6200 from Backup File



- The uploaded backup file must be a tar file with no special characters like *,!,#,@,&,\$,%,^,(,),/,\space in the file name.
- The uploaded back file size must be under 10MB.

Cleaner

Cleaner

Users could configure to clean the Call Detail Report/Voice Records/Voice Mails/FAX automatically under Web GUI->Maintenance->Cleaner->Cleaner.





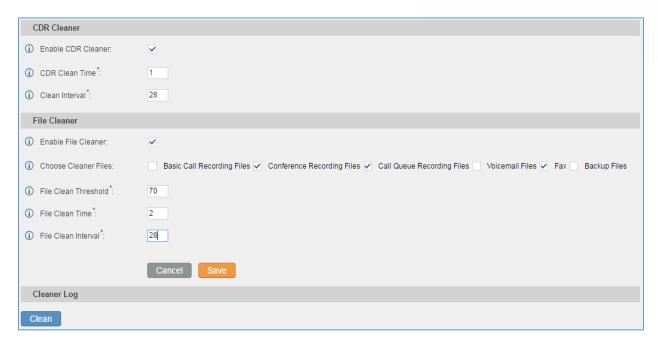


Figure 239: Cleaner

Table 118: Cleaner Configuration

Enable CDR Cleaner	Enable the CDR Cleaner function.
CDR Clean Time	Enter 0-23 to specify the hour of the day to clean up CDR.
Clean Interval	Enter 1-30 to specify the day of the month to clean up CDR.
Enable File Cleaner	Enter the Voice Records Cleaner function.
Choose Cleaner File	Select the files for system automatic clean.
	Basic Call Recording Files.
	Conference Recording Files.
	Call Queue Recording Files.
	Voicemail Files.
	• Fax
	Backup Files.
File Clean Threshold	Specify the threshold of local storage usage from 0 to 99 (in percentage).
File Clean Time	Enter 0-23 to specify the hour of the day to clean up the files.
File Clean Interval	Enter 1-30 to specify the day of the month to clean up the files.

All the cleaner logs will be listed on the bottom of the page.







Cleaner will delete data based on Recording Storage selection. If **USB Disk** is selected, Cleaner will only clean data in USB and local data will leave untouched. If **Enable auto change** is selected and USB disk is connected, Cleaner will only delete data in USB drive. Recordings Storage function can be found under web **UI-> Settings-> Recordings Storage-> Recordings Storage**.

USB/SD Card Files Cleanup

Users could configure to clean the Call Detail Report/Voice Records/Voice Mails/FAX automatically under Web GUI->Maintenance->Cleaner->USB / SD Card Files Cleanup.

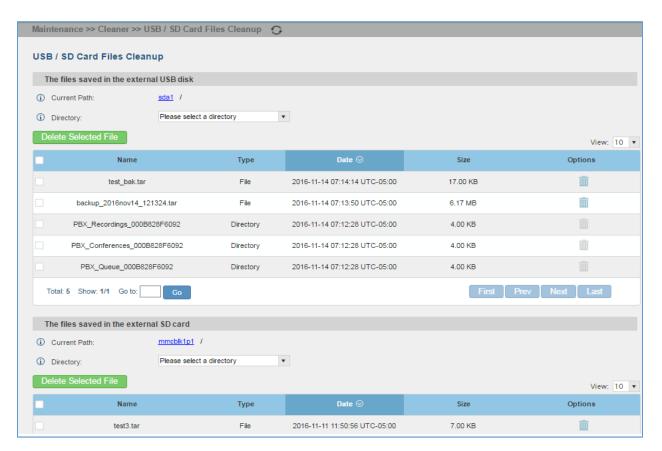


Figure 240: USB/SD Card Files Cleanup

Table 119: USB/SD Card Files Cleanup

Current Path	Displays the current path.
Directory	Select the directory user want to clean.
Delete Selected File	Select multiple entries to delete from USB or SD
	card.





Reset and Reboot

Users could perform reset and reboot under Web GUI->Maintenance->Reset and Reboot.

To factory reset the device, select the mode type first. There are two different types for reset.

User Data

All the data including voicemail, recordings, IVR Prompt, Music on Hold, CDR and backup files will be cleared.

• All

All the configurations and data will be reset to factory default.

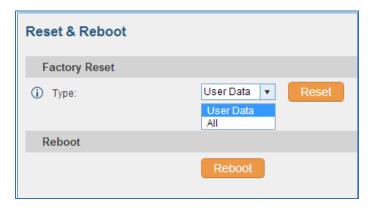


Figure 241: Reset and Reboot

Syslog

On the UCM6200, users could dump the syslog information to a remote server under Web GUI->**Maintenance**->**Syslog**. Enter the syslog server hostname or IP address and select the module/level for the syslog information.

The default syslog level for all modules is "error", which is recommended in your UCM6200 settings because it can be helpful to locate the issues when errors happen.

Some typical modules for UCM6200 functions are as follows and users can turn on "notic" and "verb" levels besides "error" level.

pbx: This module is related to general PBX functions.

chan_sip: This module is related to SIP calls.

chan_dahdi: This module is related to analog calls (FXO/FXS).

app_meetme: This module is related to conference bridge.





.....



Syslog is usually for debugging and troubleshooting purpose. Turning on all levels for all syslog modules is not recommended for daily usage. Too many syslog print might cause traffic and affect system performance.

Troubleshooting

On the UCM6200, users could capture traces, ping remote host and traceroute remote host for troubleshooting purpose under Web GUI->Maintenance->Troubleshooting.

Ethernet Capture

The captured trace can be downloaded for analysis. The instructions or result will be displayed in the web GUI output result.

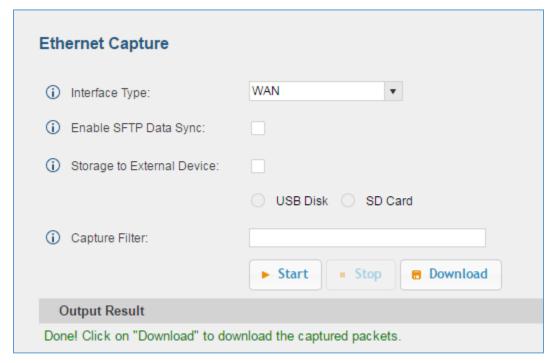


Figure 242: Ethernet Capture
Table 120: Ethernet Capture

Interface Type	Select the network interface to monitor.
Enable SFTP Data Sync	Check this box to save the capture files in the SFTP server. Please
	make sure the configuration of data synchronization works before.





Storage to External Device	Check this box to activate storage of the capture either on the USB or SD Card.
Capture Filter	Enter the filter to obtain the specific types of traffic, such as (host, src, dst, net, proto).
Start	Click to start the trace.
Stop	Click to stop the trace.
Download	Click to download the trace if trace is stored locally.

The output result is in .pcap format. Therefore, users could specify the capture filter as used in general network traffic capture tool (host, src, dst, net, protocol, port, port range) before starting capturing the trace.

IP Ping

Enter the target host in host name or IP address. Then press "Start" button. The output result will dynamically display in the window below.

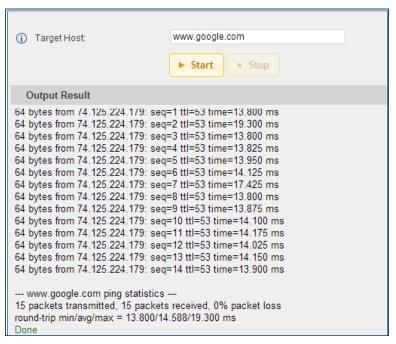


Figure 243: Ping

Traceroute

Enter the target host in host name or IP address. Then press "Start" button. The output result will dynamically display in the window below.





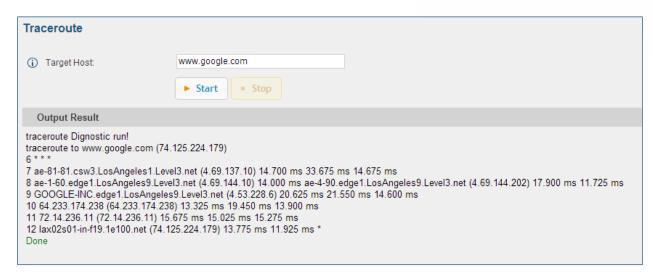


Figure 244: Traceroute

Analog Record Trace

Analog Record Trace

Analog record trace can be used to troubleshoot analog trunk issue, for example, the UCM6200 user has caller ID issue for incoming call from Analog trunk. Users can access analog record trance under web GUI->Maintenance->Troubleshooting ->Analog Record Trace.

Here is the step to capture trace:

- 1. Select FXO or FXS for "Record Ports". If the issue happens on FXO 1, select FXO port 1 to record the trace.
- 2. Select "Record Direction".
- 3. Select "Record File Mode" to separate the record per direction or mix.
- 4. Click on "Start".
- 5. Make a call via the analog port that has the issue.
- 6. Once done, click on "Stop".
- 7. Click on "Download" to download the analog record trace.



Figure 245: Troubleshooting Analog Trunks





- A key Dial-up FXO

Users can directly set a PSTN number on the "**External Extension**" text box to troubleshoot issues related to the analog trunk easily, the following steps shows how to use this feature:

- 1. Configure analog trunk on UCM, including outbound route.
- 2. Enter a reachable external number in "External Extension".
- 3. Press "Start" button. The call will be initiated to the external number.
- 4. Answer and finish the call before pressing "Stop" button.

The trace will be available for analysis to download after output result shows "Done! Click on Download to download the captured packets".

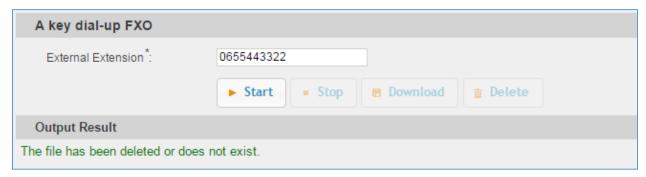


Figure 246: A Key Dial-up FXO

Note: When using a Key Dial-up FXO feature the outbound trunk for the analog trunk need to have internal permission. As well as it should be the trunk with the highest outbound route priority.

After capturing the trace, users can download it for basic analysis. Or you can contact Grandstream Technical support in the following link for further assistance if the issue is not resolved. http://www.grandstream.com/index.php/support

Service Check

Enable Service Check to periodically check UCM6200. Check Cycle is configurable in seconds and the default setting is 60 sec. Check Times is the maximum number of failed checks before restart the UCM6200. The default setting is 3. If there is no response from UCM6200 after 3 attempts (default) to check, current status will be stored and the internal service in UCM6200 will be restarted.



Figure 247: Service Check





Network Status

In UCM6200 web UI->Maintenance->Troubleshooting->Network Status, the users can view active Internet connections. This information can be used to troubleshoot connection issue between UCM6200 and other services.

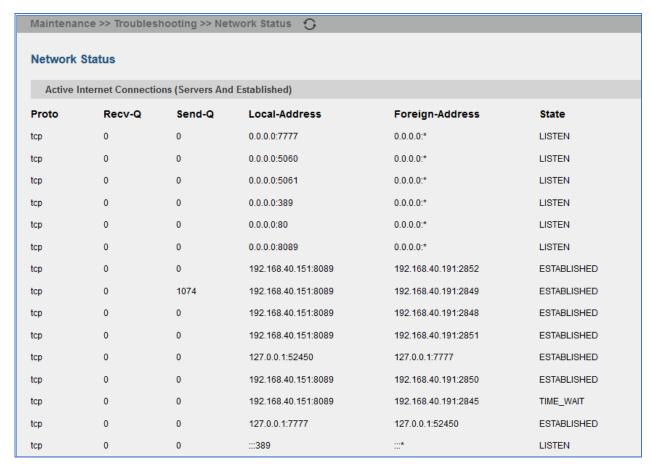


Figure 248: Network Status

Remote Access

SSH Access

SSH switch now is available via web UI and LCD. User can enable or disable SSH access directly from web UI or LCD screen. For web SSH access, please log in UCM6200 web interface and go to **Maintenance->Remote Access->SSH Access**. By default, SSH access is disabled for security concerns. It is highly recommended to only enable SSH access for debugging purpose.





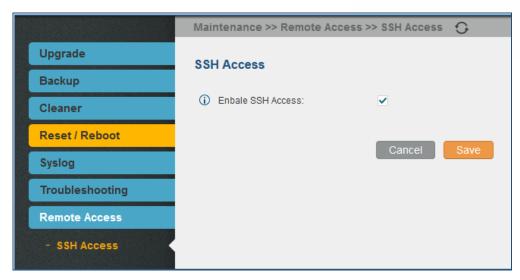


Figure 249: SSH Access





EXPERIENCING THE UCM6200 SERIES IP PBX

Please visit our website: http://www.grandstream.com to receive the most up- to-date updates on firmware releases, additional features, FAQs, documentation and news on new products.

We encourage you to browse our <u>product related documentation</u>, <u>FAQs</u> and <u>User and Developer Forum</u> for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all of your questions. Contact a technical support member or <u>submit a trouble ticket online</u> to receive in-depth support.

Thank you again for purchasing Grandstream UCM6200 series IP PBX appliance, it will be sure to bring convenience and color to both your business and personal life.

* Asterisk is a Registered Trademark of Digium, Inc.

