

## Quick Installation Guide

### Device Line Connection:



Figure 1 ISS MICRO UCR

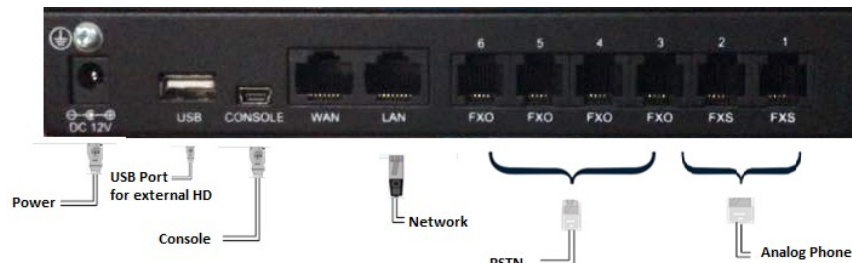


Figure 2 ISS MICRO UCR

### Power Cord Connection

This device adopts a 12V DC 2000mA power supply.

**You'd better use the grounding stud on the rear panel of the device for earthing.**

### WEB Login

Default IP Address: **192.168.2.2 (LAN)**

Default HTTPS port: **:44380 (LAN)**

Launch a web browser and type `https://192.168.2.2:44380` in the address bar and then follow the instructions.

### △ Security Warning

1. As the device will gradually heat up while being used, please maintain good ventilation to prevent sudden failure, ensuring that the ventilation holes are never jammed.
2. It is suggested to put the device in LAN to avoid hacking attacks.

For more information please visit: <https://forum.issabel.org/> & <https://www.issabel.com>