



LED States: Red blinking => bnxgsm driver is loaded  
Red steady => module loaded but not registered  
Green steady => module loaded an registered